JVC

SERVICE MANUAL

COMPACT COMPONET SYSTEM

CA-D761T

PICK UP	OPT-150S
LSI	MN35510

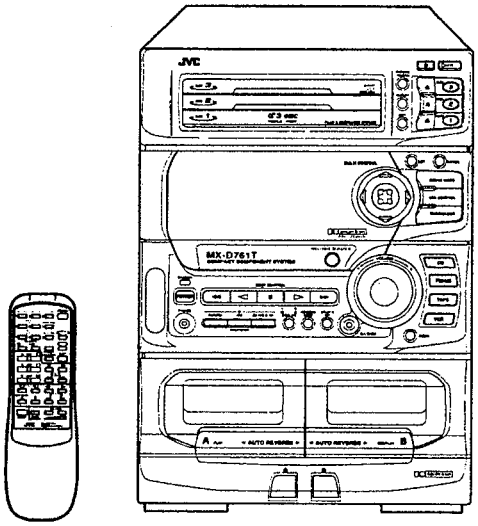

Area Suffix

C ..... Canada
J ..... The U.S.A.

COMPACT disc DIGITAL AUDIO

Contents

Safety Precautions 1-2
Important for Laser Products 1-3
Instruction Book 1-4
Description of Major LSIs 2-1
Internal Connection of FL Display Tube 2-20
Disassembly Procedures 2-22
Adjustment Procedures 2-41
Flow of Functional Operation Until TOC is Read 2-45
Maintenance of Laser Pickup 2-46
Replacement of Laser Pickup 2-46
Block Diagrams 2-47
Schematic Diagrams 2-49
Printed Circuit Boards 2-59
Parts List 3-1

COPYRIGHT © 1997 VICTOR COMPANY OF JAPAN, LTD.

No.20624
Apr.1997

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (⚠) on the Parts List in the Service Manual. The use of a substitute repalcement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage currnet check (Electrical shock hazard testing)
   After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.
   Do not use a line isolation transformer during this check.
   - Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).
   - Alternate check method
     Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500Ω 10 W resistor paralleled by a 0.15 µF AC-type capacitor between an exposed metal part and a known good earth ground.
     Measure the AC voltage across the resistor with the AC voltmeter.
     Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and meausre the AC voltage across the resistor.
     Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

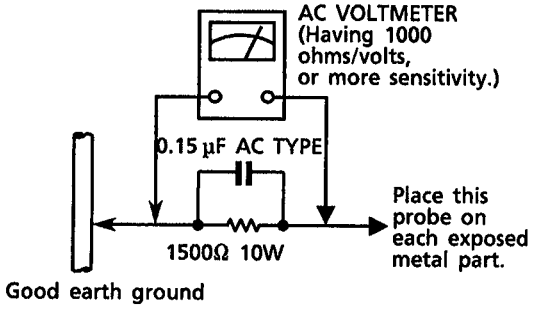

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

Important for Laser Products

1. CLASS 1 LASER PRODUCT
2. DANGER : Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. CAUTION : There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.
4. CAUTION : The compact disc player uses invisible laser radiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.
5. CAUTION : If safety switches malfunction, the laser is able to function.
6. CAUTION : Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

VARNING : Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.

VARO : Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

ADVARSEL : Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

ADVARSEL : Usynlig laserstråling ved åpning, når sikkerhetsbryteren er avslott. unngå utsettelse for stråling.

REPRODUCTION AND POSITION OF LABELS

WARNING LABEL

(Except for the U. S. A.)

DANGER: invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	VARNING: Osynlig laserstråling när denna del är öppnad och spärren är urkoppled. Betrakta ej stålen. (s)	ADVARSEL: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude at funktion. Undgåudsættelse for stråling. (d)	VARO: Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

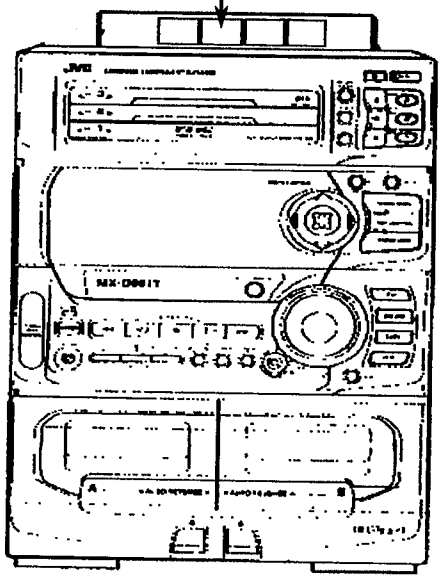

Thank you for purchasing the JVC Compact Component System.
We hope it will be a valued addition to your home, giving you years of enjoyment.
Be sure to read this instruction manual carefully before operating your new stereo system.
Here you will find all the information you need to set up and use the system.
For questions that are not be answered in the manual, please contact your dealer.

Features

Easy operation

Here are some of the things that make your CA-D761T powerful and easy to use.

❑ The controls and operations have been redesigned to make them very easy to use so you can spend your time listening to music.

- With the One Touch Operation feature of JVC's **COMPU PLAY** you can turn on the CA-D761T and start the radio, the Cassette Deck, or the CD Player with a single touch.
- You can use the **MULTI CONTROL** stick to set the CD Player, Tuner, Timer, and Sound Mode operations.

Great sound

❑ To get such great sound from such a compact package the CA-D761T has:

- Built-in **Dolby Pro Logic** and **Dolby 3ch Logic** effects. Combined with the optional center and rear speakers, this allows you to enjoy the dynamic, pulsating sound effects of a cinema.
- Programmed sound mode includes live surround effects **D. CLUB, HALL,** and **STADIUM**. It also includes S.E.A. (Sound Effect Amplifier) effects **ROCK, POP,** and **CLASSIC**. You can also register up to three customized settings.

Triple Tray

❑ CD changer function can operate 3 discs.

- Discs can be changed during play using the **TRIPLE TRAY**.
- Continuous, random or program play of 3 discs.

Three timers

❑ The three timers, **DAILY Timer, REC (Recording) Timer,** and **SLEEP Timer** are extremely easy to set.

- The Displays are large and clear. They are organized so you can tell at a glance what's happening because functions light up as you use them, and blink to tell you they are ready. They provide some important messages like "NO DISC", and other informations.

How This Manual Is Organized

In this manual we have incorporated some special features:

- Basic information that is the same for many different functions is grouped in one place, and not repeated in each procedure. For instance, in the section on playing a CD, we do not repeat the information about setting the volume and the sound conditions, which are discussed in the Using the Amplifier section.
- Name of buttons and controls are written in all capital letters like this: SOUND MODE.
- When we are talking about the Function, rather than the BUTTON or DISPLAY, only the first letter is capitalized.

The manual has a table of contents to help you quickly look up what you want to know.
We've enjoyed making this manual for you, and hope you will use it to enjoy the sound and many features built into your CA-D761T.

IMPORTANT CAUTIONS

1. **Installation of the Unit**
   - Select a place which is level, dry and neither too hot nor too cold. (Between 5°C and 35°C or 41°F and 95°F.)
   - Leave sufficient distance between the Unit and a TV.
   - Do not use the Unit in a place subject to vibrations.
2. **Power cord**
   - Do not handle the power cord with wet hands!
   - Some power (20 watts) is always consumed as long as the power cord is connected to the wall outlet.
   - When unplugging the Unit from the wall outlet, always pull the plug, not the power cord.
3. **Malfunctions, etc.**
   - There are no user serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
   - Do not insert any metallic object into the Unit.

Table of Contents

Features 1
How This Manual Is Organized 1
IMPORTANT CAUTIONS 1

Getting Started 3
Accessories 3
How to Put Batteries in the Remote Control 3
Using the Remote Control 3
Connecting the FM Antenna 4
Connecting the AM Antenna 4
Connecting the Speakers 5
Connecting the Front Speakers 5
Connecting a Center Speaker and Rear Speakers 5
Connecting the SUB WOOFER 6
Connecting a VCR 6
DEMO Mode 7
COMPU PLAY 7

Using the Amplifier 8
Turning the Power On and Off 8
Turning the CA-D761T On 8
Turning the CA-D761T Off 8
Adjusting the Volume 9
FADE MUTING Function 9
Balance Adjustment 9
S.A. Bass Mode 9
Sound Modes 10
Selecting a Sound Mode 10
Customizing a Sound Mode 11
Using D. Club, Hall, and Stadium Surround with Rear Speakers 12
Setting-up Surround 12
Using the Surround 12
Using a VCR 13
Listening to a VCR 13
Recording to a VCR 13

Dolby Surround 14
Preparing the Dolby Surround Processor 15
Getting Ready to Use Dolby Pro Logic 16
Speaker Arrangementse for Dolby Pro Logic 16
Setting-up Dolby Pro Logic 16
Getting Ready to Use Dolby 3 Channel Logic 17
Speaker Arrangements for Dolby 3 Channel Logic 17
Setting-up Dolby 3ch Logic 17
Using the Dolby Surround Processor 18

Using the Tuner 19
One Touch Radio 19
Tuning in a Station 19
Switching between Frequency Bands 19
Selecting a Radio Station 20
Presetting Stations 20
To Change the FM Reception Mode 20

Using the CD Player 21
The Quickest Way to Start a CD Is with the One Touch Operation 22
Basics of Using the CD Player — Continuous Play 22
To Insert Discs 22
To Play a Disc 23
Resume 23
To Change Discs While Playing 23
To Select a Disc, Track or Passage within a Track 24
To Select a Track 24
To Select Passage within a Track 24
Locating a Track with the Remote Control Directly 24
Programming the Playing Order of the Tracks 24
To Check the Program 26
To Modify the Program 26
Random Play 26
Repeating a Track or the Discs 27
Tray Lock Function 27
Locking the Electronic Lock 27
Unlocking the Electronic Lock 27

Using the Cassette Deck (Listening to a Tape) 28
One Touch Play 29
Regular Play 29
Fast Left and Fast Right 29
Music Scan 30
To Find the Beginning of the Current Selection 30
To Find the Beginning of the Next Selection 30
Other Useful Features of the Cassette Deck 30

Using the Cassette Deck (Recording) 31
Things to Know Before You Start Recording 31
Standard Recording 32
To Record Any Sound Source to Tape 32
CD Direct Recording 33
Auto Edit Recording 34
Tape to Tape Recording (Dubbing) 35
How to Use the DUBBING Button 35

Using the Timers 36
Setting the Clock 36
Adjusting the Brightness of the Display 37
Setting the DAILY Timer 37
Turning the DAILY Timer On and Off 39
Setting the REC (Recording) Timer 40
Turning the REC Timer On and Off 41
Setting the SLEEP Timer 41
Timer Priority 42

Care and Maintenance 43

Troubleshooting 44

Specifications 45

Getting Started

Accessories

Check that you have all of the following items, which are supplied with the CA-D761T.

AM Loop Antenna (1)
Remote Control (1)
Batteries (2)
FM Wire Antenna (1)

If any of these items is missing, contact your dealer immediately.

How to Put Batteries in the Remote Control

Match the polarity (+ and –) on the batteries with the + and – markings in the battery compartment.

R6P (SUM-3)/AA (15F)

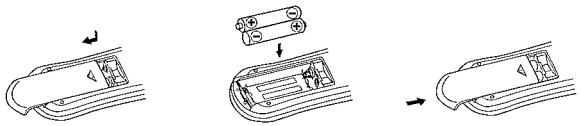

CAUTION: Handle batteries properly.

To avoid battery leakage or explosion:

- Remove batteries when the Remote Control will not be used for a long time.
- When you need to replace the batteries, replace both batteries at the same time with new ones.
- Don't use an old battery with a new one.
- Don't use different types of batteries together.

Using the Remote Control

The Remote Control makes it easy to use many of the functions of the CA-D761T from a distance of up to 7m (23 feet) away.
You need to point the Remote Control at the remote sensor on the CA-D761T's front panel.

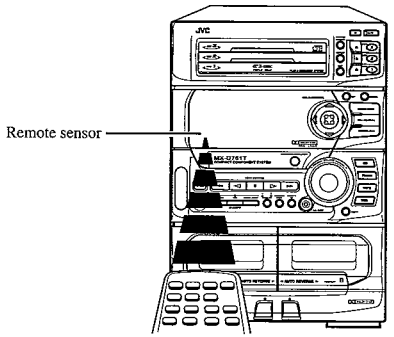

CAUTION: Make all connections before plugging the Unit into an AC power outlet.

Connecting the FM Antenna

Using the Supplied Wire Antenna

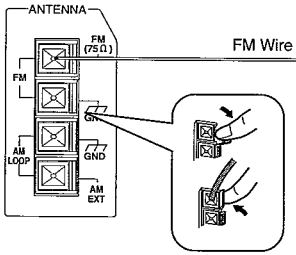

Using an FM 75-Ohm Antenna Wire (Not Supplied)

If reception is poor, connect the outside antenna.

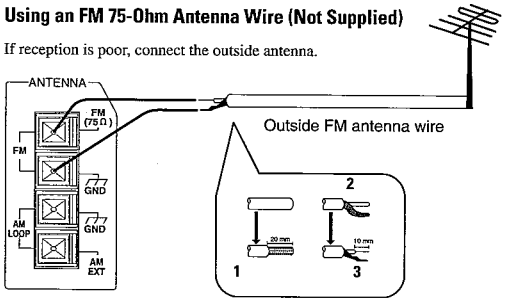

Before attaching a 75 ohm coaxial lead (the kind with a round wire going to an outside antenna), disconnect the supplied FM Wire Antenna.

CAUTION: To avoid noise, keep antennas away from metallic parts of the CA-D761T, connecting cord and the AC power cord.

Connecting the AM Antenna

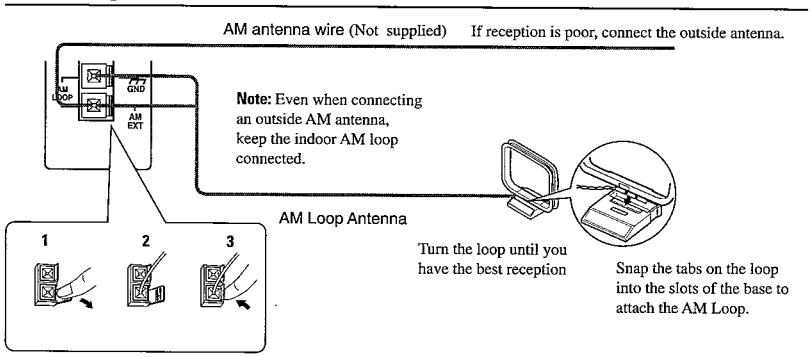
AM antenna wire (Not supplied)
If reception is poor, connect the outside antenna.
GND
AM EXT
Note: Even when connecting an outside AM antenna, keep the indoor AM loop connected.
AM Loop Antenna
1
2
3
Turn the loop until you have the best reception
Snap the tabs on the loop into the slots of the base to attach the AM Loop.

CAUTION: Make all connections before plugging the Unit into an AC power outlet.

Connecting the Speakers

(Please refer to instructions for speakers as will when you connect speakers.)

Connecting the Front Speakers

For each speaker, connect one end of the speaker wire to the speaker terminals on the back of the CA-D761T and the other end to the speaker.

1. Open each of the terminals and insert the speaker wires firmly (be sure to remove the insulation at the end of each wire first), then close the terminals.
2. Connect the red (+) and black (–) terminals of the right side speaker to the red (+) and black (–) terminals marked RIGHT on the CA-D761T.
   Connect the red (+) and black (–) terminals of the left side speaker to the red (+) and black (–) terminals marked LEFT on the CA-D761T.

Laying Out the Unit

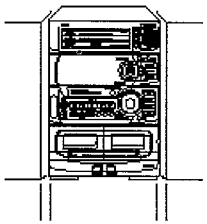

1 cm (7/16") 1 cm (7/16")

Leave a space of at least 1 cm on both sides of the Unit and at least 10 cm at the back, for ventilation.

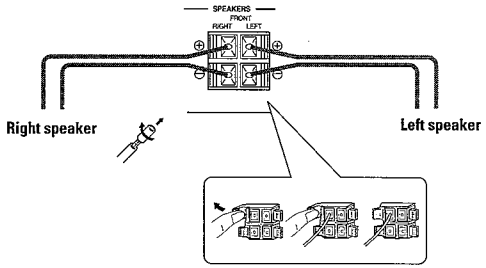

IMPORTANT: Use speakers with the correct impedance only. The correct impedance is indicated on the back panel.

CAUTION: If a TV is installed near speakers, the TV may display irregular colors. In this case, set the speakers away from the TV.

Connecting a Center Speaker and Rear Speakers

Connect the optional center speaker and rear speakers.

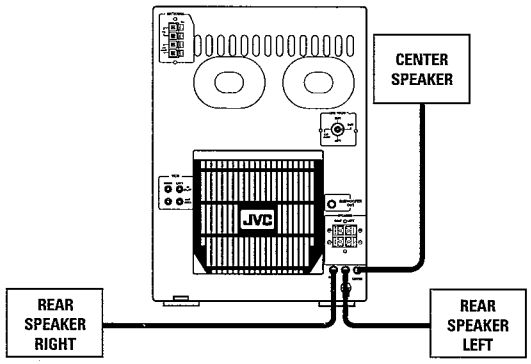

CAUTION: Make all connections before plugging the Unit into an AC power outlet.

Connecting the SUB WOOFER

Connect the Sub-Woofer to the SUBWOOFER OUT terminal.

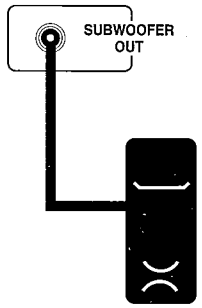

Connecting a VCR

Connect a VCR to the VCR terminal.

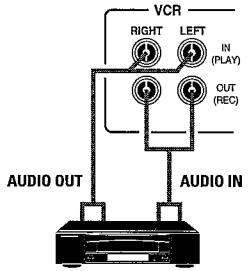

Now you can plug the AC power cord into the wall outlet, and your CA-D761T is at your command!

DEMO Mode

When the CA-D761T is connected to an AC power outlet, a DEMO mode displaying some of the system's features automatically starts.
The DEMO display cycles through the following items repeatedly.

- Scrolling display of "DEMO MODE START".
- Demo of MULTI CONTROL.
- Demo of PRO LOGIC and 3CH LOGIC.
- Demo of Sound Modes.
- Demo of continuous play from DISC-1 to DISC-3.
- Scrolling display of "TUNER RANDOM 40CH PRESET".

To turn the DEMO display off, press any of the operation buttons. "DEMO OFF" appears on the display and the DEMO display automatically stops.

DEMO OFF

To turn the DEMO display on, press the DEMO button.

Notes:

- The DEMO display automatically starts when the power cord is inserted into a wall outlet.
- The DEMO display will not start if VCR is selected as a music source.

COMPU PLAY

COMPU PLAY is JVC's feature that lets you control the most frequently used functions of the CA-D761T with a single touch.
One Touch Operation starts playing a CD, turns on the radio, plays a tape, etc. with a single press of the play button for that function. What One Touch Operation does for you is to turn the power on, then start the function you have specified. If the Unit is not ready, such as no CD or tape in place, the Unit still powers on so you can insert a CD or tape.
How One Touch Operation works in each case is explained in the section dealing with that function.
The COMPU PLAY buttons are:

On the Unit

CD button
CD Player ▷/II button
CD Player DISC-1 to DISC-3 buttons
CD Player Open/Close (▲) buttons
FM/AM button
TAPE button
DECK CONTROL ◁, ▷ buttons
VCR button

On the Remote Control

TUNER button
VCR button
CD control ▶ button
CD control DISC 1 to DISC 3 buttons
CD control Open/Close (▲) buttons
Deck control ◀◀, ▶▶ buttons

Using the Amplifier

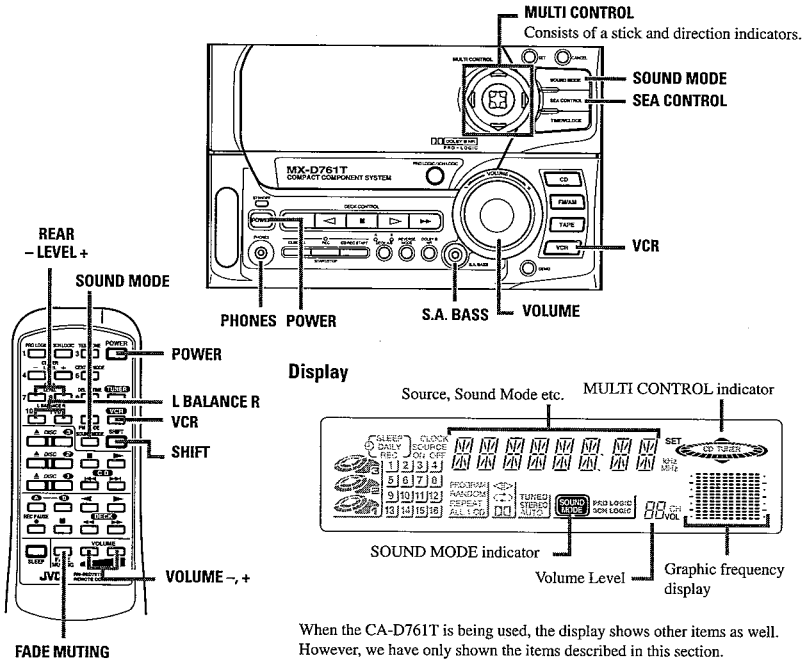

Display

When the CA-D761T is being used, the display shows other items as well. However, we have only shown the items described in this section.

Turning the Power On and Off

Turning the CA-D761T On

Press the POWER button.
The display comes on and the STANDBY indicator goes out.
The CA-D761T comes on ready to continue in the mode it was in when the power was last turned off.

- ❑ If the last thing you were doing was listening to a tape in Deck B, you are now ready to listen to a tape again in Deck B, or you can change to another source.
- ❑ If you were listening to the Tuner last, the Tuner comes on playing the station it was last set to.

Turning the CA-D761T Off

Press the POWER button again.
The STANDBY indicator lights up and the display is blank, except for the clock display.

- ❑ Some power (20 watts) is always consumed even though power is turned off (called Standby Mode).
- ❑ To switch off the Unit completely, unplug the AC power cord from the AC outlet. When you unplug the AC power cord, the clock will be reset to AM 12:00 immediately, and preset Tuner stations will be erased after a few days.

Adjusting the Volume

Turn the VOLUME control clockwise to increase the volume or anticlockwise to decrease it.
Turning the VOLUME control quickly also adjusts the volume level quickly.
When using the Remote Control, press the VOLUME + button to increase the volume or press the VOLUME – button to decrease it.
You can adjust the volume level between 0 and 50.

or

❑ When the CA-D761T is turned on from Standby mode, the volume is set to 0 and automatically increases to the previous volume level. To stop this automatic volume adjustment, turn the VOLUME control slightly or press the VOLUME button on the Remote Control.

For Private Listening
Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers.
Be sure to turn down the volume before connecting or putting on headphones.

FADE MUTING Function

Set the Volume Level to 0 by pressing the FADE MUTING button on the Remote Control. Press this button again to restore the Volume Level to its previous level.

Balance Adjustment

You can use the Remote Control to adjust the left and right balance of the speakers.

1. Press the SHIFT button.

2. Press the L BALANCE R buttons (10 or +10).
The display changes to show the balance adjustment.



Pressing the L button (10) moves the pointer to the left, pressing the R button (+10) moves the pointer to the right.



Display when set for no sound from the right speaker.



Display at the center position.



Display when set for no sound from the left speaker.

❑ The balance is normally set to the center position.

Note: If no adjustments are made for 5 seconds in balance adjustment mode, the display reverts to the previous display.

S.A. Bass Mode

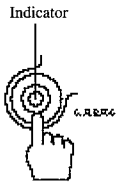

The richness and fullness of the bass sound is maintained regardless of how low you set the volume. The degree of bass is automatically controlled to suit the music source being played back.
You can use this effect only for playback.

To get the effect, press the S.A. BASS (Signal Adaptive Bass) button repeatedly until the S.A. Bass mode you want appears on the display. The S.A. BASS indicator lights up.

→ **S.A. BASS 1** → **S.A. BASS 2** → **OFF** → (back to the beginning)

❑ "S.A. BASS 2" provides stronger bass than "S.A. BASS 1" does. However, there will be no large difference depending on music.

To cancel the effect, press the same button until "OFF" appears on the display. The S.A. BASS indicator goes out.

Sound Modes

The CA-D761T has some preset sound effects that give you control of the way your music sounds, so you can tailor it for your room and for the quality of the source. We can give you some idea of how each one affects the music, but the only way to really tell is to try them yourself.
You can also create up to three of your own customized S.E.A. (Sound Effect Amplifier) settings and store them in the unit's memory.
❑ The preset sound modes include modes using surround effects and modes using S.E.A. effects.
❑ Sound Mode effects cannot be recorded.

Surround effect modes

D. CLUB (Dance Club)	Increases resonance and bass.
HALL	Adds depth and brilliance to the sound, like in a concert hall.
STADIUM	Adds clarity and spreads the sound, like in an outdoor stadium.

S.E.A. effect modes

ROCK	Boosts low and high frequencies.
POP	Good for vocal music.
CLASSIC	Set for wide and dynamic sound stereo systems.

Selecting a Sound Mode

Using the Unit



1. Press the SOUND MODE button.
The currently selected Sound mode appears on the display.
The MULTI CONTROL indicators light up to indicate the directions in which you can use the controller.



Note: If no adjustments are made for 5 seconds in Sound mode after the SOUND MODE button is pressed, the display reverts to the previous display.

2. Press the MULTI CONTROL stick to the left or right to select a Sound mode.
Use the MULTI CONTROL stick to select a Sound mode while sound mode is displayed. If the display reverts to the previous display, press the SOUND MODE button again and use the MULTI CONTROL stick to select a mode.

❑ The display also displays the frequency for the selected mode.

Moving the MULTI CONTROL stick to the right →
↔D. CLUB↔HALL↔STADIUM↔ROCK↔POP↔CLASSIC↔MANUAL 1↔MANUAL 2↔ MANUAL 3↔OFF↔
← Moving the MULTI CONTROL stick to the left

To cancel Sound mode, select "OFF".

Unless sound mode "OFF" is selected, the red perimeter line around the SOUND MODE indicator is lit. If "OFF" is selected, the perimeter line goes out.

SOUND MODE ON

SOUND MODE OFF

Using the Remote Control

Press the SOUND MODE button.
The display changes with each press of the button as shown below.

→D. CLUB→HALL→STADIUM→ROCK→POP→CLASSIC→MANUAL 1→MANUAL 2→ MANUAL 3→OFF→ (back to the beginning)

Customizing a Sound Mode

You can change an existing sound mode to suit your own preferences. These changed setting can be stored in the CA-D761T's sound mode memory.

1. Select the sound mode you want to change.
If you select D. CLUB, HALL, or STADIUM, the surround effect remains unchanged, but you can adjust the S.E.A. effect.



2. Press the SEA CONTROL button.
"SEA CONT" appears on the display, then the low tone section of the tone equalizer is displayed and the MULTI CONTROL indicators light up to indicate the directions in which you can use the MULTI CONTROL stick.



Note: If no adjustments are made for 5 seconds after the SEA CONTROL button is pressed, Sound mode appears on the display then reverts to the previous display.

3. Adjust the settings using the MULTI CONTROL stick.

- Adjust the level by adjusting the MULTI CONTROL stick up and down.
  The level can be set between +3 and –3 in seven steps.



- Select the tone range by adjusting the MULTI CONTROL stick left and right.
  You can select LOW, MID, or HIGH tone.



4. Press the SET button.
"MANUAL 1" appears on the display.

5. Select the memory number by adjusting the MULTI CONTROL stick left and right.
You can choose from "MANUAL 1" to "MANUAL 3".

6. Press the SET button again.
"MEMORY" appears on the display and the settings are stored in the memory number selected.

- The sound mode is set to the settings you have stored.
- If you store new settings to a memory number that has already been used, the new settings replace the existing setting.

Using D. Club, Hall, and Stadium Surround with Rear Speakers

The following shows optional rear speaker arrangements for D. Club surround, Hall surround, and Stadium surround. The sound is reproduced through the front speakers and rear speakers to give respective surround effects.

Note: The surround effects will not be correct for monaural sources.

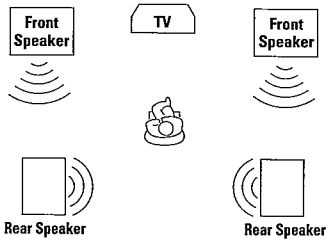

Setting-up Surround



1. Press the SOUND MODE button.
The currently selected Sound mode appears on the display.
The MULTI CONTROL indicators light up to indicate the directions in which you can use the controller.

Note: If no adjustments are made for 5 seconds in Sound mode after the SOUND MODE button is pressed, the display reverts to the previous display.

2. Press the MULTI CONTROL stick to the left or right until "D. CLUB", "HALL", or "STADIUM" appears on the display.



3. Start playback from the desired source.

4. Press the SHIFT button on the Remote Control.

5. Adjust the level for the rear speakers.
Press the REAR LEVEL + or – button. Set the level so that it is about the same as the level from the front speakers.

- If you customized "MANUAL 1", "MANUAL 2", or "MANUAL 3" Sound mode by copying "D. CLUB", "HALL", or "STADIUM" Sound mode, you can also use surround effect with rear speakers for it.
- Adjust the rear speakers level for these modes separately.
- You cannot adjust the center speaker level, or Delay time for these Surround.

Using the Surround

Follow the steps 1 and 2 in "Setting-up Surround" above to select the desired Sound mode.

Using a VCR

Listening to a VCR

By playing the sound to VCR through the CA-D761T, you can gain control over how the music or program sounds. Once the connected equipment is playing through the CA-D761T, you can apply the sound effects.

❑ First make sure that the optional equipment is properly connected to the CA-D761T. (See page 6).

1. Set the VOLUME control to 0.

2. Press the VCR button.
When CA-D761T is in Standby mode, the Unit is automatically turned on and "VCR" appears on the display.

3. Start playing the equipment.

4. Adjust the VOLUME control to the desired listening level.

5. Select a sound effect mode, if you wish.

To Cancel the Setting
Change the source by starting any one of the CA-D761T's built-in sound sources, such as the Tuner or CD Player.

Recording to a VCR

To record from a VCR, start playback of the recording source of the CA-D761T and start recording on your VCR. (Refer to the VCR's instruction manual for details on the recording procedure for your VCR.)

❑ You cannot record using Sound mode effects.

Dolby Surround

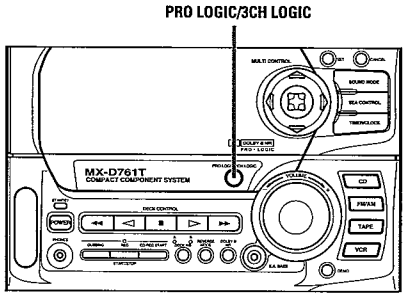

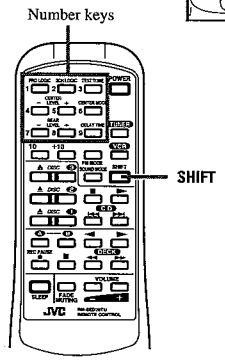

Accessing the Dolby Surround Functions
Press the number keys with green labels on the Remote Control to use the Dolby Surround functions. To use the function marked in green, press the SHIFT button first, then press the desired number key.

Display

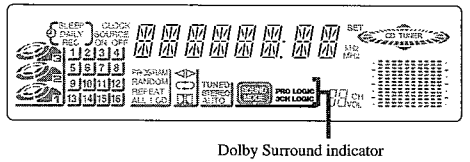

When the CA-D761T is being used, the display shows other items as well. However, we have only shown the items described in this section.

The Dolby Surround has been also developed to reproduce the important elements of the acoustic surround at home. To watch the sound tracks of video software bearing the mark DOLBY SURROUND which includes the same encoded surround information as found in Dolby Stereo film, the CA-D761T can provide you with two Dolby Surround programs (Dolby Pro Logic and Dolby 3ch Logic).

Dolby Pro Logic: Select this mode when the optional rear speakers are connected.
Dolby 3ch Logic: Select this mode when no rear speakers are connected.

Manufactured under license from Dolby Laboratories Licensing Corporation.
"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

❑ You need to connect the optional centre speaker and rear speakers to use the Dolby Surround functions.

Preparing the Dolby Surround Processor

To use the Dolby surround processor effects, you need to prepare the various surround processor settings. These settings are set using the Remote Control.
The settings that are required, varies according to the type of Dolby surround processor effect selected.
Adjust the settings for each of the Dolby surround processor effects you want to use.
The Dolby Surround Processor settings are:

Center Speaker Mode
Center Speaker mode contains the following four settings.

PHANTOM: Select this setting if you have not connected a center speaker. The left and right front speakers project the sound to give the effect of a center speaker.

NORMAL: Select this setting if you are using a small center speaker. Since the center speaker cannot boost the low tones effectively, this setting uses the front speakers to boost the low tones from the center speaker.

WIDE: Select this setting if you are using a center speaker that is similar in power to the front speakers.

OFF: Select this setting to turn off the output for the center speaker.

Delay Time Mode
Delay Time mode contains the following four settings.

DELAY-1: Select this setting if the rear speakers are further away from your listening position than the front speakers. (Delay time: 15 msec.)

DELAY-2: Select this setting if the rear speakers and front speakers are about the same distance way from your listening position. (Delay time: 20 msec.)

DELAY-3: Select this setting if the rear speakers are nearer to your listening position than the front speakers. (Delay time: 25 msec.)

DELAY-4: Select this setting if the rear speakers are very close to your listening position compared to the front speakers. (Delay time: 30 msec.)

Adjusting the level of the Center Speaker
Adjust the level of the center speaker between +10 and –10. Set the level so that it is about the same as the level from the front speakers.

Adjusting the level of the Rear Speakers
Adjust the level of the rear speakers between +10 and –10. Set the level so that it is about the same as the level from the front speakers.

❑ You cannot adjust the levels of the left and right rear speakers independently.

Getting Ready To Use Dolby Pro Logic

Speaker Arrangements for Dolby Pro Logic

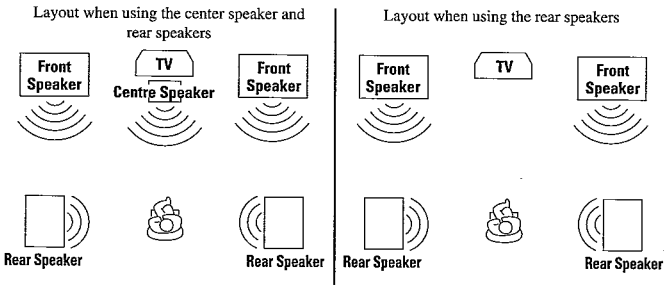

Setting-up Dolby Pro Logic

1. Press the PRO LOGIC/3CH LOGIC button to select PRO LOGIC.
The PRO LOGIC/3CH LOGIC button indicator lights up.
The display changes with each press of the PRO LOGIC/3CH LOGIC button as shown below.
→ **PRO LOGIC** → **3CH LOGIC** → Off (button not lit) → (back to the beginning)

The PRO LOGIC/3CH LOGIC button lights up and "PRO LOGIC" appears on the display.

PROLOGIC

When using the Remote Control, press the SHIFT button then press the PRO LOGIC button.
❑ Perform the steps below using the buttons on the Remote Control.

2. Select the desired Centre Speaker mode.
Press the SHIFT button on the Remote Control then press the CENTER MODE button.
The display changes with each press of the button, as shown below.

→ **NORMAL** → **WIDE** → **OFF** → **PHANTOM** → (back to the beginning)

3. Select the Delay time.
Press the DELAY TIME button. The display changes with each press of the button, as shown below.

→ **DELAY 2** → **DELAY 3** → **DELAY 4** → **DELAY 1** → (back to the beginning)

4. Set the volume to the level you normally use.

5. Press the TEST TONE button.
A test tone is emitted in the order shown below.

→ **LEFT** → **CENTER** → **RIGHT** → **REAR** → (back to the beginning)

❑ When "PHANTOM" is selected for Centre Speaker mode, the test tone for the center speaker is projected by the front speakers.
❑ When "OFF" is selected for Centre Speaker mode, no test tone is output from the center speaker.

6. Adjust the level for the centre speaker.
Press the CENTER LEVEL + or – button. Set the level so that it is about the same as the level from the front speakers.

CNTR1 0

❑ You cannot adjust the level for the center speaker if "PHANTOM" or "OFF" is selected for Centre Speaker mode.

7. Adjust the level for the rear speakers.
Press the REAR LEVEL + or – button. Set the level so that it is about the same as the level from the front speakers.

8. To cancel Test Tone mode.
Press the TEST TONE button again.
This completes the preparations required for using Dolby Pro Logic.

Getting Ready To Use Dolby 3 Channel Logic

Speaker Arrangements for Dolby 3 Channel Logic

Setting-up Dolby 3ch Logic

1. Press the PRO LOGIC/3CH LOGIC button to select 3CH LOGIC.
The PRO LOGIC/3CH LOGIC button indicator lights up.
The display changes with each press of the PRO LOGIC/3CH LOGIC button as shown below.
→ **PRO LOGIC** → **3CH LOGIC** → Off (button not lit) → (back to the beginning)

The PRO LOGIC/3CH LOGIC button lights up and "3CH LOGIC" appears on the display.

When using the Remote Control, press the SHIFT button then press the 3CH LOGIC button.
❑ Perform the steps below using the buttons on the Remote Control.

2. Select the desired Centre Speaker mode.
Press the SHIFT button on the Remote Control then press the CENTER MODE button. The display changes with each press of the button, as shown below.

→ **NORMAL** → **WIDE** → **OFF** → (back to the beginning)

3. Set the volume to the level you normally use.

4. Press TEST TONE button.
A test tone is emitted in the order shown below.
❑ When "OFF" is selected for Centre Speaker mode, no test tone is output from the centre speaker.

→ **LEFT** → **CENTER** → **RIGHT** → (back to the beginning)

5. Adjust the level for the center speaker.
Press the CENTER LEVEL + or – button. Set the level so that it is about the same as the level from the front speakers.
❑ You cannot adjust the level for the center speaker if "OFF" is selected for Centre Speaker mode.



6. To cancel Test Tone mode.
Press the TEST TONE button again. This completes the preparations required for using Dolby 3 Channel Logic.
❑ You cannot adjust the Delay Time or rear speaker levels in Dolby 3 Channel Logic mode.

Using Dolby Surround

1. Press the PRO LOGIC/3CH LOGIC button and select the desired mode.
If you are using the remote control, press the PRO LOGIC or 3CH LOGIC button after pressing the SHIFT button.
Make sure that the centre speakers and rear speaker have been setup correctly, as described on pages 14 to 17.

2. Playback as source with the DOLBY SURROUND mark.
Enjoy the great sound achieved through Dolby Surround.

To cancel Dolby Surround effects
Press the PRO LOGIC/3CH LOGIC button until the indicator light goes out. If you are suing the remote control, press the Dolby Surround buttons (PRO LOGIC or 3CH LOGIC) after pressing the SHIFT button.

Using the Tuner

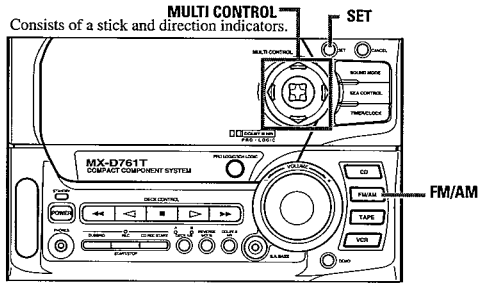

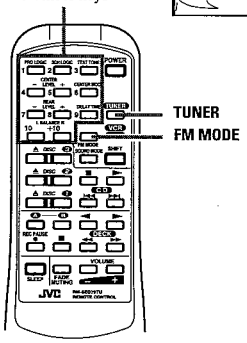

Display

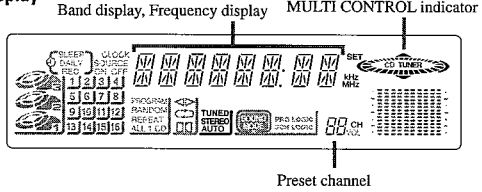

When the CA-D761T is being used, the display shows other items as well. However, we have only shown the items described in this section.

You can listen to both FM and AM stations. Stations can be tuned in manually, automatically, or from preset memory storage.

❑ Before listening to the radio:
- Check that both the FM and AM antennas are firmly connected. (See page 4).

COMPU PLAY

One Touch Radio

Just press the FM/AM button (or the TUNER button on the Remote Control) to turn on the Unit and start playing the most recent station tuned in.

❑ You can switch from any other sound source to the radio by pressing the FM/AM button (or the TUNER button on the Remote Control).

Tuning in a Station

Press the FM/AM button (or the TUNER button on the Remote Control) to turn on the radio. The Frequency of the previously selected channel appears on the display.

Switching between Frequency Bands

Press the FM/AM button.

Each time you press the button, the band alternates between FM and AM.

Selecting a Radio Station

❑ Select a frequency by adjusting the MULTI CONTROL stick up or down. The frequency changes in one step increments. "TUNED" appears on the display when a signal is found. This is called Manual Tuning.
The frequency increases when MULTI CONTROL stick is pressed upwards, and decreases when the MULTI CONTROL stick is pressed downwards.

❑ If the MULTI CONTROL stick is pressed up or down continuously for a few seconds, the frequency changes continuously until a signal is found, then "TUNED" appears on the display. This is called Auto Tuning.

TUNER

❑ Possible only after presetting stations.

Using the Unit

Select a preset channel by adjusting the MULTI CONTROL stick left or right.

Using the Remote Control

1. **Press the TUNER button so that you can receive the most recent station tuned in.**
2. **Select the station by entering the preset number in the number keys of the Remote Control.**

❑ Example: for channel 5, press 5. For channel 15, press +10 then 5. For channel 20, press +10, then 10. For channel 32, press +10 three times, then 2.

Presetting Stations

1 FM/AM

2

3 SET

4

5 SET

You can store up to 40 of your favorite radio stations (FM and AM) in memory, giving you quick, easy access to the stations.

Note: In some cases, test frequencies have been already memorized for the tuner since the factory examined the tuner preset function before shipment. This is not a malfunction. You can preset the stations you want into memory by following the presetting method.

1. **Select a frequency band by pressing the FM/AM button.**
2. **Tune to a station by adjusting the MULTI CONTROL stick up or down.**
3. **Press the SET button.**
   On the display, "SET" will blink for 5 seconds.
   ❑ During these 5 seconds while "SET" is blinking, you can assign a channel number to the station and enter it into the memory as follows.
4. **Select a preset number by adjusting the MULTI CONTROL stick left or right.**
5. **Press the SET button and the station will be assigned to the channel number showing on the display.**
   "MEMORY" appears in the display.



   ❑ If a station has been previously stored using the same channel number, this will be erased and the newly selected station will be stored.
   ❑ If "SET" in the display goes off, start again from step 3.
6. **Repeat steps 1 - 5 for each station you want to store in memory with a preset number.**

CAUTION: If the Unit is unplugged or if a power failure occurs, the preset stations will be erased after a few days. If this happens, preset the station again.

To Change the FM Reception Mode

FM MODE

When an FM stereo broadcast is hard to receive or noisy, press the FM MODE button on the Remote Control so that the "AUTO" indicator goes off in the display. Reception improves, but there are no stereo effects, In this monaural mode, noise comes out while tuning in stations (since muting is also cancelled).

To restore the stereo effect, press the FM MODE button on the Remote Control so that the "AUTO" indicator lights up. In this stereo mode, no noise comes out while tuning in stations, and you can hear stereo sounds when a program is broadcast in stereo.

Using the CD Player

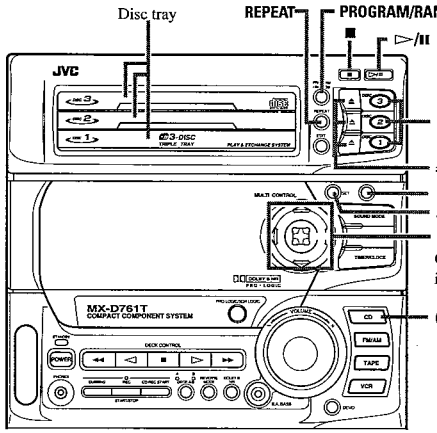

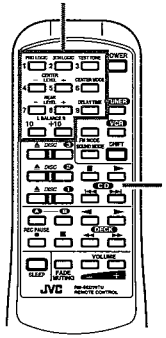

Display

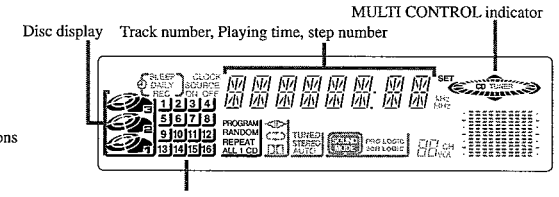

When the CA-D761T is being used, the display shows other items as well. However, we have only shown the items described in this section.

DISC indicator
Each of the Disc buttons acts as an indicator.
This indicator is off when the CD Player is checking that there is no disc in the disc tray for the corresponding disc number.
Pressing the ⏏ button turns the indicator on.
During playback, the disc indicator for the disc being played flashes.

Disc display
A red marker lights on the disc display for the disc number you have selected. This disc display blinks while a CD is being played.
The center of the disc display is not lit while CD Player is checking that there is no disc in the disc tray for the corresponding disc number.

The CA-D761T's CD Player has an Automatic Changer with 3 disc trays. You can use Continuous, Random, Program or Repeat Play for the discs in DISC-1, DISC-2 and DISC-3. Repeat Play can repeat all the tracks on all the CD's, the tracks on one of the CD's or one track on one CD. There is also the Tray Lock function, which safely keeps discs in the trays.

Here are the basic things you need to know to play a CD and locate the different selections on it. Each selection is called a track, so when we are talking about locating a track, we are also talking about how you find a certain song or performance.

COMPU PLAY

The Quickest Way to Start a CD Is with the One Touch Operation

The power comes on, and operations are done automatically.

- ❑ Press the CD or ▷/II button (or the ► button on the Remote Control).
  - If there is a CD in the disc tray of the selected (lit) disc number, playback continues from the track where it was interrupted.
  - If there is no CD in any of the disc trays, the message "OPEN" appears in the display after a few seconds and the disc tray for the marked disc opens.
- ❑ Press a DISC button (1 to 3).
  - If there is a CD in the disc tray for the disc number you have selected, playback begins from the first track of that disc. If there is no CD in the disc tray, the message "OPEN" appears in the display after a few seconds and the disc tray opens.
- ❑ Press the ⏏ button.
  - The power turns on, and the tray opens automatically.

Basics of Using the CD Player — Continuous Play



You can play the discs continuously in the DISC 1 to DISC 3 trays.

To Insert Discs

1. **Press the ⏏ button on the right of the tray you want to insert the disc into.**
   The disc tray slides out automatically.
2. **Place a CD, with its label side up, onto the tray.**

ATTENTION: *To avoid malfunctions when you play a CD, please set the CD in the right place at the center of the tray.*

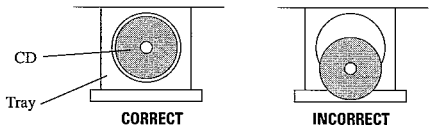

3. **Press the ⏏ button to close the tray.**
4. **Repeat steps 1 to 3 to insert other discs into other trays.**
   - To continue putting discs into other trays, even if a tray is open, by pressing the ⏏ button of another disc tray, the open tray will close automatically, and the new disc tray will slide out.

- ❑ To put an 8 cm CD into a tray, insert it so that it is aligned with the groove in the tray's center.
- ❑ "OPEN" appears in the display when a tray opens, and "CLOSE" when a tray closes.
- ❑ If a tray is open when the CA-D761T switches to Standby mode, the tray is closed automatically.

Note: When the CD Player is reading a disc, "- - - -" appears in the display. While this is being displayed, the ⏏ button or DISC button cannot be used. Once the display changes from "- - - -" to another display, the ⏏ button and DISC button can be used.

To Play a Disc

This function plays the disc in the Unit continuously.



1. Prepare the discs.

2. Press the DISC button (1-3) of the disc you want to play.
The first track of the selected disc will begin playing.
When the selected disc finishes playing, the next disc will begin playing automatically.
When the last disc has finished playing, the Unit will stop automatically.

❑ When a DISC button is pressed while a tray is open, the open tray will close automatically and Continuous Play playback begins from the first track of the disc.

To use Continuous Play from the first track of the disc selected by the disc marker, you do not need to press a DISC button (1-3), just press the ▷/II or CD button (or ► button on the Remote Control).

Playing Order of Discs

❑ When playback starts from DISC-1, the playing order is DISC-1 → DISC-2 → DISC-3. When DISC-3 has finished, the CD Player selects DISC-1 (the disc marker is on) and stops.
❑ When playback starts from DISC-2, the playing order is DISC-2 → DISC-3 → DISC-1. When DISC-1 has finished, the CD Player selects DISC-2 (the disc marker is on) and stops.
❑ When playback starts from DISC-3, the playing order is DISC-3 → DISC-1 → DISC-2. When DISC-2 has finished, the CD Player selects DISC-3 (the disc marker is on) and stops.
- If any of the disc trays are empty, the CD Player skips that disc tray and continues through the remaining disc trays in the order shown above.

Note: If there is no CD in disc tray for the DISC button you pressed, the message "OPEN" appears in the display and the disc tray automatically opens. If there is no disc in the disc tray for the selected disc number, when the ▷/II or CD button (or the ► button on the Remote Control) is pressed, playback begins from the next disc.

To stop play the disc, press the ■ button for the disc number being played.
To stop play and remove the disc, press the ▲ button for the disc being played.
To pause, press the ▷/II button. The Disc display will blink. (The Pause function cannot be used with the ► button on the Remote Control.)
To cancel pause, press the ▷/II button again (or press the ► button on the Remote Control). Play continues from the point where it was paused.

Resume

When the ■ button is pressed during playback, and the source is changed, the track number is memorized even when the power is turned off. The next time the ▷/II or CD button (or the ► button on the Remote Control) is pressed, play resumes from the track where it was interrupted.
❑ To start playback from the first track, press the DISC button.

To Change Discs While Playing

You can replace a CD in a tray not being used, while another CD is playing.

1. Press the ▲ button of the tray not being used.
The tray opens.

2. Replace the disc in the tray.

3. Press the ▲ button to close the tray.

To Select a Disc, Track or Passage within a Track

Press the DISC button (1-3) for the disc tray containing the track you want to listen to.
Playback starts from the first track of the disc you selected.
❑ Example: for the third disc, press 3.

To Select a Track

Using the Unit

Select a track by adjusting the MULTI CONTROL stick left or right.

❑ The MULTI CONTROL stick adjustments step through the tracks on the CD one track at a time.
- Moving the MULTI CONTROL stick to the right selects the next track.
- Moving the MULTI CONTROL stick to the left selects the previous track.

❑ If the MULTI CONTROL stick is held down continuously, the CD Player skips through the tracks on the CD continuously in the selected direction.

Using the Remote Control

Press the I◄◄ or ►►I button to select the track.

❑ Each time you briefly press and release the I◄◄ or ►►I button, the track changes by one.
- Press and release the ►►I button to go ahead one track at a time.
- Press and release the I◄◄ button to go back one track at a time.

❑ Holding down the I◄◄ or ►►I button allows you to change tracks continuously.

To Select a Passage within a Track

While a CD is playing, press the MULTI CONTROL stick up or downwards continuously.

❑ If the MULTI CONTROL stick is pressed upwards the CD is played forwards quickly, if the controller is press downwards the CD is played backwards quickly. Release the stick when the CD reaches the passage you want to hear.

Note: You cannot perform these fast forwards or fast backwards operation with the Remote Control.

Locating a Track with the Remote Control Directly

Using the numeric keys on the Remote Control allows you to go directly to the beginning of any track.

1. Press the DISC button (1-3) for the disc tray containing the track you want to listen to.
❑ Example: for the third disc, press 3.

2. Enter the number of the track you want to listen to with the number keys.
The selected track starts playing.
❑ Example: for track 5, press 5. For track 15, press +10 then 5. For track 20, press +10, then 10. For track 32, press +10 three times, then 2.

Programming the Playing Order of the Tracks

You can change the order in which the discs and tracks play, and select only the discs and tracks you want from among those loaded in the CD Player.
❑ You can program up to 32 steps in any desired order from among the discs in the player.
❑ You can only make or change a program when the CD Player is stopped.

Using the Unit

1. Press the PROGRAM/RANDOM button.
The message "PROGRAM" appears on the display and the PROGRAM indicator comes on.
If you have already created a program, the last step of the previous program is displayed.

❑ The display changes with each press of the PROGRAM/RANDOM button, as shown below.
→ **PROGRAM** → **RANDOM** → Off (Continuous Play) → (back to the beginning)



2. Select a disc with the DISC buttons (1 to 3).
The display changes to the Program Entry display and the disc number and track number sections blink for a few seconds.

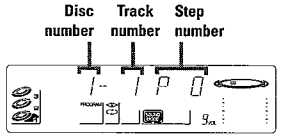

❑ While the display is blinking, perform the operations in steps 3 to 4. When the blinking display changes to the "PROGRAM" display, repeat the operations in steps 2 to 4.

3. Select a track for the program by adjusting the MULTI CONTROL stick left or right.
The track number appears on the display.

4. Press the SET button.
The blinking disc number and track number changes to a steady light, and the step number is displayed.

5. Repeat steps 2 to 4 to select the other tracks for the program.
❑ To select another track from the same disc, repeat the procedure from step 3.

6. Press the ▷/II or CD button.
The Unit plays the tracks in the order you have programmed them.

Using the Remote Control

1. Press the PROGRAM/RANDOM button on the Unit.
The message "PROGRAM" appears in the display and the PROGRAM indicator comes on.
If you have already created a program, the last step of the previous program is displayed.

❑ The display changes with each press of the PROGRAM/RANDOM button, as shown below.
→ **PROGRAM** → **RANDOM** → Off (Continuous Play) → (back to the beginning)

2. Select a disc with the DISC buttons (1-3).
The display changes to the Program Entry display and the disc number and track number sections blink for a few seconds.

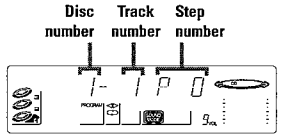

❑ While the display is blinking, perform the operations in step 3. When the blinking display changes to the "PROGRAM" display, repeat the operations in steps 2 to 3.

3. Press the number keys (1 to 10 and +10) to select the track to program.
❑ Example: For track 5, press 5. For track 15, press +10 then 5. For track 20, press +10 then 10. For track 32, press +10 three times, then 2.
The blinking disc number and track number changes to a steady light, and the step number is displayed.

4. Press the ► button.
The Unit plays the tracks in the order you have programmed them.

❑ If you try to program a 33rd step, the CA-D761T lets you know that the program is full by displaying the message "FULL" on the display.
❑ If you try to program an disc tray that is empty, or a track number that does not exist on a disc (for example, selecting track 14 on a disc that only has 12 tracks), the selected disc or track are skipped when the program is played.
❑ You can skip to a particular program step during program play. To do this from the unit, move the MULTI CONTROL stick left or right, to do so from the Remote Control press the I◄◄ or ►►I buttons.
❑ To play the programmed tracks over and over, press the REPEAT button . The Repeat mode indicators light up in sequence with each press of the REPEAT button.

To stop playing, press the ■ button.
To delete all the tracks in a program, keep pressing the CANCEL button on the Unit until all the tracks in the program have been deleted, or press the ▲ button for each disc in the program.
To exit Program Mode, press the PROGRAM/RANDOM button twice to change to Continuous Play mode.

To Check the Program

While the CD Player is stopped, use the I◄◄ or ►►I buttons on the Remote Control to check the contents of the program.
Each time you press the ►►I button, the program contents are shown on the display in the programmed order. Pressing the I◄◄ button displays the previous step in the program

To Modify the Program

Modify the contents of a program while the CD Player is stopped.
Press the CANCEL button on the Unit, the last track in the program is deleted.
Each time you press the button, the last track listed in the program is deleted from the program.
To add a track to the program, follow the procedure above (on either the Unit or the Remote Control). The news tracks are added to the end of the program.

Random Play

The tracks will play in no special order when you use this mode.

1. Press the PROGRAM/RANDOM button while the CD Player is stopped to change to the Random Mode display.

❑ The display changes with each press of the PROGRAM/RANDOM button, as shown below.
→ **PROGRAM** → **RANDOM** → Off (Continuous Play) → (back to the beginning)

2. Press the ▷/II or CD button (or the ► button on the Remote Control)
The tracks are played in random order.
When all of the tracks have been played, the CD Player stops.

Note: Press the DISC buttons (1-3), or the number keys, to cancel Random play and begin playback in Continuous Play mode.

❑ Press the REPEAT button before or during random play to instruct the CA-D761T to continue with a different random track selection after the last selection is played.

To cancel random play, press the ■ button, then press the PROGRAM/RANDOM button to select other mode.

Repeating a Track or the Discs

You can have all the discs, the program or the individual track currently playing repeat as many times as you like.

Press the REPEAT button on the CA-D761T.
The display changes with each press of the button, as shown below.
→ **REPEAT ALL** → **REPEAT 1 CD** → **REPEAT 1** → blank display → (back to the beginning)

REPEAT ALL: Repeats all the tracks on the CD's in the CD Player, or all the tracks in the program.
REPEAT 1 CD: Repeats all the tracks on one CD.
REPEAT 1: Repeats one track on a CD.

❑ "REPEAT ALL" and "REPEAT 1" remain on the display even when you change the play mode.
❑ The three Repeat Modes above can be selected during Continuous Play, however, during Program Play and Random Play, you can only select REPEAT ALL or REPEAT 1.

To exit Repeat Mode, press the REPEAT button until the Repeat mode indicator on the display goes out.

Tray Lock Function

In order to safely keep the discs in the CD Player, the three trays can be electronically locked in a single operation.
When the electronic lock is on, the trays cannot be opened even if the ▲ button is pressed.
This function can only be accessed by using the buttons on the Unit itself.

Locking the Electronic Lock

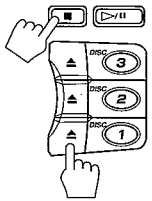

1. **Put the CA-D761T's power into STANDBY mode.**
2. **While pressing the ■ button, press the ▲ button for DISC 1's tray on the Unit.**
"LOCKED" appears on the display to let you know that the trays have been locked.



When the CD Player trays are locked, pressing the ▲ buttons displays the message "LOCKED" on the display and the trays do not open. But, the ▲ button can be used to automatically turn on the power.

Unlocking the Electronic Lock

1. **Put the CA-D761T's power into STANDBY mode.**
2. **While pressing the ■ button, press the ▲ button for DISC 1's tray on the Unit.**
When the unlock operation is done, "UNLOCKED" appears in the display to show that the lock has been taken off.



The trays can now be opened by pressing the ▲ buttons.
The ▲ button can also be used to automatically turn on the power.

Using the Cassette Deck (Listening to a Tape)

DECK CONTROL buttons

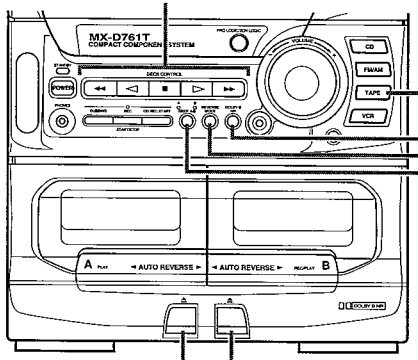

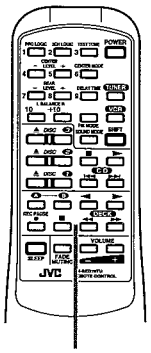

Cassette Deck control buttons

Display

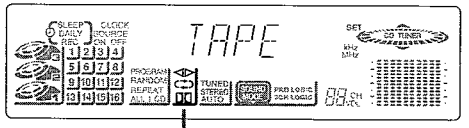

◁▷: Tape Direction indicator
⊂⊃: Reverse Mode indicator
DD: DOLBY B NR indicator

Tape Direction Indicator on the Display
The Tape Direction indicator tells you which direction the selected tape deck will use for playback.
During playback, the direction indicator blinks slowly.
During fast left or fast right, the indicator blinks quickly.
During Music Scan mode, the direction indicator alternates between blinking slowly and quickly repeatedly.

When the CA-D761T is being used, the display shows other items as well. However, we have only shown the items described in this section.

The Cassette Deck allows you to play, record and dub audio tapes.
❑ Most tapes are now recorded with the Dolby NR system, so first check which type of the Dolby NR system has been used on the tape. Only Dolby B NR is incorporated into the CA-D761T.
❑ With Automatic Tape Detection, you can listen to type I or II tapes without changing any settings.

The use of tapes longer than 120 minutes is not recommended, since characteristic deterioration may occur and these tapes easily jam in the pinch-rollers and the capstans.

One Touch Play

COMPU PLAY

- ❑ Press the TAPE button.
  The power comes on and "TAPE" lights up on the display . If there is a tape in the deck corresponding to the Deck indicator DECK A/B, that tape starts to playback. If there is no tape in the deck corresponding to the Deck indicator, the CA-D761T automatically turns on the power and displays "TAPE" then the message "NO TAPE" and waits for you to insert a tape or select another function.
- ❑ Press the ◅ or ▻ button (or the ◄◄ or ►► button on the Remote Control).
  The power comes on and "TAPE" appears in the display. When a tape is already in the tape deck, the tape is played in the direction of the button pressed. If there is no tape in the deck corresponding to the Deck indicator, the CA-D761T automatically turns on the power and displays "TAPE" then the message "NO TAPE" and waits for you to insert a tape or select another function.

Regular Play

If the power is already on, you can use this basic procedure:

1. **Press the ▲ button for the deck you want to use.**
2. **When the cassette holder opens, put the cassette in, with the exposed part of the tape down, toward the base of the CA-D761T.**
   - ❑ If the cassette holder does not open, turn the Unit off, then back on and press the ▲ button again.
3. **Close the holder gently.**
   When both Deck A and Deck B contain a tape, the last deck to have a tape inserted is selected. To change the selected deck, press the DECK A/B button.
   When using the Remote Control, press the A or B button.
4. **Press the ◅ or ▻ button (or ◄◄ or ►► button on the Remote Control).**
   The tape is played in the direction of the button pressed for the selected deck.
   - ❑ The Cassette Deck automatically stops when one side of a tape has finished playing.

To stop playing, press the ■ button.
To remove the tape, stop the tape, and press the ▲ button.
To change deck while playing a tape, press the ◅ or ▻ button after pressing the DECK A/B button on the Unit or press the ◄◄ or ►► button after pressing the A or B button on the Remote Control.

Fast Left and Fast Right

- ❑ While the tape is stopped, press the ◄◄ button and the tape will wind rapidly onto the left side of the cassette without playing.
- ❑ While the tape is stopped, press the ►► button and the tape will wind rapidly onto the right side of the cassette without playing.

Note: Deck A and Deck B cannot be used for playback at the same time.

Music Scan

To find the beginning of a music track during play, use the Music Scan function. Music Scan searches for blank portions that usually separate selections, then plays the next selection.

To Find the Beginning of the Current Selection

Press the ◄◄ or ►► button during play.

- ❑ Make sure that you press the ◄◄ or ►► button in the opposite direction to that in which the tape is playing. Searching stops at the beginning of the current selection, and the current selection starts automatically.

To Find the Beginning of the Next Selection

Press the ◄◄ or ►► button during play.

- ❑ Make sure that you press the ◄◄ or ►► button in the same direction as that in which the tape is playing. Searching stops at the beginning of the next selection, and the next selection starts automatically.

Music Scan works by detecting a 4-second long blank at the beginning of each selection, so it won't work well if your tape has:

- No blank at the beginning of a selection.
- Noise (often caused by much use or poor quality dubbing) which fills the blank with noise.
- Long, very soft passages or pauses in a selection. The scan will detect these as 4-second long blanks. If this happens, just scan again until you reach the selection you want.

Other Useful Features of the Cassette Deck

- ❑ Use **Reverse Mode** to make the tape automatically reverse at the end of a side and start playing the other side. Press the REVERSE MODE button to change from Reverse Mode on to Reverse Mode off, or from off to on.

Reverse Mode ON **Reverse Mode OFF**

- ❑ **Continuous Play:** With the Reverse Mode indicator on, when tape playback in the ◄ direction finishes, the Unit always checks to see if a tape is in the other deck. If there is, it automatically starts playing. This Continuous Play function works regardless of which deck starts first.

- ❑ Press the DOLBY B NR button to switch Dolby B Noise Reduction on (the indicator lights up) or off (the indicator goes off). If a tape is recorded with the Dolby B NR system, playing it back with the Dolby NR on will reduce tape noise and improve the clarity of the sound.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Using the Cassette Deck (Recording)

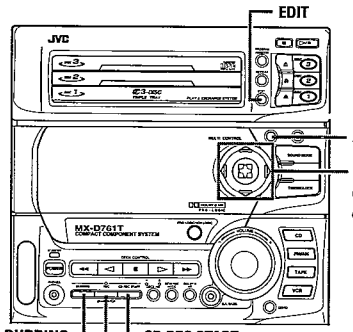

Recording onto a cassette from any of the sound sources is simple. Just place a tape in Deck B, have the source ready, make one or two settings, and you're ready to record. For each source the procedure is a little different and now we'll explain just what to do for each one. If you forget, just come back to the section which has the specific procedures you need. But first, here are a few things to make your recordings better.

Things to Know Before You Start Recording

- **It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.**
- Press the DOLBY B NR button — the indicator lights up — to reduce tape hiss, except when dubbing tapes, since Dolby NR is inactive in Dubbing Mode regardless of the setting of DOLBY B NR. The dubbed tape automatically contains the same processing as the source tape.
- When you want to record onto both sides of a tape, you can set Reverse mode on to do so. However, recording automatically stops after recording in the ◄ direction in Reverse mode. Therefore, make sure that the tape direction is ► when recording with Reverse mode on.
- The recording level, which is the volume at which the new tape is being made, is automatically set correctly, so it is not affected by the VOLUME control on the CA-D761T. Thus, during recording you can adjust the sound you are actually listening to without affecting the recording level.
- Two small tabs on the back of the cassette tape, one for side A and one for side B, can be removed to prevent accidental erasure or rerecording. To record on a cassette with the tabs removed, you must cover the holes with adhesive tape first. However, when a type II tape is used, only cover part of the hole as shown, since the other part of the hole is used to detect the tape type.



- When recording, you can hear Sound Mode effects through the speakers or headphones. However, the sound is recorded without Sound Mode effects.
- Type I and Type II tapes can be used for recording.

Note: At the start and end of cassette tapes, there is leader tape which cannot be recorded onto. Depending on the recording source, the first part of the recording may be missing because of the leader. When recording CDs or radio broadcasts, to get the beginning of the recording on the tape, first wind on the leader before beginning recording.

CAUTION: If recordings you have made have excessive noise or static, the Unit may be too close to a TV which was on during the recording. Either turn off the TV or increase the distance between the TV and the CA-D761T.

Standard Recording

This is the basic method for recording any source. The CA-D761T also has special ways for recording CD to tape, and tape to tape, which save you time and effort, as well as give you some special effects. However, when you need to add a selection to a tape you have made, or are combining selections from several sources on one tape, use the method described below; just substitute the source you want into this procedure, such as a tape in Deck A, a CD, or the Tuner. You can also record from VCR with this procedure.

To Record Any Sound Source to Tape

Follow these steps to record from any sound source onto a tape in Deck B.

Using the Unit

1. **Insert a blank or erasable tape into Deck B.**
2. **Press the REVERSE MODE button if you want to record on both sides of the tape.**
   Reverse Mode comes on.
   - When using Reverse Mode, insert the tape so that it will be recorded in the forwards ► direction.
3. **Check the recording direction for the tape.**
   Check that the Tape Direction indicator is the same as that for the tape in the tape deck. If the directions are different, press the ■ button after pressing the ◅ or ▻ button to set the tape direction.
   - When using Reverse Mode to record both sides of a tape, check that the Tape Direction indicator is in the forwards ► direction. If the direction indicator is not in the forwards ► direction, press the ▻ button then press the ■ button.
4. **Prepare the source, by, for example, tuning in a radio station, loading CDs, or turning on connected equipment.**



5. **Press the REC START/STOP button.**
   The Recording indicator light comes on and the CA-D761T begins recording.

Using the Remote Control

1. **Insert a blank or erasable tape into Deck B.**
2. **Press the REC PAUSE button.**
   The Recording indicator light comes on.
3. **Press the REVERSE MODE button on the Unit if you want to record on both sides of the tape.**
   Reverse Mode comes on.
   - When using Reverse Mode, insert the tape so that it will be recorded in the forwards ► direction.
4. **Prepare the source by, for example, tuning in a radio station, loading CDs, or turning on connected equipment.**

5. **Press the ◄ or ► button.**
   Recording starts in the direction of the button pressed.
   - When using Reverse Mode to record both sides of a tape, press the ► button.

CAUTION: Operations other than using the SLEEP timer or changing the CD for the other disc trays, may cause the recording source to be changed.

Notes for Using Reverse Mode for Recording
When recording in Reverse Mode, the CA-D761T automatically stops when it reaches the end of the reverse ◄ direction. To record on both sides of a tape, make sure that the recording direction for the tape inserted into Deck B is forwards ►, and that the Tape Direction indicator is also forwards ►, before you start recording.

To Pause at Any Time during the Recording Process
Press the REC PAUSE button on the Remote Control. Then press either the ◄◄ or ►► button on the Remote Control or REC START/STOP button on the Unit to restart recording.
To Stop at Any Time during the Recording Process
Press the REC START/STOP button on the Unit again, or press the ■ button.

CD Direct Recording

Everything on the CD goes onto the tape in the order it is on the CD, or according to the order you have set in a program.

1. Prepare CDs. (See page 22.)
Check that the CD Player is not playing a CD.

2. Insert a cassette in Deck B to record on.
- ❑ When you want to record on both sides of a tape, press the REVERSE MODE to turn Reverse Mode on. Check that the recording direction for the tape and the Tape Direction indicator are correct. (See "Notes for using Reverse Mode for recording" earlier on this page.)



3. Press the CD REC START button.
"CD REC" is displayed on the display then the Unit plays the CD and starts recording.

At the end of the tape, the CA-D761T automatically goes back to the beginning of the last selection and rerecords it, this time gently fading out at the end. If you selected Reverse Mode, "TAPE SIDE-B STANDBY" scrolls through the display then the reverse side starts with the last selection of the first side. The last selection of the first side will fade out at the end. (A 10 second blank is created at the beginning of the reverse side.)
When the recording is finished, the message "CD REC FINISHED" scrolls by on the display. The CD Player and Cassette Deck stop.

To Stop at Any Time during the Recording Process
Press the REC START/STOP button or the ■ button on the Cassette Deck or CD Player (or the ■ button on the Remote Control).

Note: When making SLEEP timer settings while doing CD Direct recording, set the time so that there is enough leeway to finish the recording before the power goes off. If the time is set to about the length of the CD, the power may go off before recording finishes.

For CD Direct Recording using more than one disc, use a blank tape. If you use a prerecorded tape, prerecorded material may not be erased between newly-recorded tracks.

Auto Edit Recording

Using Auto Edit, you can record the CD tracks to fit the tape, so a selection isn't cut off. Auto Edit is one of the best ways to copy all of a CD onto a tape.
Auto Edit programs the CD tracks in numerical order. To prevent the end of the last selection on the front side from being cut off, the last selection on the front side is selected to fit on the remaining tape length.

1. Prepare CDs. (See page 22.)

2. Press the EDIT button on the Unit.
"DISC-" appears in the display.





3. Press the DISC button for the disc you want to record.
After "TAPE C - -" appears on the display, the optimum tape length for the disc you want to record is displayed.



- ❑ You can select a different length of tape, depending on the actual size of the tape you are using, from eleven possibilities programmed into the CA-D761T: 40, 46, 50, 54, 60, 64, 70, 74, 80, 84, 90. Select the tape length that corresponds to the length of tape you are using, or the nearest length to it, by adjusting the MULTI CONTROL stick left or right.
  - If you pick a tape length shorter than the total playing time of the CD, the last selections on both sides of the tape will be faded out as the tape ends.

4. Press the SET button.
The selections to be recorded on side B of the tape appear on the display.

- ❑ To display the selections that will be recorded on side A of the tape, press the SET button again. The Unit switches between side A and side B with each press of the SET button.
- ❑ To check the selections that will be recorded, press the ⏮ or ⏭ buttons on the Remote Control.

5. Insert a cassette in Deck B to record on.
When you want to record on both sides of a tape, press the REVERSE MODE button to turn Reverse mode on.



6. Press the CD REC START button.
The Unit plays the CD and starts recording. If the tape has not been rewound, the Unit rewinds the tape before starting to record the CD.

When the tape is ready, to prevent the start of a selection being cut, the CA-D761T creates a blank period of 10 seconds before it starts to record the CD. While a blank period is being created, "TAPE SIDE-A STANDBY" scrolls through the display. (The CA-D761T also creates a 10 second blank period at the start of side B of the tape. While a blank period is being created, "TAPE SIDE-B STANDBY" scrolls through the display.)

When the recording is finished, the message "CD REC FINISHED" scrolls by on the display. The CD Player and Cassette Deck stop.

To stop at any time while recording, press the ■ button (CD control or Cassette Deck control) or the REC START/STOP button. If you press the CD control ■ button, the Cassette Deck creates a four second blank space after the CD Player stops. If you press any other button to stop the recording, the CD Player and Cassette Deck stop at the same time.

To cancel Auto Edit, press the ▲ button for disc number being recorded, or press the PROGRAM/ RANDOM button while the CD Player is stopped.

Note: When making SLEEP timer settings while doing Auto Edit recording, set the time so that there is enough leeway to finish the recording before the power goes off. If the time is set to about the length of the CD, the power may go off before recording finishes.

Tape to Tape Recording (Dubbing)

Recording from one tape to another is called dubbing.
You can dub tapes simply, with just a single button.

- ❑ When dubbing tapes, make sure that the playback direction of Deck A and Deck B are the same.
- ❑ When you want to record both sides of a tape, press the REVERSE MODE button to turn Reverse mode on.
- ❑ It is preferable that the type of tape (Type I or Type II) you record from be the same as the type you record onto.

How to Use the DUBBING Button



1. **Insert the source cassette you want to copy from into Deck A for playback.**
2. **Insert the blank or erasable cassette you want to copy onto in to Deck B for recording.**
3. **Press the DUBBING button.**
   Deck A and Deck B will start simultaneously.

To stop dubbing, press the ■ button or REC START/STOP button.

- ❑ Dolby NR is inactive in dubbing mode regardless of the setting of DOLBY B NR. The dubbed tape automatically contains the same processing as the source tape.
- ❑ When doing dubbing with the DUBBING button, you can hear Sound Mode effects through the speakers or headphones. However, the sound is dubbed without Sound Mode effects.

Using the Timers

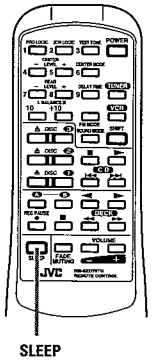

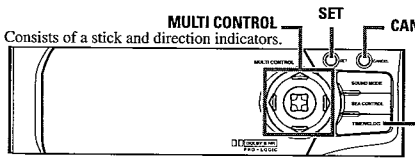

Display

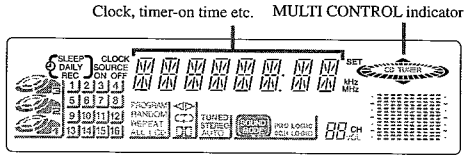

When the CA-D761T is being used, the display shows other items as well. However, we have only shown the items described in this section.

The timers lets you control recording and listening functions automatically.
Three types of timers are available:

- ❑ **DAILY Timer** — Use this timer to set wake up everyday to music from any source, instead of an alarm clock.
- ❑ **REC (Recording) Timer** — Unattended recording of radio broadcasts. You can set the starting time and length of the recording.
- ❑ **SLEEP Timer** — Fall asleep and have your CA-D761T turn off automatically after a certain length of time.

Setting the Clock



The timers depend on the clock: the clock must be right for the timers to work as you expect.
You can set the clock whether the Unit is on or off.
Note that the clock must be set, or the timers cannot be set.

1. **Press the TIMER/CLOCK button.**
   The "CLOCK" indicator and the hour digits blink on the display.
2. **Set the hour by adjusting the MULTI CONTROL stick left or right.**
   Adjust the MULTI CONTROL stick to the right to advance the hour setting, adjust it to the left to decrease the setting. Press the MULTI CONTROL stick continuously to increase or decrease the hour setting rapidly.
3. **Press the SET button.**
   The minute digits blink on the display.
4. **Set the minute by adjusting the MULTI CONTROL stick left or right.**
   Adjust the MULTI CONTROL stick to the right to advance the minute setting, adjust it to the left to decrease the setting. Press the MULTI CONTROL stick continuously to increase or decrease the minute setting rapidly in 10 minute steps.
5. **Press the SET button.**
   "CLOCK OK" appears on the display, and the clock starts at zero seconds from the set time.

CAUTION: If there is a power failure, the clock loses its setting. The display shows "AM 12:00", and the clock must be reset.

Adjusting the Brightness of the Display

In Standby mode, you can adjust the brightness of the clock display.
Pressing the MULTI CONTROL stick in the upwards direction makes the display brighter.
Pressing the MULTI CONTROL stick in the downwards direction makes the display darker.

Setting the DAILY Timer

With this timer you can wake up to music from a CD, tape, your favorite radio program, or other source.

❑ You can set the DAILY Timer whether the Unit is on or off.



Procedure for Setting the DAILY Timer

1. Press the TIMER/CLOCK button so that "DAILY Timer" appears in the display.
The message "DAILY" blinks and the DAILY indicator light blinks on the display.



❑ The display changes with each press of the button, as shown below.
DAILY (blinks) → **ON TIME** (blinks) → **REC** (blinks) → **ON TIME** (blinks) → **CLOCK** (blinks) (Clock setting mode) → original display before the TIMER/CLOCK button was pressed → (back to the beginning)

Note: If the clock has not been set, even if the TIMER/CLOCK button is pressed you cannot select the DAILY Timer.



2. Press the TIMER/CLOCK button again.
The display changes to the On Time display.



3. Set the time you want the Unit to turn on.
Set the time by adjusting the MULTI CONTROL stick left or right in the same way you set the time for the clock. Press the SET button to set the on time.



The "OFF time" hour setting starts to blink after the "ON time" minute setting is set.

4. Set the time you want the Unit to turn off.
Set the time by adjusting the MULTI CONTROL stick left or right in the same way you set the time for the clock. Press the SET button to set the off time.

❑ When the off time has been set, the display changes to the source selection display.



5. Select the source you want to listen to.

To use the Tuner as the source:

1. Adjust the MULTI CONTROL stick left or right until "TUNER" blinks in the display.

2. Adjust the MULTI CONTROL stick up or down to select the preset channel you want to listen to. (Possible only after presetting stations.)



3. Press the SET button.

To use a CD as the source:

1. Adjust the MULTI CONTROL stick left or right until "- CD - - -" blinks in the display.



2. Adjust the MULTI CONTROL stick up or down to select the disc tray containing the CD you want to play.



3. Press the SET button.
If you press the SET button without selecting a disc, the last disc played by the CA-D761T will be used.

4. Adjust the MULTI CONTROL stick up or down to the select the starting track of the CD.
You can only select up to 20 tracks.



5. Press the SET button.
If you press the SET button without selecting a track, playback will start from the first track on the CD.

To use a Cassette Deck as the source:

1. Adjust the MULTI CONTROL stick left or right until "TAPE" blinks in the display.

2. Press the SET button.

To use another source:
Use this to select a radio station that has not been preset.

1. Adjust the MULTI CONTROL stick left or right until "- - - -" blinks in the display.



2. Press the SET button.
The last source used is selected.

6. Setting the Volume Level.
Adjust the MULTI CONTROL stick left or right to set the volume level.

VOLUME - A: Sets the volume level to 10.
VOLUME - B: Sets the volume level to 15.
VOLUME - C: Sets the volume level to 20.
VOLUME - - : Sets the volume to the last volume setting used.

7. Press the SET button.
The "DAILY" indicator changes from a blinking display to a steady display. The ON TIME, OFF TIME, PLAYBACK SOURCE (including the disc number and track number if a CD source is selected) are displayed then the display reverts to the previous display, before the Timer was set.
Turn the power off if you made the timer settings with the power turned on.

- ❑ A few seconds before the start for the timer, the CA-D761T automatically turns on the power, and the "DAILY TIMER" blinks on the display. When the set time is reached, playback starts using the selected source. After the finish time for the timer is reached, the power is automatically turned off again.
- ❑ If a button is pressed when the DAILY Timer is operating, playback continues but the timer is cancelled.

Before Turning Off the Unit
- ❑ If the source is a CD, make sure that there is a CD in the selected disc number.
- ❑ If the source is a tape:
  - The tape in the deck corresponding to the Deck indicator mark is played. Make sure that there is a tape in the selected Cassette Deck.
  - Check that the tape direction is correct. This is important especially when Reverse Mode is off.
  - Set Reverse Mode on if you want to play both sides of the tape.
- ❑ Select the Sound Mode if you want to listen using a Sound Mode effect.

To Change the DAILY Timer Setting
To change the settings for the DAILY Timer, repeat the setting procedure from the beginning.

Turning the DAILY Timer On and Off

Once the DAILY Timer has been set, it will be activated at the same time every day until the setting is turned off.
To turn the DAILY Timer off, press the TIMER/CLOCK button until "DAILY" appears in the display. Press the CANCEL button, "OFF" appears in the display and the DAILY indicator goes out.
To turn the DAILY TIMER on again, press the TIMER/CLOCK button until "DAILY" appears in the display, then press the SET button. The Timer ON TIME, OFF TIME, PLAYBACK SOURCE (including the disc number and track number if a CD source is selected) are displayed on the display.

CAUTION: If the CA-D761T is unplugged, or a power failure occurs, the timer setting will be erased in a few days. If the settings are erased in this way, reset the timer settings.

Setting the REC (Recording) Timer

With the Recording Timer you can make a tape of a radio broadcast automatically whether or not you are home. For the timer to work correctly, you need to make sure of the following in addition to setting the time for the Tuner and Cassette Deck to come on:
- ❑ You can set the REC Timer whether the Unit is on or off.
- ❑ The tape you want to record onto must be in Deck B.



Procedure for Setting the REC Timer

1. Press the TIMER/CLOCK button so that "REC Timer" appears in the display.
The message "REC" blinks and the REC indicator light blinks on the display.

- ❑ The display changes with each press of the button, as shown below.
  DAILY (blinks) → **ON TIME** (blinks) → **REC** (blinks) → **ON TIME** (blinks) → **CLOCK** (blinks) (Clock setting mode) → original display before the TIMER/CLOCK button was pressed → (back to the beginning)

Note: If the clock has not been set, even if the TIMER/CLOCK button is pressed you cannot select the REC Timer.



2. Press the TIMER/CLOCK button again.
The display changes to the On Time display.



3. Set the time you want the Unit to be turned on.
Set the time by adjusting the MULTI CONTROL stick left or right in the same way you set the time for the clock. Press the SET button to set the on time.

4. Set the time you want the Unit to be turned off.
Set the time by adjusting the MULTI CONTROL stick left or right in the same way you set the time for the clock. Press the SET button to set the off time.

5. Select the radio station you want to record.
Set the radio station you want to record by adjusting the MULTI CONTROL stick up or down.

6. Press the SET button.
The "REC" indicator changes from a blinking display to a steady display. The ON TIME, OFF TIME, channel frequency, and preset channel number are displayed then the display reverts to the previous display, before the Timer was set.
Turn the power off if you made the timer settings with the power turned on.

- ❑ A few seconds before the start time for the recording, the CA-D761T automatically turns on the power, and "REC TIMER" blinks on the display. When the start time is reached, recording starts using the selected source. After the finish time for the recording is reached, the power is automatically turned off again.
- ❑ If a button is pressed when the REC Timer is operating, recording continues but the timer is cancelled.

Before the Timer Starts
- ❑ Check that tape direction is correct. This is important especially when Reverse Mode is off.
- ❑ Set Reverse Mode on if you want to record on both sides of the tape.
- ❑ The VOLUME control is automatically set to 0 when REC Timer is recording.

It is very easy, and can be very disappointing, to forget to put in a tape, or to accidentally leave a tape in Deck B you don't want recorded over. Although this happens to almost everyone at one time or another, we hope it won't happen to you!

To Change the Recording Timer Setting
To change the settings for the REC Timer, repeat the setting procedure from the beginning.

Turning the REC Timer On and Off

Once the REC Timer has been used to record a source, the setting is maintained but the Timer is set to OFF.
To turn the REC Timer off before the timer starts, press the TIMER/CLOCK button until "REC" appears in the display, then press the CANCEL button. "OFF" appears in the display and the REC indicator goes out.
To record at the same time again, press the TIMER/CLOCK button until "REC" appears in the display, then press the SET button. The ON TIME, OFF TIME, channel frequency, and preset channel number are displayed then the display reverts to the previous display, before the Timer was set.

CAUTION: If the CA-D761T is unplugged, or a power failure occurs, the timer setting will be erased in a few days. If the settings are erased in this way, reset the timer settings.

Setting the SLEEP Timer

Use the Sleep Timer to turn the Unit off after a certain number of minutes when it is playing. By setting this timer, you can fall asleep to music and know your Unit will turn off by itself rather than play all night.
❑ You can only set the Sleep Timer when the Unit is on and a source is playing.

To set the SLEEP Timer, follow this procedure:

SLEEP

1. With the CA-D761T on and a source playing, press the SLEEP button on the Remote Control.
The message "SLEEP" appears on the display.



2. Set the length of time you want the source to play before shutting off.
❑ Each time you press this button while the "SLEEP" indicator is blinking, it changes the number of minutes shown on the display in this sequence:

→ **10** → **20** → **30** → **60** → **90** → **120** → Cancelled → (back to the beginning)

When the number of minutes you want shows on the display, just wait 5 seconds until the indicator stops blinking, and is lighted steadily.
The Unit is now set to turn off after the number of minutes you set.

To Change the SLEEP Timer Setting
Press the SLEEP button until the number of minutes you want appears on the display.
To Cancel the SLEEP Timer Setting
Press the SLEEP button until the "SLEEP" indicator goes off on the display.
Turning off the Unit also cancels the SLEEP Timer.

Timer Priority

Since each timer can be set independently, you may wonder what happens if the settings overlap. Here are the priorities for each timer:
❑ The REC Timer always has priority. This means that:
- If another timer is set to come on during a time when the REC Timer is operating, the other timer just won't come on at all, so you will always get the entire program on tape.
- If the REC Timer is set to come on while another timer is operating, the other timer will shut off 10 seconds before the REC Timer is set to turn on, and the REC Timer will then take over.

❑ The SLEEP Timer has the least priority. This means that if the SLEEP Timer is set while DAILY Timer is operating, the DAILY Timer settings are cancelled. However, if DAILY Timer is set to come while the SLEEP Timer is operating, the SLEEP Timer setting will be cancelled and the Unit will use the settings from the DAILY Timer.

Example 1

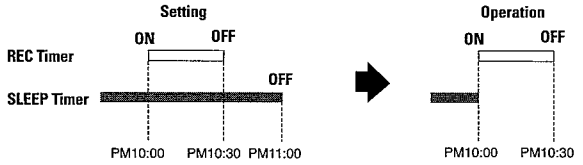

The REC Timer has priority.

Example 2

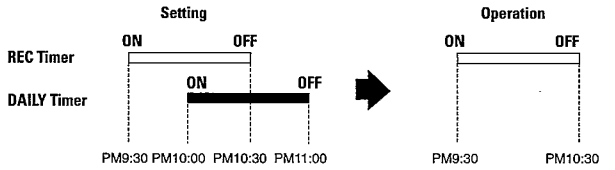

The REC Timer has priority.

Care and Maintenance

Compact Discs

Handle your compact discs, cassette tapes, and Cassette Deck carefully, and they will last a long time.

- Remove the CD from the case by holding it at the edges while pressing the center hole lightly.
- Do not touch the shiny surface of the CD, or bend the CD.

- Put the CD back in its case after use to prevent warping.
- Be careful not to scratch the surface of the CD when placing it back in the case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

- A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line, from center to edge.

CAUTION: Do not use any solvent (for example, conventional record cleaner, spray thinner, benzine, etc.) to clean a CD.

Moisture Condensation

Moisture may condense on the lens inside the Unit in the following cases:

- After starting the heating in the room.
- In a damp room.
- If the unit is brought directly from a cold to a warm place.

Should this occur, the Unit may malfunction. In this case, leave the unit turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

General Notes

In general, you will have the best performance by keeping your tapes, CDs, and the mechanism clean.

- Store tapes and CDs in their cases, and keep them in cabinets or on shelves.
- Keep the Cassette Deck's tape holder and the CD trays closed when not in use.

Cassette Tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotating.
- If the tape is loose, it may get stretched, cut, or caught in the cassette.

- Do not touch the tape surface.

- Do not store the tape:
  - In dusty places
  - In direct sunlight or heat
  - In moist areas
  - On a TV or speaker
  - Near a magnet

Cassette Deck

- If the heads, capstans, and pinch-rollers of the Cassette Deck become dirty, the following will occur:
  - Loss of sound quality
  - Discontinuous sound
  - Fading
  - Incomplete erasure
  - Difficulty recording
- Clean the heads, capstans, and pinch-rollers using a cotton swab moistened with alcohol.

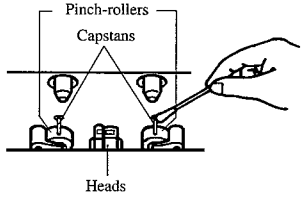

- If the heads become magnetized, the Unit will produce noise or lose high frequencies.
- To demagnetize the heads, turn off the Unit, and use a head demagnetizer (available at electronics and record shops).

Troubleshooting

- If you are having a problem with your CA-D761T, check this list for a possible solution before calling for service.
- If you cannot solve the problem from the hints given here, or the Unit has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action
No sound is heard.	Connections are incorrect, or loose.	Check all connections and make corrections. (See pages 4 - 6.)
Unable to record.	Cassette record protect tabs are removed.	Cover holes on back edge of cassette with tape.
Poor radio reception	• The antenna is disconnected. • The AM Loop Antenna is too close to the Unit. • The FM Wire Antenna is not properly extended and positioned.	• Reconnect the antenna securely. • Change the position and direction of the AM Loop Antenna. • Extend FM Wire Antenna to the best reception position.
The CD skips.	The CD is dirty or scratched.	Clean or replace the CD.
Unable to operate the Remote Control.	• The path between the Remote Control and the sensor on the Unit is blocked. • The batteries have lost their charge.	• Remove the obstruction. • Replace the batteries.
The CD tray cannot be opened.	The main AC power cord is not plugged in.	Plug in the AC power plug.
The CD does not play.	The CD is upside down.	Put the CD in with the label side up.
Operations are disabled.	The built-in microprocessor has malfunctioned due to external electrical interference.	Unplug the Unit then plug it back in.
The cassette door cannot be opened.	During tape playing, the power cord was unplugged.	Plug in the power cord, press the POWER button, and then the ▲ button.

Specifications

Amplifier Section

Output Power	
Front speakers	80 watts per channel, min. RMS into 6 ohms at 1 kHz with no more than 3% total harmonic distortion.
Center speaker (At surround operation)	25 watts, min RMS, driven, into 8 ohms at 1 kHz, with no more than 0.9% total harmonic distortion.
Rear speakers (At surround operation)	12.5 watts per channel, min RMS, both driven, into 16 ohms at 1 kHz, with no more than 0.9% total harmonic distortion.
Input Sensitivity/Impedance (1 kHz)	
VCR	300 mV/45 kohms
Speaker terminals	
Main speakers	6 - 16 ohms

Cassette Deck Section

Frequency Response	
Type II (CrO_2) :	30 - 16,000 Hz
Type I (NORMAL) :	30 - 15,000 Hz
Wow And Flutter	0.15% (WRMS)

CD Automatic Changer Section

CD Capacity	3 discs
Dynamic Range	93 dB
Signal-To-Noise Ratio	98 dB
Wow And Flutter	Unmeasurable

Tuner Section

FM Tuner	
Tuning Range	87.5 - 108.0 MHz
AM Tuner	
Tuning Range	530 - 1,710 kHz

Dimensions	245 × 345 × 350.2 mm (W/H/D) (9-11/16 × 13-5/8 × 13-13/16 inches)
Mass	8.5 kg (18.8 lbs)

Accessories

AM Loop Antenna (1)
Remote Control (1)
Batteries R6P (SUM-3)/AA (15F) (2)
FM Wire Antenna (1)

Power Specifications

Power Requirements	AC 120 V ∿, 60 Hz
Power Consumption	180 watts/240 VA 20 watts (in standby mode)

Design and specifications are subject to change without notice.

Description of ICs

■ MN172412K8L1(IC902) : TUNER / DISPLAY Controller

1. Terminal layout

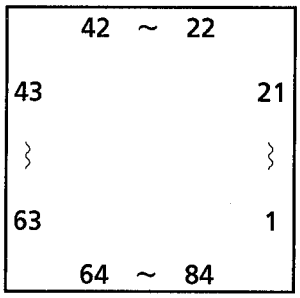

2. Terminal Function

Pin No.	Symbol	I/O	Functions and Operations	Pin No.	Symbol	I/O	Functions and Operations
1	7G	O	FL grid control	49	RDS RST	I	Reset signal from IC191
2	8G	O	FL grid control	50	/TUNED	I	TUNED indication control
3~15	P1~P13	O	FL anode control	51	/STEREO	I	STEREO indication control
16	P14	O	FL anode control	52	MUTE	O	Muting of tuner sound
17	P15	O	FL anode control	53	DCSOUT	O	Compulink signal output
18	P16	O	FL anode control	54	DCSIN	I	Compulink signal input
19	P20	O	FL anode control	55	CS2	I	chip select terminal input
20	P19	O	FL anode control	56	KI1	I	Key matrix input
21	P18	O	FL anode control	57	KI2	I	Key matrix input
22	P17	O	FL anode control	58	KI3	I	Key matrix input
23	-BP	--	Power supply for FL display	59	KI4	I	Key matrix input
24	P36	O	FL anode control	60	IFDATA	I	Data from PLL synthesizer
25	P35	O	FL anode control	61	CE	O	Chip enable signal for PLL synthesizer
26	P34	O	FL anode control	62	CK	O	Clock for PLL synthesizer
27	P33	O	FL anode control	63	TUDATA	O	Data for PLL synthesizer
28	P32	O	FL anode control	64	CS1	I	chip select terminal input
29	P31	O	FL anode control	65	C-REQ	I	Communication request data to IC301
30	P30	O	FL anode control	66	C-CLK	O	Communication data clock to IC301
31	P29	O	FL anode control	67	C-DATA	O	Communication data to IC301
32	P28	O	FL anode control	68	/RESET	I	RESET signal input
33	P27	O	FL anode control	69	GND	--	Connected to GND
34	P26	O	FL anode control	70	X1	--	Non connection
35	P25	O	FL anode control	71	X2	--	Connected to GND
36	P24	O	FL anode control	72	OSC2	I/O	Clock oscillation terminal
37	P23	O	FL anode control	73	OSC1	I/O	Clock oscillation terminal
38	P22	O	FL anode control	74	VDD	--	Power supply (+B5V)
39	P21	O	FL anode control	75	T-REQ	I	Request signal to IC901
40	FOUT	O	Clock frequency	76	T-CLK	O	Clock signal to IC901
41	SPISTB	O	Strobe signal for IC903	77	T-DATA	O	Data for IC901
42	SPIDT1	O	Data input from IC903	78	NC	--	Non connection
43	SPIDTO	O	Data output for IC903	79	1G	O	FL grid control
44	SPICSB	O	Chip select output for IC903	80	2G	O	FL grid control
45	RDS CK	O	Clock input from IC191	81	3G	O	FL grid control
46	RDS DATA	O	Data signal from IC191	82	4G	O	FL grid control
47	RDS RST	O	Reset signal for IC191	83	5G	O	FL grid control
48	/TUINH	I	Inhibit signal Input	84	6G	O	FL grid control

■ MN17P3222JAAX1(IC301) : DECK/CD Controller

1. Terminal layout

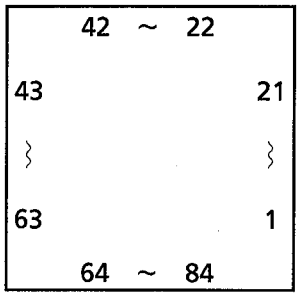

3. Terminal Function

Pin No.	Symbol	I/O	Functions and Operations	Pin No.	Symbol	I/O	Functions and Operations
1	/APACK	I	APACKswitch detect input	49	/RESTSW	I	Traverse REST sw input
2	AEQ	O	It is "L" when CrO2 tape is in deck A	50		--	Connected to GND
3	DECKAI	O	DECKA indicater control	51		--	Connected to GND
4	DECKBI	O	DECKB indicater control	52	/RST	O	CD Lsi reset signal output
5		--	Non connection	53	MLD	O	Command load signal output to CD Lsi
6		--	Non connection	54	MDATA	O	Command data output to CD Lsi
7	RECI	O	Indication control	55	MLCK	O	Command clock signal output to CD Lsi
8	PON IND	O	Power indicater control	56	DATA	O	Communication data to changer μ-com
9	DISC1IND	O	DISC1 indicater control	57	SCK	O	Communication clock signal to changer μ-com
10	DISC2IND	O	DISC2 indicater control	58	CHST	I	Strobe signal to changer μ-com
11	DISC3IND	O	DISC3 indicater control	59	REQ1	I	Request signal to changer μ-com
12	PBEQ	O	Play back	60		--	Connected to GND
13	MSIN	I	music scan signal input	61		--	Connected to GND
14	NR	O	NR control signal	62		--	Connected to GND
15	/CAPN	O	Capstan (ON/OFF) control	63	CS	--	Connected to GND
16	BPLZ	O	B mecha. solenoide control	64		--	Connected to GND
17	APLZ	O	A mecha. solenoide control	65		--	Connected to GND
18		--	Connected to GND	66		--	Connected to GND
19		--	Non connection	67		--	Connected to GND
20	BMT	O	It is 'H'when Deck B is not playing	68	/RESET	I	CD reset signal input
21	OMT	O	Deck PB Mute control signal	69	GND	--	Connected to GND
22	RMT	O	Recording mute signal output	70	NC	--	Non connection
23		--	Non connection	71	GND	--	Connected to GND
24	/PB/REC	O	Rec. P.B select signal output	72	OSC	I	Osilaltion terminal
25	REC	O	It is "H" when recording	73	OSC	--	Osilaltion terminal
26	BIAS	O	REC bias ON/OFF control	74	VDD	--	+5V
27~39		--	Connected to GND	75	DCS IN	I	DCS signal input
40	C-REQ	O	Communication request data output to IC902	76	DCS OUT	O	DCS signal output
41	C-CLK	I	Clock signal input from IC902	77	APLS	I	A mech. reel palse input
42		--	Non connection	78	BEQ	O	Play equalizer control
43	C-DATA	I	Command data output to IC902	79	/PSWB	I	B mech. play switch input
44		--	Connected to GND	80	BPLS	I	B mech.pranger control output
45	SQCK	O	Outside lock for sub-code Q resister output	81	/FREC	I	FREC switch detect input
46	SUBQ	I	Sub code and Q register signal input	82	/RREC	I	RREC switch detect input
47	LSION	O	CD Lsi on signal output	83	/BPACK	I	BPACKswitch detect input
48	STAT	O	STATUS signal (CRC,CUE,CLVS,TTSTOP,ECLV,SQOK)	84	/PSWA	O	A mech. play switch input

■ HD404719A71FS(IC901) : AMP Controller

1. Terminal layout

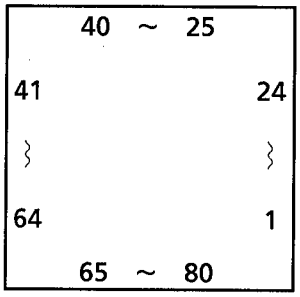

2. Terminal Function

Pin No.	Symbol	I/O	Functions and Operations	Pin No.	Symbol	I/O	Functions and Operations
1	IN6	I	Key input (A/D convert)	40		--	Not use
2	/INH	I	Inhibit signal input	41	CDI	O	CD indication control
3	/PRT	I	Protector signal input	42	TUI	O	TUNED indication control
4	AD GND	--	Connected to GND	43	TAPEI	O	TAPE indication control
5	RESET	I	Reset signal input	44	VCRI	O	VCR indication control
6	OSC1	I/O	Clock oscillation terminal	45		--	Not use
7	OSC2	I/O	Clock oscillation terminal	46	APOI	O	APO indication control
8	GND	--	Connected to GND	47	BASSI	O	BASS indication control
9		--	Connected to GND	48	STUNDBYI	O	STNDBY indication control
10		--	Not use	49		--	Connected to GND
11	/TEST	O	Pull up	50~57		--	Not use
12	VCC	--	Power supply	58	SCK	O	Clock for IC401
13	RDS	O	Chip select teminal	59	SDA1	O	Data for IC401
14	PROLOGIC	O	Chip select teminal	60		--	Not use
15	KARAOKE	O	Chip select teminal	61	/RMIN	I	Remote control signal input
16	ECHO	O	Chip select teminal	62		--	Not use
17	SABASS	O	Chip select teminal	63	T-DATA	I	Communication data from IC302
18	HPIN	I	Head phone detect	64	T-REQ	O	Communication request data to IC302
19	CDRESET	O	CD servo Lsi reset signal outrput	65	T-CLK	O	Communication data clock from IC302
20	/TUINH	O	Tuner Inhibit signal output	66~68		--	Not use
21	TURESET	O	Tuner reset signal outrput	69	JOG2	I	Input 2 Jog pulse
22	DCSIN	I	Compulink signal data input	70	JOG1	I	Input 1 Jog pulse
23	DCSOUT	O	Compulink signal data output	71		--	Not use
24	ACO	O	Power suplly control signal	72	SMUTE	O	Source Mute control signal
25	CONT.A	O	KARAOKE on/off control signal	73	ECHO2	O	Echo2 signal output
26,27		--	Not use	74	ECHO1	O	Echo1 signal output
28	RERAY1	O	Speaker relay on/off signal output	75	AD Vcc	---	Power supply (+B5V)
29		--	Not use	76	IN1	I	Key input (A/D convert)
30	SURR	O	Surrund ON/OFF control signal	77	IN2	I	Key input (A/D convert)
31		--	Not use	78	IN3	I	Key input (A/D convert)
32~38		--	Not use	79	IN4	I	Key input (A/D convert)
39		--	Not use	80	IN5	I	Key input (A/D convert)

■ UPD65612GB-165(IC801) : Changer Controller

1. Terminal Layout

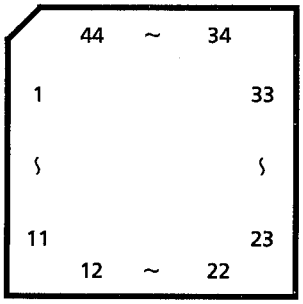

2. Pin Functions

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	NC	--	Non connection	23	2SSW	I	TRAY2 switch input signal
2	NC	--	Non connection	24	1SSW	I	TRAY1 switch input signal
3	NC	--	Non connection	25	NC	--	Non connection
4	OS1I	I	Oscillation terminal	26	CAM0	I	Cam switch input signal for LCAM
5	OS1O	O	Oscillation terminal	27	CAM1	I	Cam switch input signal for LCAM
6	OS2I	I	Oscillation terminal	28	CAM2	I	Cam switch input signal for LCAM
7	OS2O	O	Oscillation terminal	29	CAM3	I	Cam switch input signal for LCAM
8	NC	--	Non connection	30	CAM4	I	Cam switch input signal for RCAM
9	C25IN	I	Connected to C25OUT	31	CAM5	I	Cam switch input signal for RCAM
10	C25OUT	O	Connected to C25IN	32	CAM6	I	Cam switch input signal for RCAM
11	RESET	I	Reset signal input	33	CAM7	I	Cam switch input signal for RCAM
12	REQ	O	Output the "mecha. data request"	34	FIT	O	Connected to C50
13	DATA	I/O	Control,Status data I/O	35	C50	I	Connected to FIT
14	ST	I	Strobe signal input	36	LMUP	O	L motor control signal
15	CKS	I	Clock input	37	LMDWN	O	L motor control signal
16	SELECT	--	Connected to GND	38	C25	--	Non connection
17	GND	--	GND	39	VDD	--	Power supply terminal
18	CK	--	Connected to GND	40	C100	--	Non connection
19	1MSW	I	TRAY1 switch input signal	41	RMUP	O	R motor control signal
20	2MSW	I	TRAY2 switch input signal	42	RMDWN	O	R motor control signal
21	3MSW	I	TRAY3 switch input signal	43	NC	--	Non connection
22	3SSW	I	TRAY3 switch input signal	44	NC	--	Non connection

■ LA1837 (IC102) : FM AM IF AMP & detector, FM MPX Decorder

1. Terminal Layout

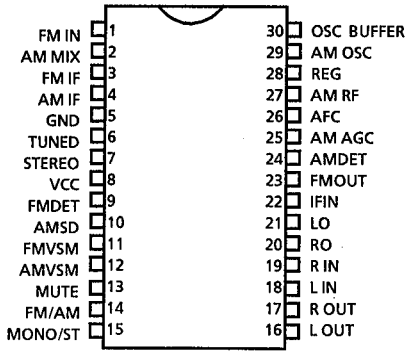

3. Pin Function

Pin No.	Symbol	I/O	Function
1	FM IN	I	This is an input terminal of FM IF Signal.
2	AM MIX	O	This is an output terminal for AM mixer.
3	FM IF	I	Bypass of FM IF
4	AM IF	I	Input of AM IF Signal.
5	GND	—	This is the device ground terminal.
6	/TUNED	O	When the set is tunning , this terminal becomes "L".
7	STEREO	O	Stereo indicator output. Stereo : "L", Mono : "H"
8	VCC	—	This is the power supply terminal.
9	FM DET	—	FM detect transformer.
10	AM SD	—	AM ceramic filter terminal
11	FM VSM	O	Fix the sensitivity of FM tuned
12	AM VSM	O	Fix the sensitivity of AM tuned
13	MUTE	O/I	When the signal of IF REQ of IC121(LC72131) appear, the signal of FM/AM IF output. //Muting control input.
14	FM/AM	I	Change over the FM / AM input. "H" : FM, "L" : AM
15	MONO/ST	O	Stereo : "H", Mono : "L"
16	L OUT	O	Left channel signal output.
17	R OUT	O	Right channel signal output
18	L IN	I	Input terminal of the Left channel post AMP.
19	R IN	I	Input terminal of the Right channel post AMP.
20	R OUT	O	Mpx Right channel signal output.
21	L OUT	O	Mpx Left channel signal output.
22	IF IN	I	Mpx input terminal.
23	FM OUT	I	Voltage controlled oscillator terminal.
24	AM DET	—	AM low cut adjustment.
25	AM AGC	I	This is an AGC voltage input terminal for AM.
26	AFC	—	This is an output terminal of voltage for FM-AFC.
27	AM RF	I	This is an input terminal for AM RF signal.
28	REG	—	Control of desides the frequency width
29	AM OSC	—	This is a terminal of AM Local oscillation circuit.
30	OSC BUFFER	O	AM Local oscillation Signal output.

2. Block Diagram

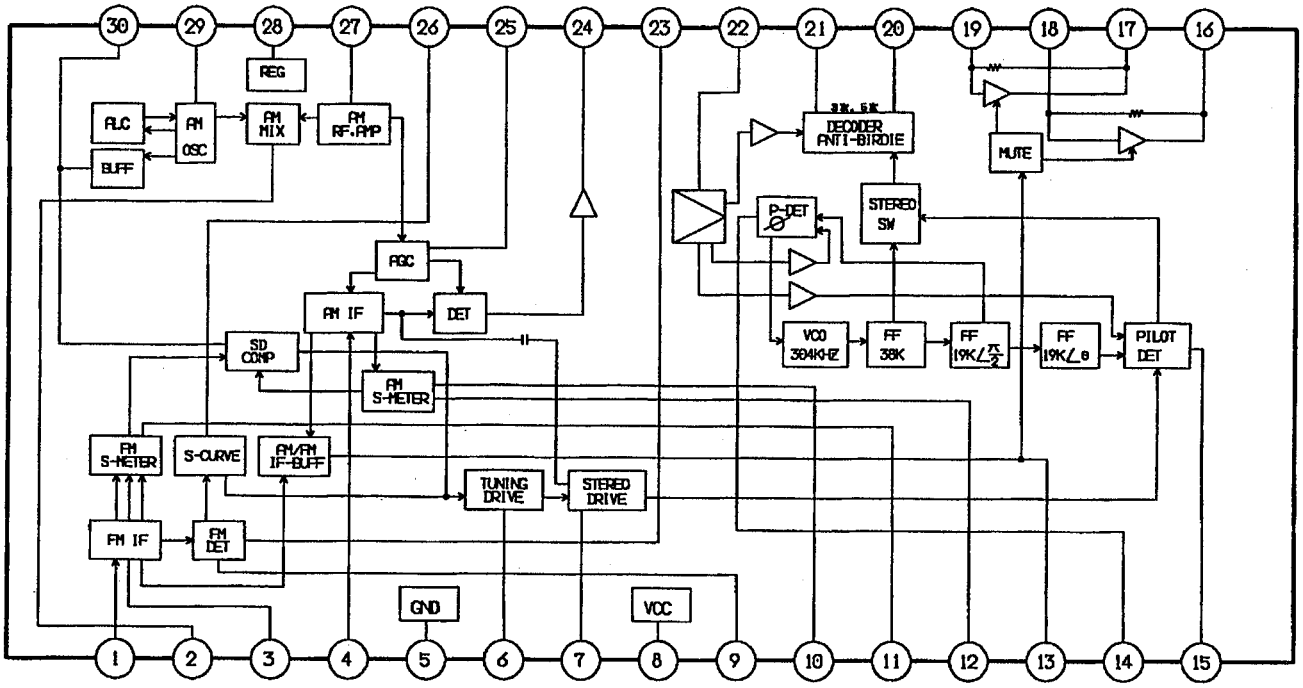

■ LC72131 (IC121) : PLL Synthesizer

1. Terminal Layout

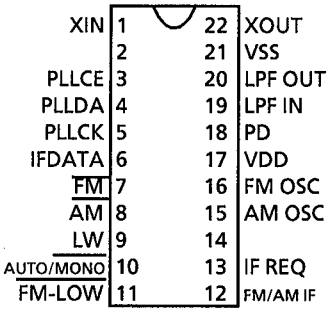

2. Block Diagram

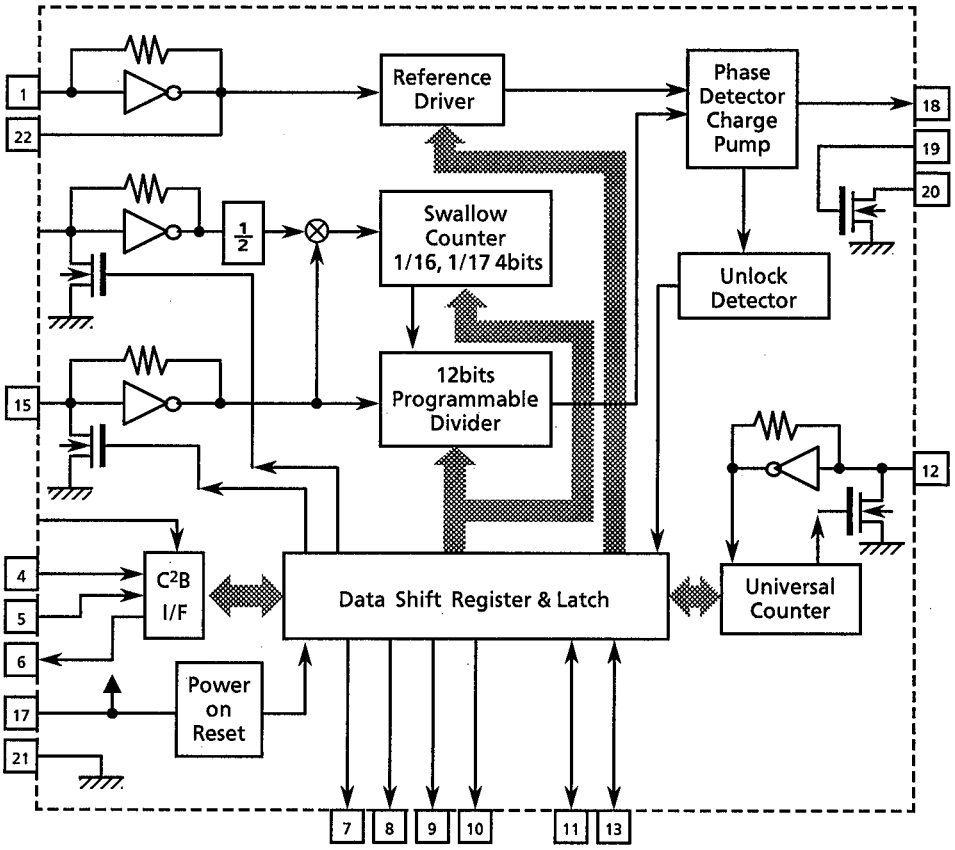

3. Pin Functions

Pin No.	Symbol	I/O	Functions	Pin No.	Symbol	I/O	Functions
1	X in	I	Crystal oscillator (7.2MHz).	12	FM/AM IF	I	Universal counter input
2		--	Not nse	13	IF REQ	O	Output the "IF-signal request" to IC102
3	PLLCE	I	Fix the chip enable to "H" when inputting(DI) and outputting (DO) the serial data	14		I	Not use
4	PLLDA	I	Receive the control data from the controller (IC201).	15	AMOSC		Input the local oscillator signal of AM.
5	PLLCK	I	This clock is used to synchronize data when transmitting the data of DI and DO.	16	FM OSC	I	Input the local oscillator signal of FM.
6	IFDATA	O	Transmit the data from LC72131 to the controller which is synchronized with CK.	17	VDD	O	This is a terminal of power supply.
7	$\overline{\text{FM}}$	O	It is "L" on FM mode.	18	PD	O	PLL charge pump output : When the local oscillator signal frequency is higher than the reference frequency high level signals will output. When it is lower than the reference frequency, low level signals will output. When it is same as reference frequency signals, it will be floating.
8	$\overline{\text{AM}}$	O	It is "L" on MW mode.	19	LPF IN	I	Transistor used for the PLL active low-pass filterr
9	LW	O	It is "L" on LW mode.	20	LPF OUT	O	Transistor used for the PLL active low-pass filterr
10	$\overline{\text{AUTO}}$ MONO	O	It is "L" on monaural, "H" on auto.	21	VSS	--	Connected to GND
11	$\overline{\text{POWER}}$	O	Regulator control singal P ON "H", STANDBY "L"	22	X out	O	Crystal oscillator (7.2MHz).

■ BA15218 (IC402,403,407,562,912) : Dual OP Amp.

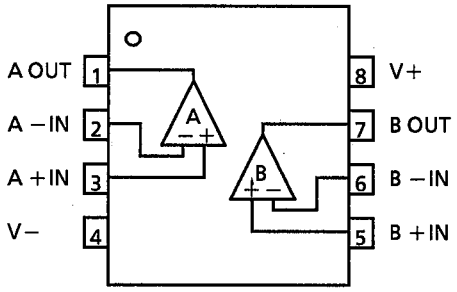

■ BA15218N (IC302,303) : Dual OP Amp.

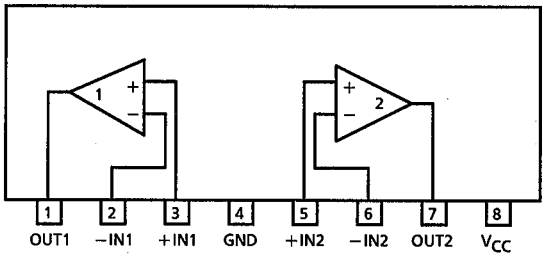

■ HA12136A(IC231) : NR amplifier

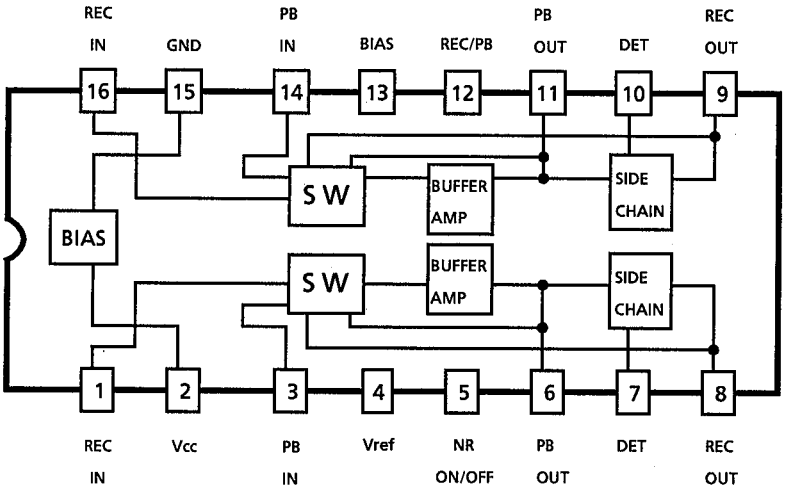

■ MN35510 (IC603) : DIGITAL SERVO & DIGITAL SIGNAL PROCESSER

1. Terminal Layout

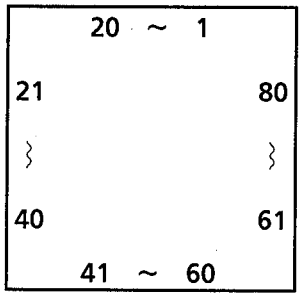

2. Block Diagram

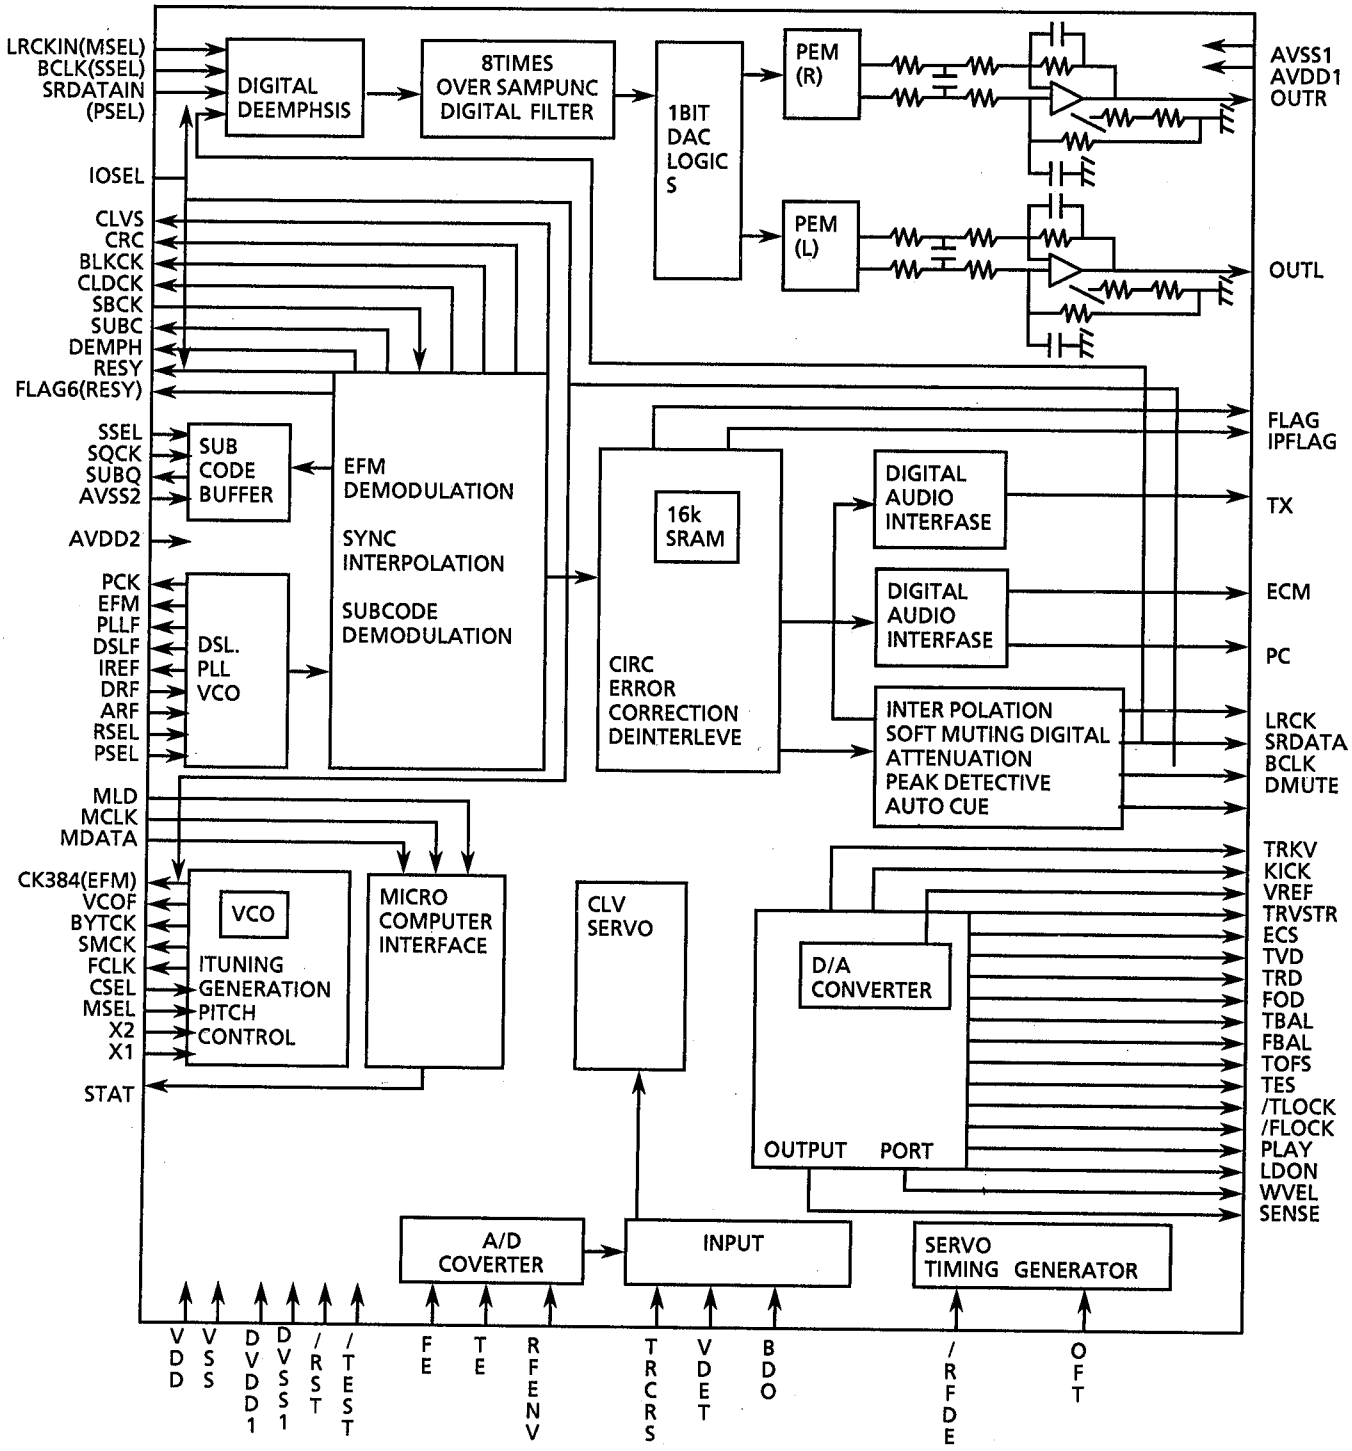

3. Description

Pin No.	symbol	I/O	Description	Pin No.	symbol	I/O	Description
1	BCLK	O	Bit clock output pin SRDATA	41	TES	O	Tracking error shunt signal output (H;shunt)
2	LRCK	O	L/R distinction signal output	42	PLAY	—	Not used
3	SRDATA	O	Serial data output	43	WVEL	—	Not used
4	DVDD1	—	Power supply(Digital)	44	ARF	I	RF signal input
5	DVSS1	—	Connected to GND (Digital)	45	IREF	I	Reference current input pin
6	TX	O	Not use	46	DRF	—	Connected to GND
7	MCLK	I	μ-com command clock signal input (Data is latched at signal's rising point)	47	DSLF	I/O	Loop filter pin for DSL
8	MDATA	I	μ-com command data input	48	PLLF	I/O	Loop filter pin for PLL
9	MLD	I	μ-com command load signal input	49	VCOF	—	Connected to GND
10	SENSE	O	Not used	50	AVDD2	—	Power supply (Analog)
11	FLOCK	O	Not used	51	AVSS2	—	Connected to GND(Analog)
12	TLOCK	O	Not used	52	EFM	—	Not used
13	BLKCK	O	Subcode · block · clock signal output	53	PCK	—	Not used
14	SQCK	I	Outside lock for sub-code Q resister input	54	PDO	—	Not used
15	SUBQ	O	Sub-code Q-code output	55	SUBC	—	Not used
16	DMUTE	—	Connected to GND	56	SBCK	—	Not used
17	STATUS	O	Status signal (CRC,CUE,CLVS,TTSTOP,ECLV,SQOK)	57	VSS	—	Connected to GND(for X'tal cscillation circuit)
18	RST	I	Reset signal input (L :Reset)	58	X1	I	Input of 16.9344MHz X'tal oscillation circuit
19	SMCK	—	Not used	59	X2	O	Output of X'tal oscillation circuit
20	PMCK	—	Not used	60	VDD	—	Power supply(for X'tal cscillation circuit)
21	TRV	O	Traverse enforced output	61	BYTCK	—	Not used
22	TVD	O	Traverse drive output	62	CLDCK	—	Not used
23	PC	—	Not used	63	FCLK	—	Not used
24	ECM	O	Spindle motor drive signal (Enforced mode output) 3-State	64	IPPLAG	—	Not used
25	ECS	O	Spindle motor drive signal (Servo error signal output)	65	FLAG	—	Not used
26	KICK	O	Kick pulse output	66	CLVS	—	Not used
27	TRD	O	Tracking drive output	67	CRC	—	Not used
28	FOD	O	Focus drive output	68	DEMPH		Not used
29	VREF	I	Reference voltage input pin for D/A output block(TVD,FOD,FBAL,TBAL)	69	RESY	—	Not used
30	FBAL	O	Focus Balance adjust signal output	70	IOSEL	—	Pull up
31	TBAL	O	Tracking Balance adjust signal output	71	TEST	—	Pull up
32	FE	I	Focus error signal input(Analog input)	72	AVDD1	—	Power supply (Digital)
33	TE	I	Tracking error signal input(Analog input)	73	OUT L	O	Lch audio output
34	RF ENV	I	RF envelope signal input(Analog input)	74	AVSS1	—	Connected to GND
35	VDET	I	Vibration detect signal input(H : detect)	75	OUT R	O	Rch audio output
36	OFT	I	Off track signal input(H : off track)	76	RSEL	—	Pull up
37	TRCRS	I	Track cross signal input	77	CSEL	—	Connected to GND
38	RFDET	I	RF detect signal input (L : detect)	78	PSEL	—	Connected to GND
39	BDO	I	BDO input pin (H : drop out)	79	MSEL	—	Connected to GND
40	LDON	O	Laser ON signal output (H : on)	80	SSEL	—	Pull up (+5V)

■ AN8806SB (IC601) : RF & SERVO AMP

1. Terminal Layout

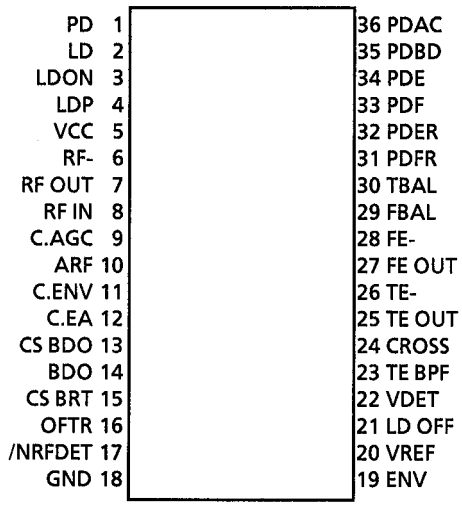

2. Block Diagram

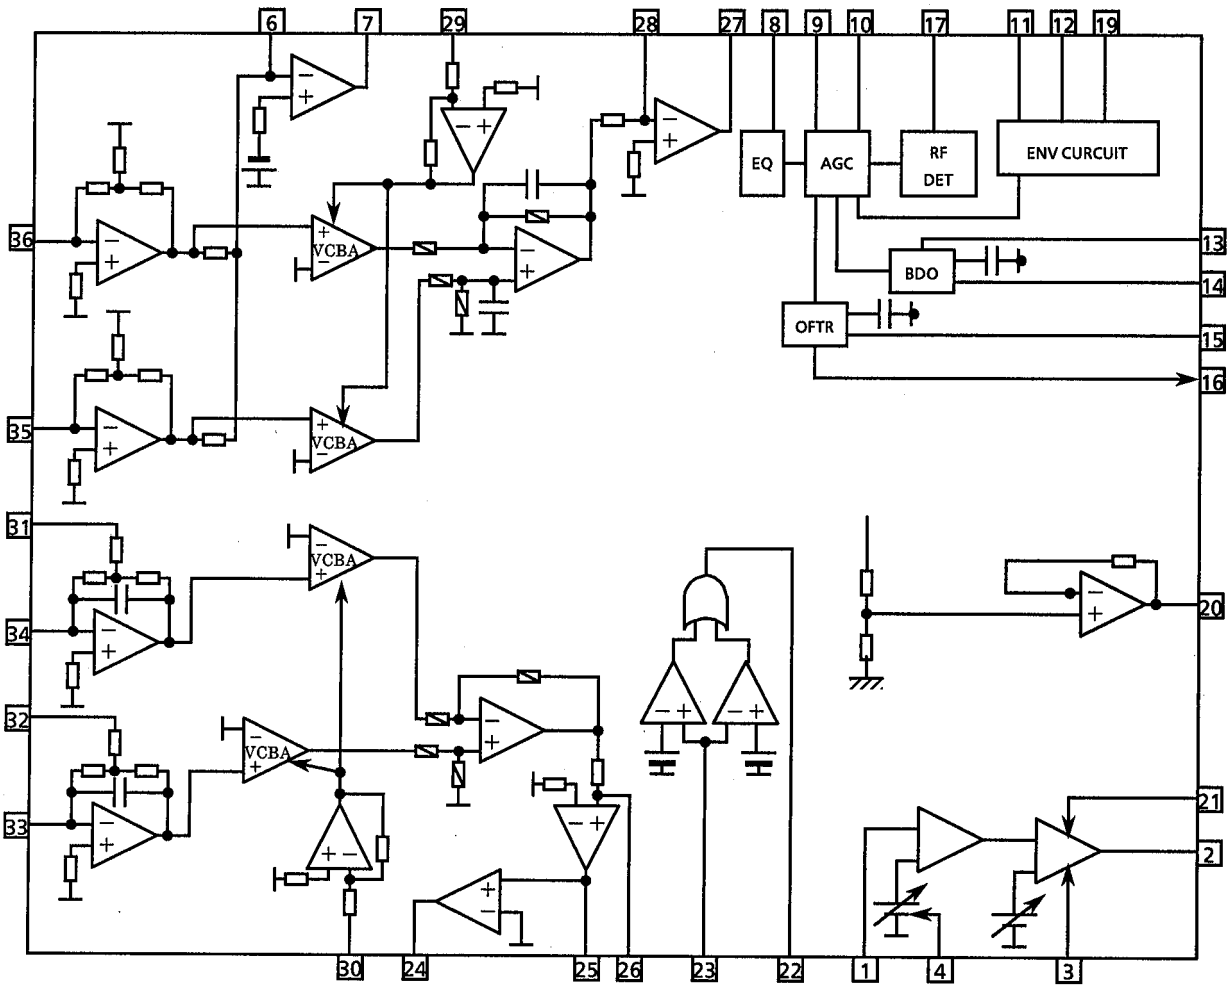

3. Functions

Pin No.	Symbol	I/O	Functions and operations
1	PD	I	APC amp input terminal
2	LD	O	APC amp output terminal
3	LD ON	I	APC ON/OFF control terminal
4	LDP	--	Connected to ground
5	VCC	--	Power supply
6	RF-	I	Inverse input pin for RF amp
7	RF OUT	O	RF amp output
8	RF IN	I	RF input
9	C.AGC	I/O	Connecting pin of AGC loop filter
10	ARF	O	RF output
11	C.ENV	I/O	A capacitor is connected to this terminal to detect the envelope of RF signal
12	C.EA	I/O	A capacitor is connected to this terminal to detect the envelope of RF signal
13	CS BDO	I/O	A capacitor is connected to detect the lower envelope of the RF signal
14	BDO	O	BDO output pin
15	CS BRT	I/O	A capacitor is connected to detect the lower envelope of the RF signal
16	OFTR	O	Of-track status signal output
17	/NRFDET	O	RF detection signal output
18	GND	--	Ground
19	ENV	O	Envelope output
20	VREF	O	Reference voltage output
21	LD OFF	--	Connect to ground
22	VDET	O	Vibration detection signal output
23	TE BPF	I	Input pin of tracking error through BPF
24	CROSS	O	Tracking error cross output
25	TE OUT	O	Tracking error signal output
26	TE-	I	Inverse input pin for tracking error amp
27	FE OUT	O	Output pin of focus error
28	FE-	I	Inverse input pin for focus error amp
29	FBAL	I	Focus balance control
30	TBAL	I	Tracking balance control
31	PDFR	I/O	F I-V amp gain control
32	PDER	I/O	E I-V amp gain control
33	PDF	I	I-V amp input
34	PDE	I	I-V amp input
35	PD BD	I	I-V amp input
36	PD AC	I	I-V amp input

■ LV1016 (IC541) : Dolby Surround Passive Decoder

1. Terminal Layout

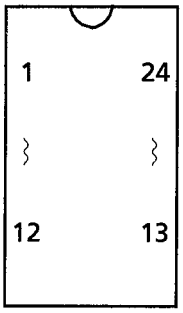

2. Block Diagram

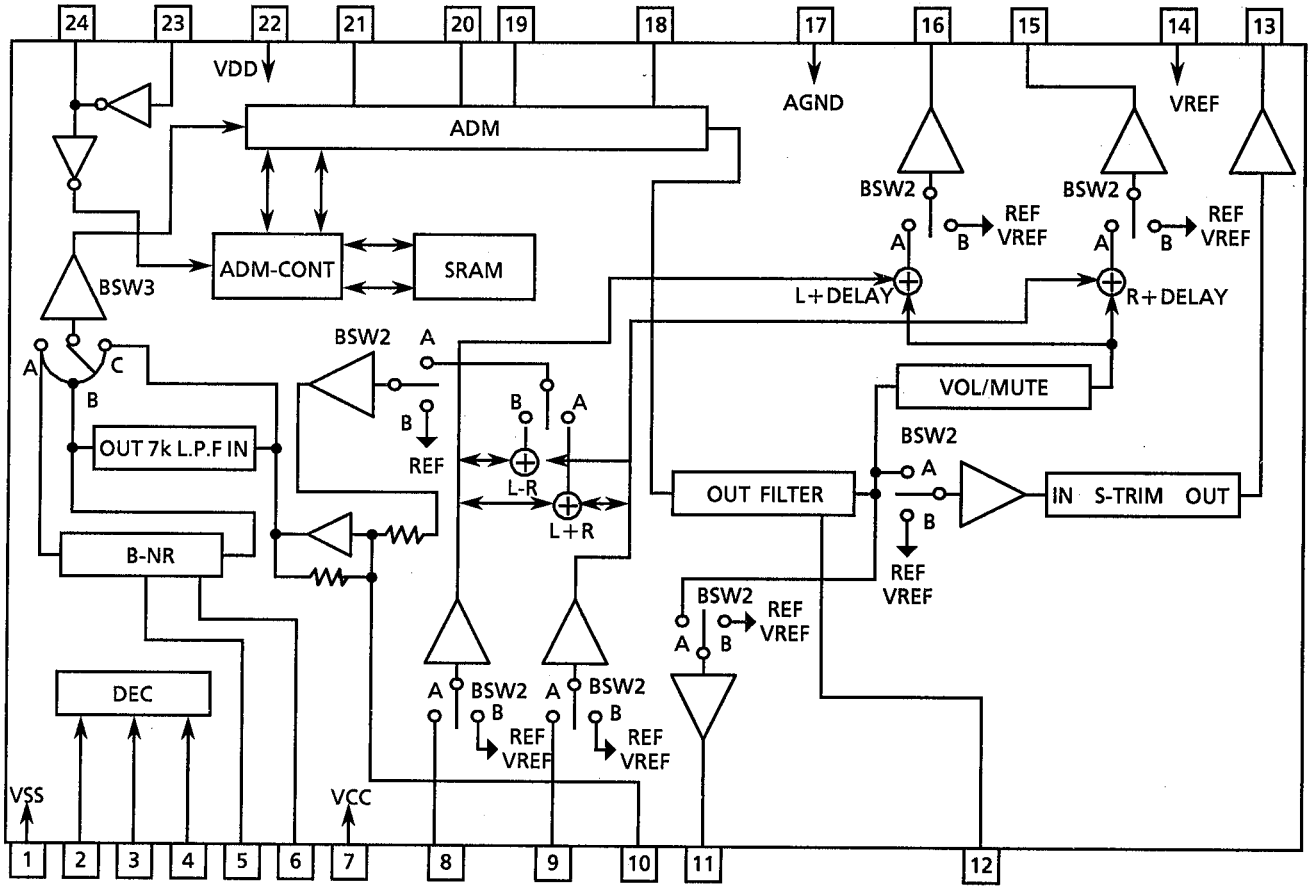

3. Pin Functions

Pin No.	Symbol	I/O	Functions
1	DGND	--	Digital GND
2	CLK	I	Serial interface clock
3	DATA	I	Serial interface data input
4	STB	I	Strobe signal input
5	NR-DET	--	Capacitor for noise reduction detection
6	NR-IREF	--	Resistor for noise reduction reference current
7	VCC	--	Supply
8	L-IN	I	Left channel signal input
9	R-IN	I	Right channel signal input
10	S-IN	I	Surround signal input
11	DELAY-OUT	--	Not used
12	DC-CUT	--	Capacitor for DC-cut
13	S-OUT	O	Surround signal output
14	VREF	--	Analog reference voltage
15	R-MIX-OUT	--	Not used
16	L-MIX-OUT	--	Not used
17	ADND	--	Analog ground
18	DC-CUT	--	Capacitor for DC-cut
19	D/A	--	Capacitor for integrator
20	NOISE SHAPER	--	Capacitor for noise shaper
21	A/D	--	Capacitor for integrator
22	VDD	--	Supply for the digital section
23	OSC	--	Oscillation terminal
24	OSC	--	Oscillation terminal

■ LA2786 (IC501) : Dolby Pro Logic Surround Signal Processor

1. Terminal Layout

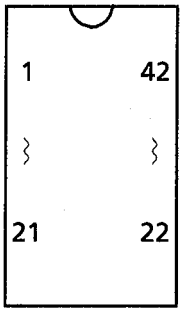

2. Pin Functions

Pin No	Symbol	I/O	Functions	Pin No	Symbol	I/O	Functions
1	NS-BPF1	--	Capacitor for spectrum filter in noise sequencer	22	VCS-1	--	Capacitor for time constant (in log differential area)
2	NS-BPF2	--	Capacitor for spectrum filter in noise sequencer	23	VCS-2	--	Capacitor for time constant (in log differential area)
3	VREF	--	Analog reference voltage	24	VCS-TH	--	Capacitor for time constant (in log differential area)
4	S-DC-OUT	--	Capacitor for DC-cut Sch	25	L+R RECT	--	Capacitor for Center channel detection
5	C-DC-OUT	--	Capacitor for DC-cut Cch	26	DC-CUT	--	Capacitor for DC-cut at detection circuit
6	L-DC-OUT	--	Capacitor for DC-cut Lch	27	L−R RECT	--	Capacitor for Surround channel detection
7	R-DC-OUT	--	Capacitor for DC-cut Rch	28	DC-CUT	--	Capacitor for DC-cut at detection circuit
8	VREF-BUFFER	--	VREF low impedance	29	R-BPF3	--	LPF,HPF for Right channel control circuit
9	L-IN	I	Left channel signal input	30	R-BPF2	--	LPF,HPF for Right channel control circuit
10	R-IN	I	Right channel signal input	31	R-BPF1	--	LPF,HPF for Right channel control circuit
11	GND	--	Ground	32	C-TRIM DC-CUT	--	Capacitor for DC-cut Center channel
12	L-BPF1	--	LPF,HPF for Lch control circuit	33	C-MODE-CAP	--	Capacitor for Center channel output low-pass filter
13	L-BPF2	--	LPF,HPF Left channel control circuit	34	C-OUT	O	Center signal output
14	L-BPF3	--	LPF,HPF Left channel control circuit	35	S-OUT	O	Surround signal output
15	DC-CUT	--	Capacitor for DC-cut at detection circuit	36	R-OUT	O	Right channel signal output
16	R RECT	--	Capacitor for Right channel detection	37	L-OUT	O	Left channel signal output
17	DC-CUT	--	Capacitor for DC-cut at detection circuit	38	VCC	--	power supply
18	L RECT	--	Capacitor for Left channel detection	39	OSC	--	Oscillation for noise sequencer and auto balance
19	VLR-TH	--	Capacitor for time constant (in log differential area)	40	STB	I	Strobe signal input
20	VLR-2	--	Capacitor for time constant (in log differential area)	41	DATA	I	Serial interface data input
21	VLR-1	--	Capacitor for time constant (in log differential area)	42	CLK	I	Serial interface clock

■ BA6897FP(IC602) : 4channel driver

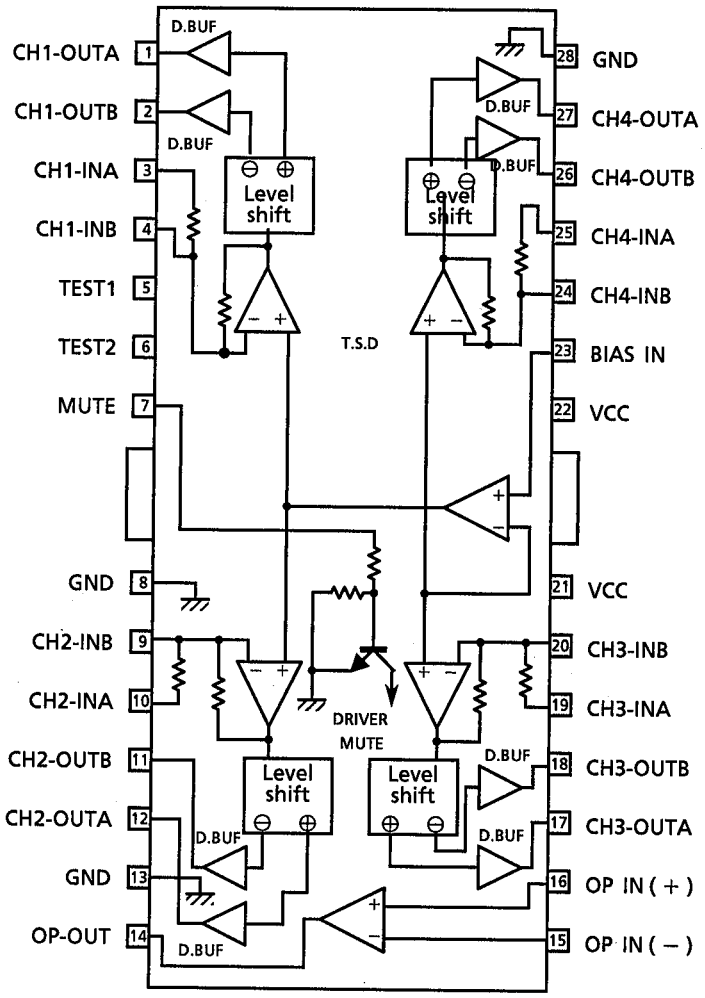

T.S.D : sermal shat down
D.BUF : Drive buffer

■ GP1U271X (IC904) : Receiver for remote controller

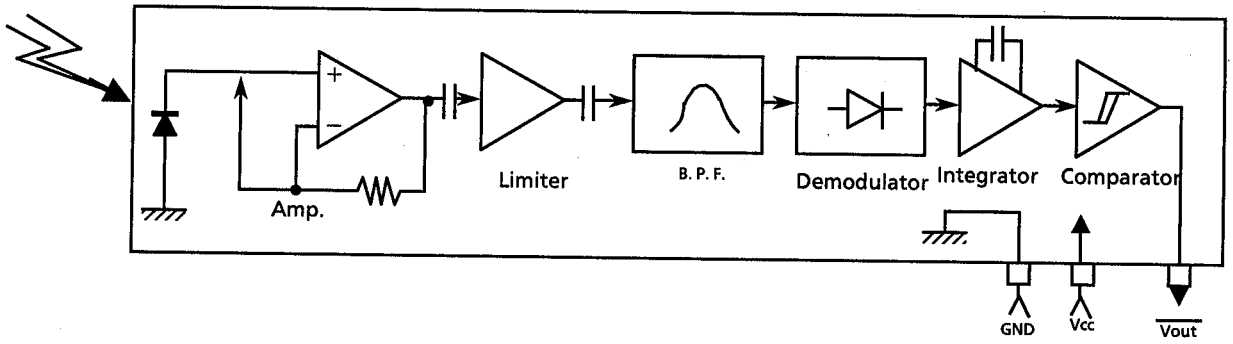

■ HA12206NT (IC305) : P.B & EQ/REC Amp.

Block Diagram

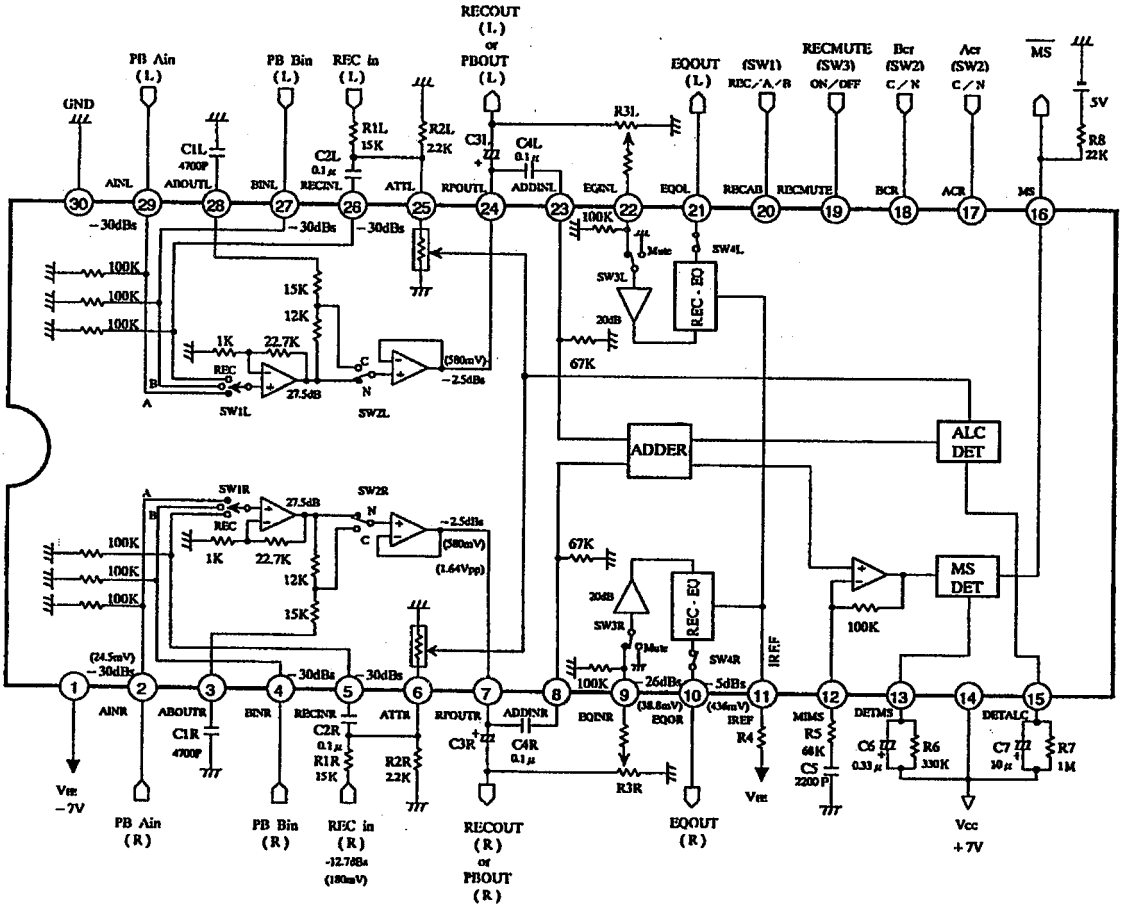

■ LA2650 (IC406) : SA BASS

Block Diagram

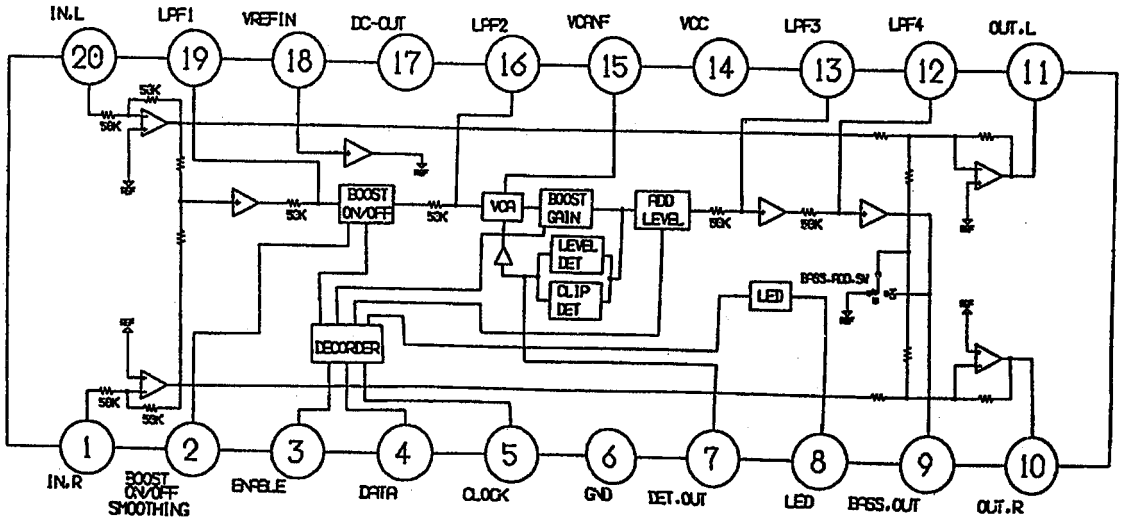

Internal Connections for FL Display Tube

■ DI901:QLF0012-001

Grid Layout

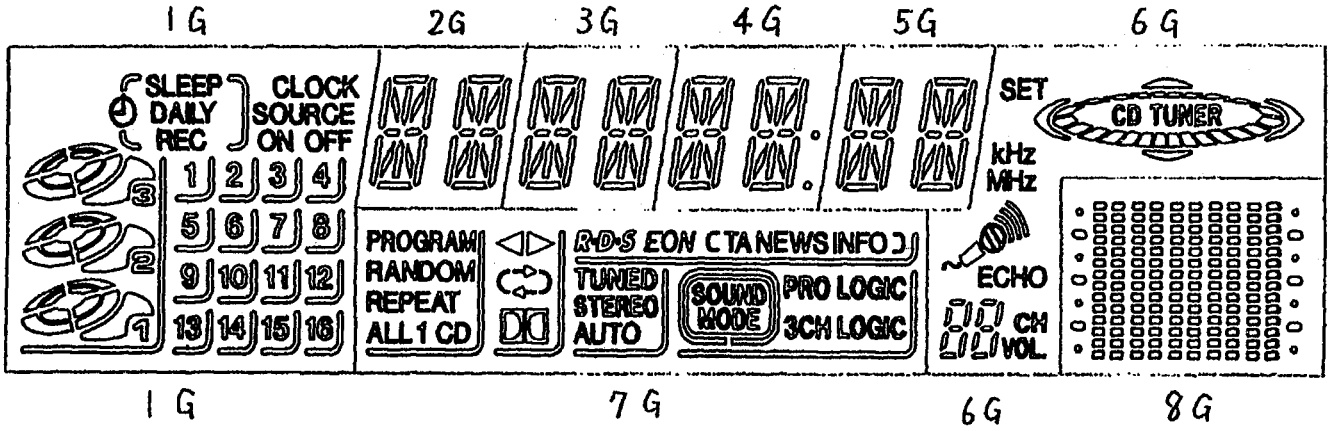

Internal Conection

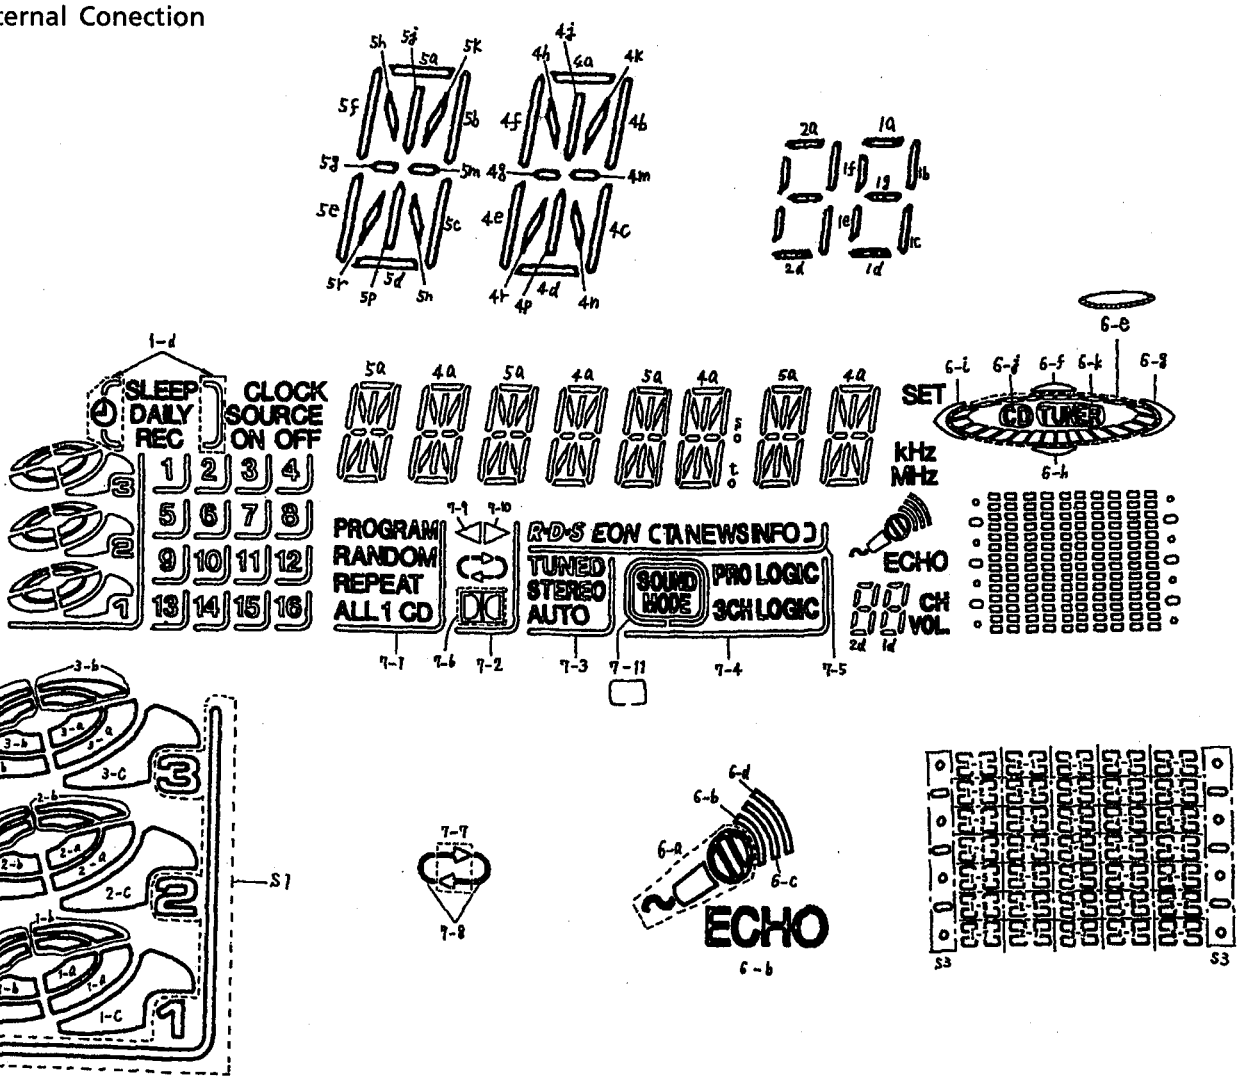

Anode Designation

	1G	2G	3G	4G	5G	6G	7G	8G
P1	9	—	—	—	—	—	C	5—3
P2	10	—	—	—	—	—	EON	4—3
P3	11	4a	4a	4a	4a	6—k	RDS	3—3
P4	12	4b	4b	4b	4b	6—j	—	2—3
P5	5	4k	4k	4k	4k	6—e	7—2	1—3
P6	6	4j	4j	4j	4j	6—f	—	5—2
P7	7	4h	4h	4h	4h	6—g	7—6	4—2
P8	8	4f	4f	4f	4f	6—h	7—8	3—2
P9	1	4g	4g	4g	4g	6—i	7—7	2—2
P10	2	4m	4m	4m	4m	6—a	7—10	1—2
P11	3	4c	4c	4c	4c	6—b	7—9	5—1
P12	4	4n	4n	4n	4n	6—c	7—1	4—1
P13	SOURCE	4p	4p	4p	4p	6—d	CD	3—1
P14	OFF	4r	4r	4r	4r	—	1	2—1
P15	ON	4e	4e	4e	4e	—	—	1—1
P16	CLOCK	4d	4d	4d	4d	—	ALL	S3
P17	16	—	—	s	—	MHz	REPEAT	1—4
P18	15	—	—	t	—	—	RANDOM	2—4
P19	14	—	—	—	—	SET	PROGRAM	3—4
P20	13	—	—	—	—	kHz	TA	4—4
P21	—	5d	5d	5d	5d	1a	—	5—4
P22	1—a	5e	5e	5e	5e	1b	NEWS	1—5
P23	1—b	5r	5r	5r	5r	1f	INFO	2—5
P24	1—c	5p	5p	5p	5p	1g	⊐	3—5
P25	2—a	5n	5n	5n	5n	1c	7—5	4—5
P26	2—b	5c	5c	5c	5c	1e	TUNED	5—5
P27	2—c	5m	5m	5m	5m	1d	STEREO	1—6
P28	3—a	5g	5g	5g	5g	CH	AUTO	2—6
P29	3—b	5f	5f	5f	5f	2a	7—3	3—6
P30	3—c	5h	5h	5h	5h	2b	7—11	4—6
P31	S1	5j	5j	5j	5j	2f	—	5—6
P32	—	5k	5k	5k	5k	2g	—	1—7
P33	1—d	5b	5b	5b	5b	2c	SOUND MODE	2—7
P34	REC	5a	5a	5a	5a	2e	7—4	3—7
P35	DAILY	—	—	—	—	2d	PRO LOGIC	4—7
P36	SLEEP	—	—	—	—	VOL	3CH LOGIC	5—7

Pin Connection

TERMINAL NO.	1	2	3	4	5	6	7	8	9	10	11									
ELECTRODE	F	F	NP	NP	1G	2G	3G	4G	5G	6G	7G									
TERMINAL NO.	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
ELECTRODE	8G	NX	P 1	P 2	P 3	P 4	P 5	P 6	P 7	P 8	P 9	P 10	P 11	P 12	P 13	P 14	P 15	P 16	P 17	P 18
TERMINAL NO.	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51
ELECTRODE	P 19	P 20	NX	NX	NX	P 36	P 35	P 34	P 33	P 32	P 31	P 30	P 29	P 28	P 27	P 26	P 25	P 24	P 23	P 22
TERMINAL NO.										52	53	54	55	56	57	58	59	60	61	62
ELECTRODE										P 21	NX	NX	NX	NX	NX	NX	NP	NP	F	F

Notes F: Filament NP: No Pin
G: Grid NX: No Extend Pin
P: Anode

Main parts Layout

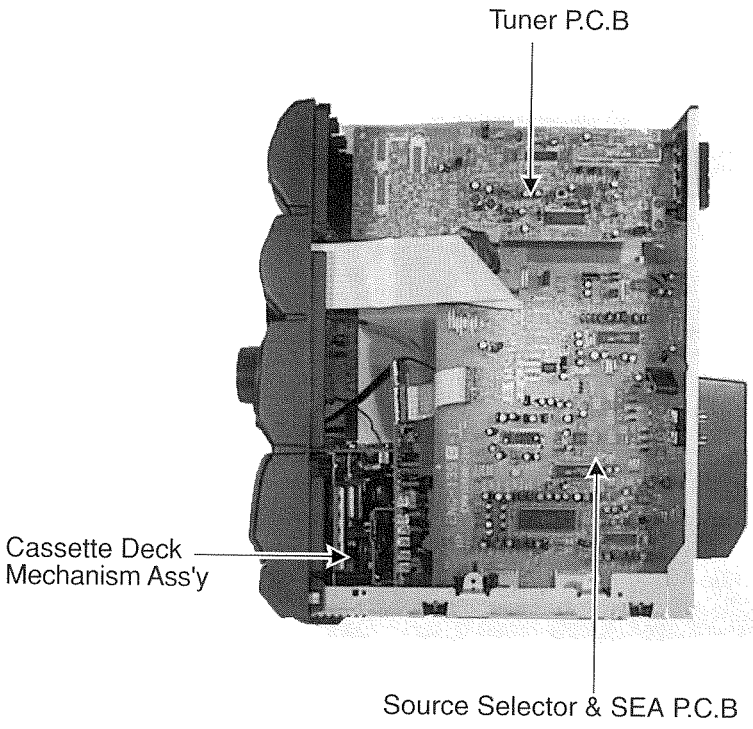

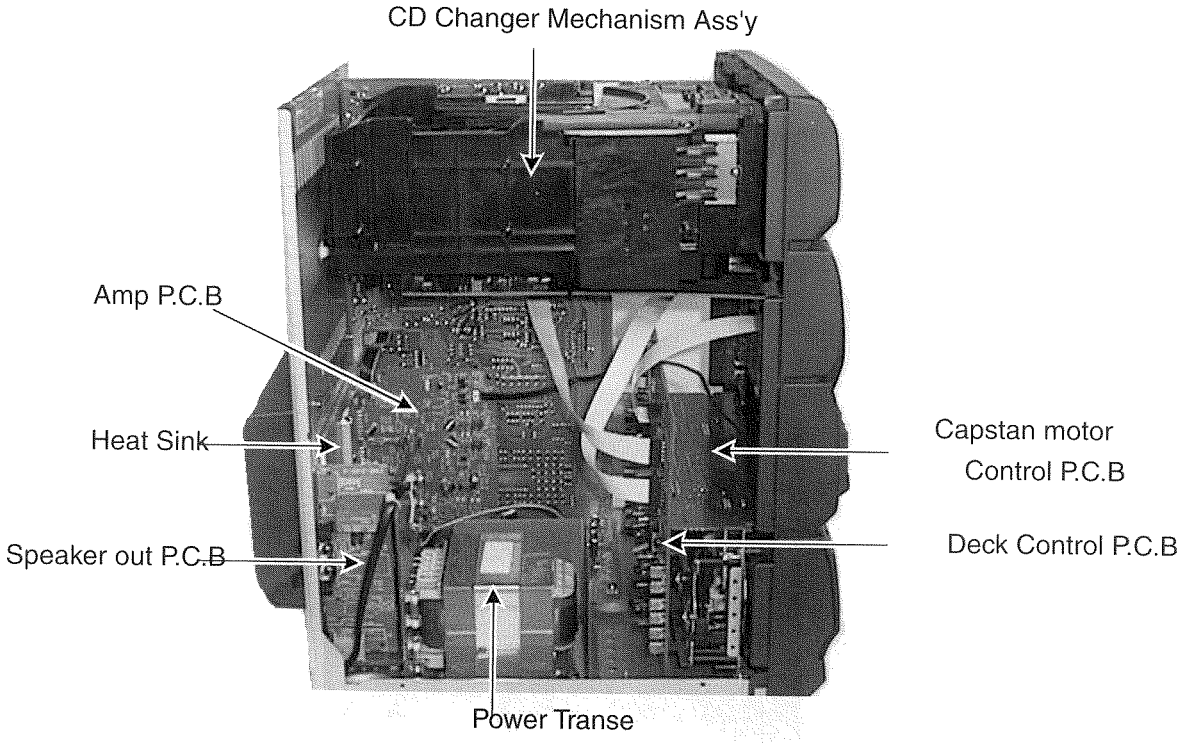

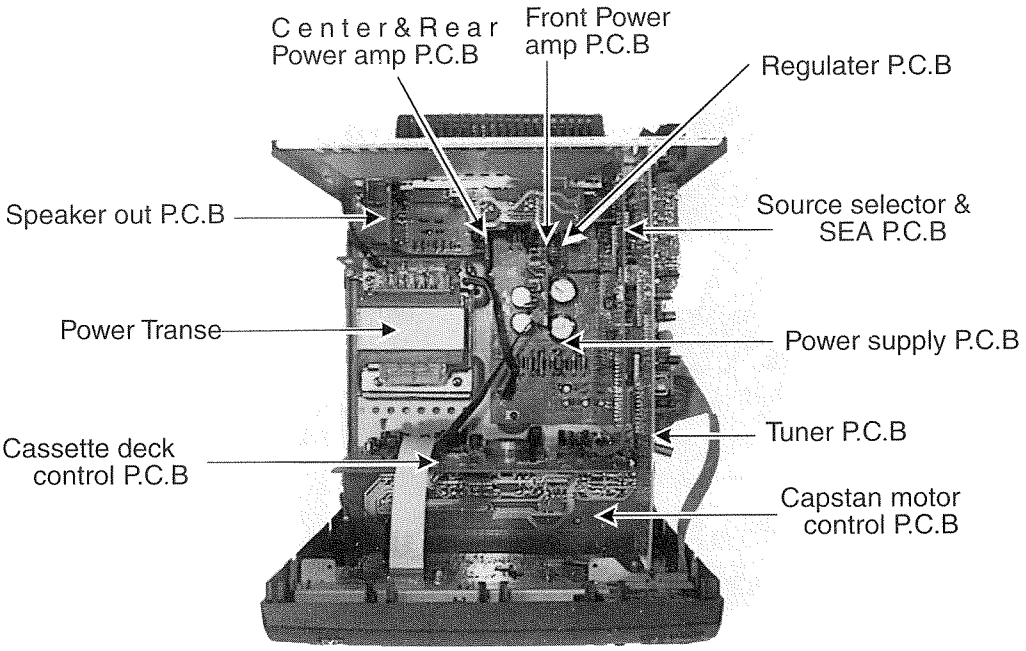
Center&Rear
Power amp P.C.B
Front Power
amp P.C.B
Regulater P.C.B
Speaker out P.C.B
Source selector &
SEA P.C.B
Power Transe
Power supply P.C.B
Tuner P.C.B
Cassette deck
control P.C.B
Capstan motor
control P.C.B

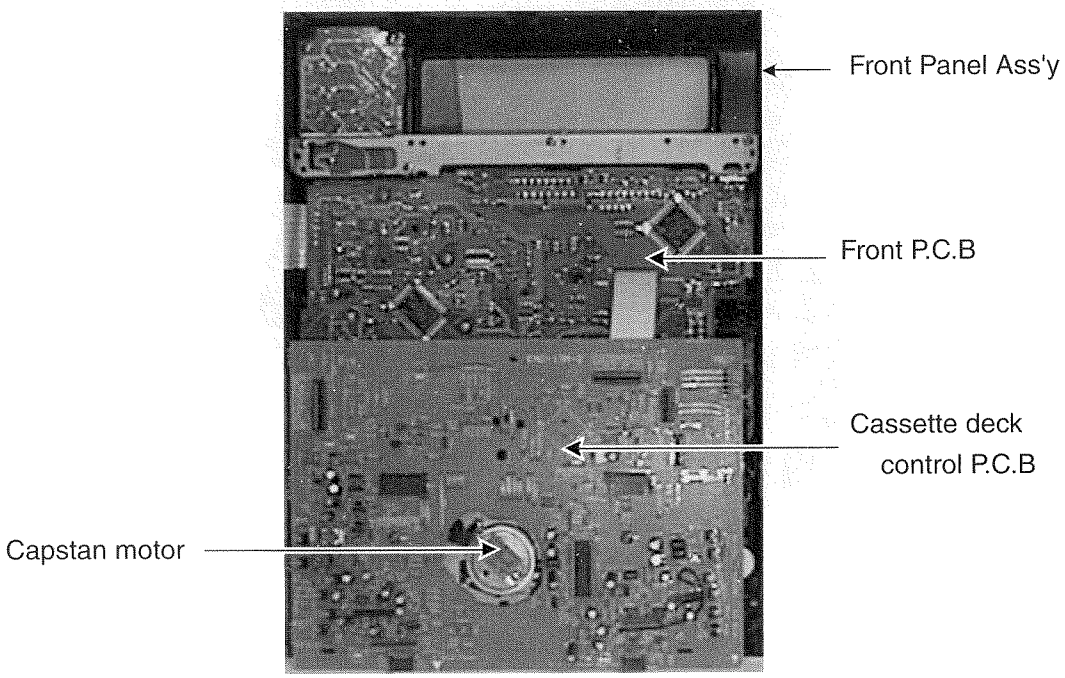
Front Panel Ass'y
Front P.C.B
Cassette deck
control P.C.B
Capstan motor

Dissembly Pocedures

(1) Removing the top cover

1.Remove 2 screws(Aí)fasteng both sides of top cover,and 6 screws(A) fasting the rear side.

2.Remove the top cover.

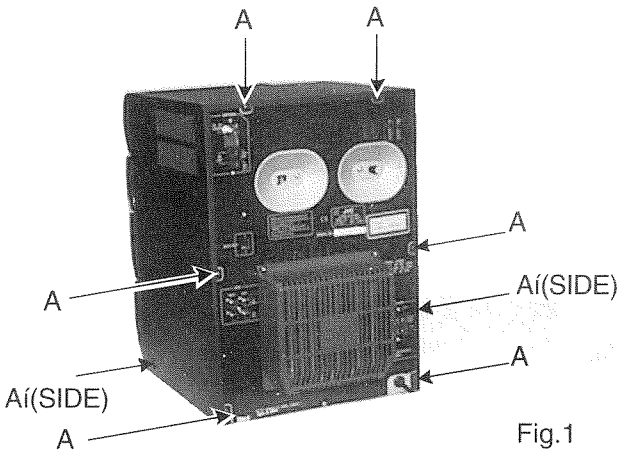

Fig.1

(2) Removing the changer mechanism ass'y

1.Remove 2 screws(B)fasteing up side(Fig.2).

2.Remove 2 screws(C)fasteing rear side.

3.Remove 2 screws(B) holding the PCB's.

4.Disconnect the CN811,CN614,CN613

5.Remove the changer mechanism ass'y(Fig.3).

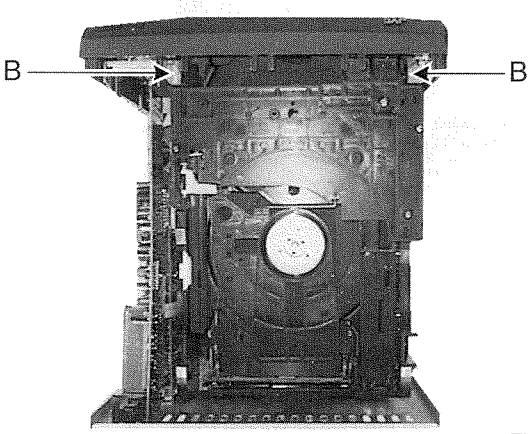

Fig.2

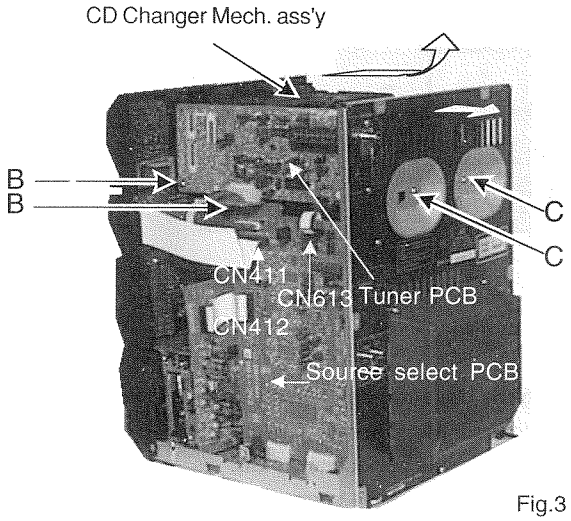

Fig.3

(3) Removing the rear panel and Tuner PCB

1.Remove 11 screws(D)fasteing rear side and remove the heat sink cover(Fig.5).

2.Remove3 screws(D)holding the heat sink.

3.Remove the rear panel and Tuner PCB.

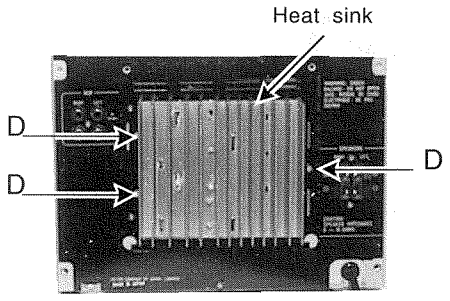

Fig.4

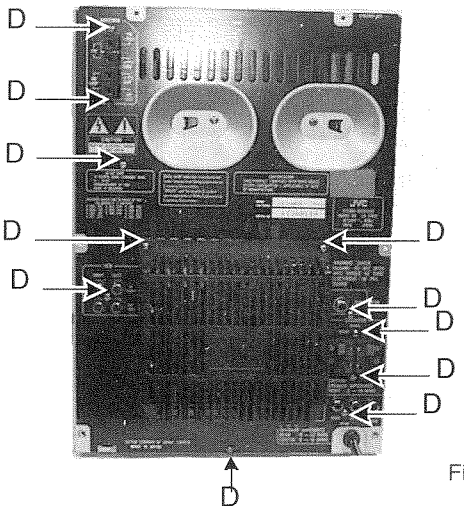

Fig.5

(4) Removing the Front panel ass'y

1.Remove the CDchanger mechanism.
2.Disconnect the CN411,CN412 and CN915,CN322.
3.Remove 2 screws(D)hololding the Front panel ass'y.
4.Remove the 3 hooks fastening both sides of Front panel ass'y.

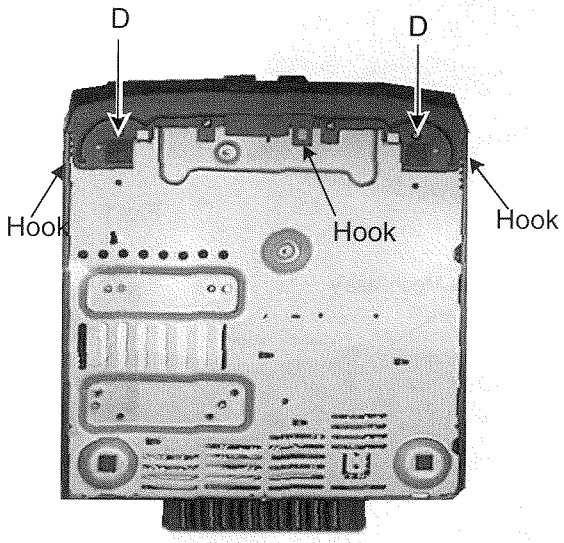

Fig.6

(5) Removing the Cassette deck control PCB.

1.Remove the Front panel Ass'y
2.Disconnect the CN331,CN332.
3.Remove 2 screws(D)holding the Cassette deck control PCB.

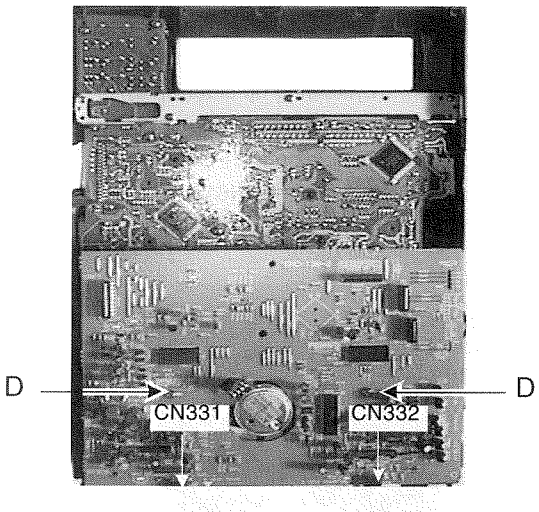

Fig.7

(6) Removing the Cassette deck mech. ass'y

1.Remove the Front panel Ass'y.
2.Remove the Cassette deck control PCB.
3.Remove 4 screws(E) and 4 screws(F) holding the Cassette mecanism ass'y.

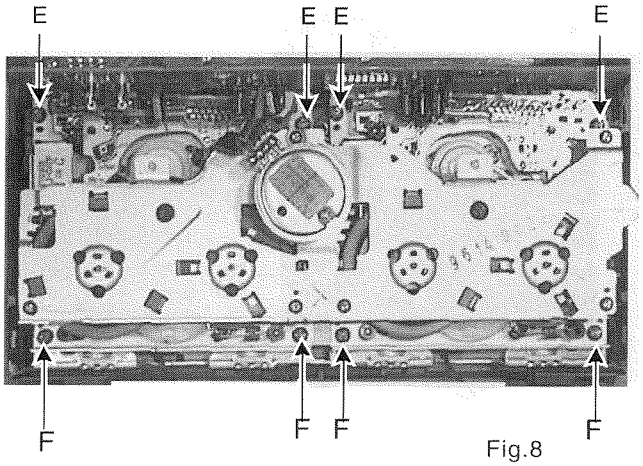

Fig.8

(7) Removing the Amp /Speaker out/Source select PCB

1.Remove the CD changer mech. and rear panel.
2.Disconnect the CN411,CN412,CN701,and Take the Source select PCB on the Power supply PCB.
3.Disconnect the CN915,and Take the Power amp and

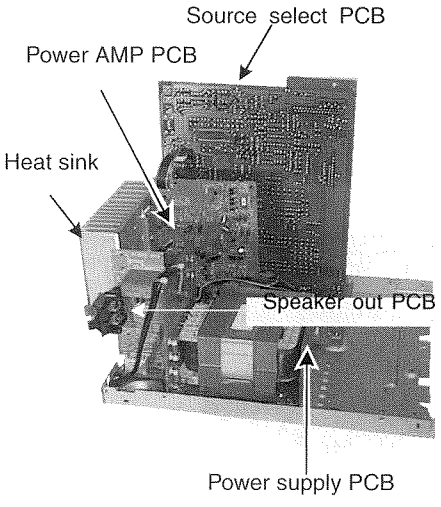

Fig.9

(8) Removing the Power supply PCB

1.Remove the CD changer mech. and rear panel, and take the Source select PCB,Amp PCB and Speaker out PCB.
2.Disconnect the CN009,CN111.
3.Remove the 3 screws(D) holding the Power supply PCB.
4.Remove the Power supply PCB.

(9) Removing the Power Trans.

1.Remove the CD changer mech.
2.Disconnect the CN009,CN111.
3.Remove the 4 screws(G)holding the Power Trans.
4.Remove the Power Trans..

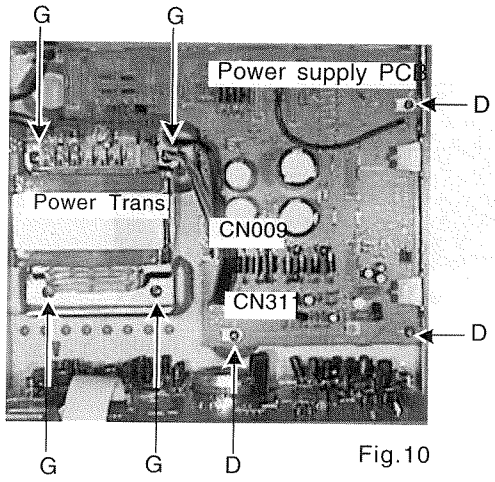

Fig.10

(10) Removing the Front PCB

1.Remove the Front panel Assy.
2.Remove the deck control PCB.
3.Remove the 4 screws(H)holding the Bracket.
4.Remove the 9 screws(H)holding the Front PCB.
5.Remove the 5 screws(H)holding the deck sw and main volume PCB.

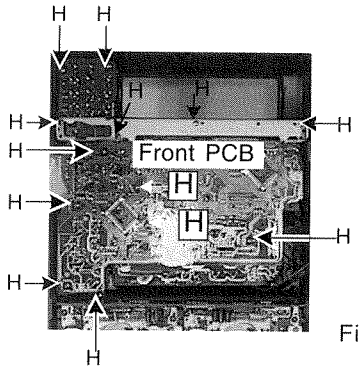

Fig.11

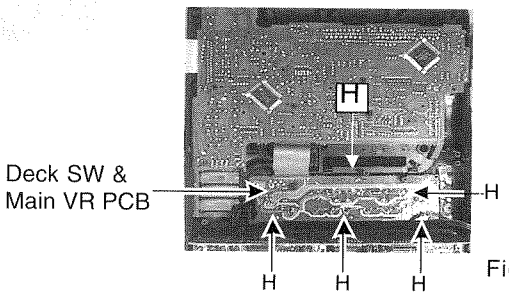

Fig.12

(11) Removing the Power IC

1.Remove the Amp PCB and Regulator PCB with the heatsink.
2.Remove 3 screws(I)holding the Amp PCB and Remove it.
3.Unsolder the Power IC terminals.
4.Remove the Power IC.

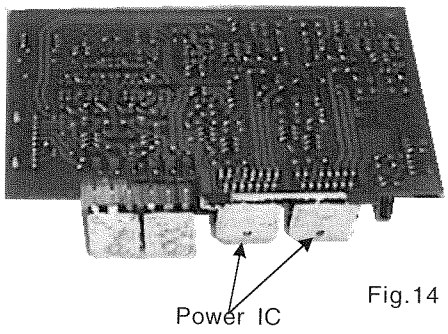

Fig.14

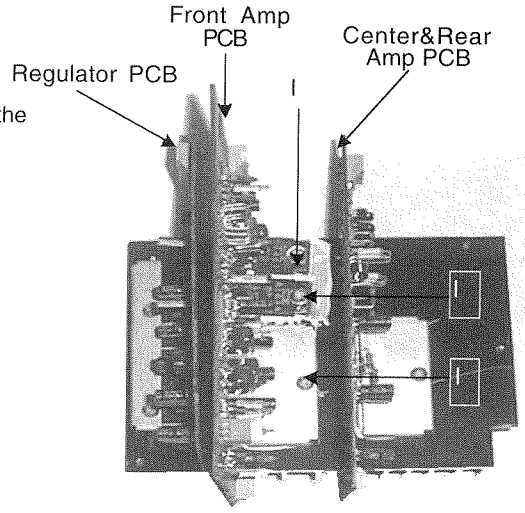

Fig.13

(12) Removing the Capstanmotor control PCB

1.Remove the cassettemechanism ass'y.
2.Remove the 2 screws (J)holding the capstanmotor control PCB.
3.Remove the capstanmotor control PCB.

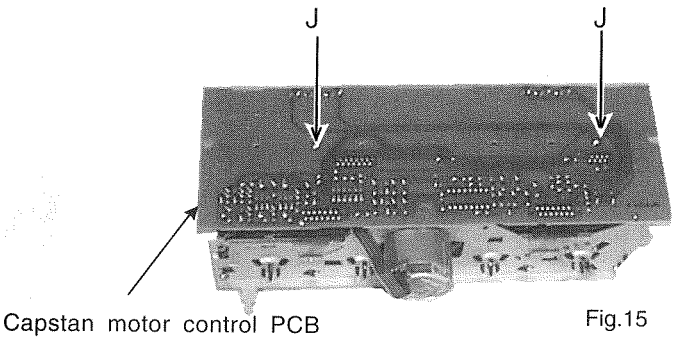

Fig.15

(13) Removing the Cassette door

1.Remove the cassettemechanism ass'y
2.Push the Cassette doorholder both side.
3.Remove the cassette door.(See Fig.16)

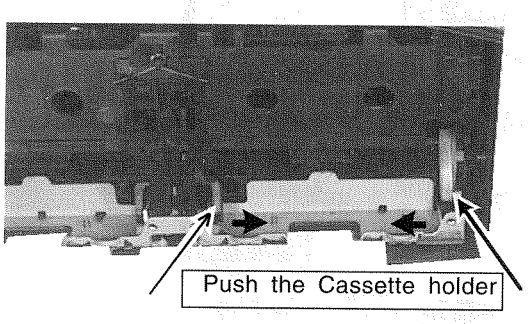

Fig.16

(14) Fix the Cassette Holder spring

Fix holder spring before fix guide . and cassette mech.(See Fig.17)

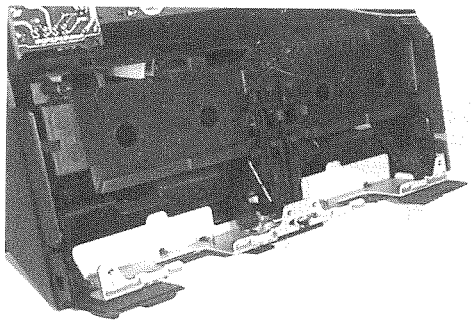

Fig.17

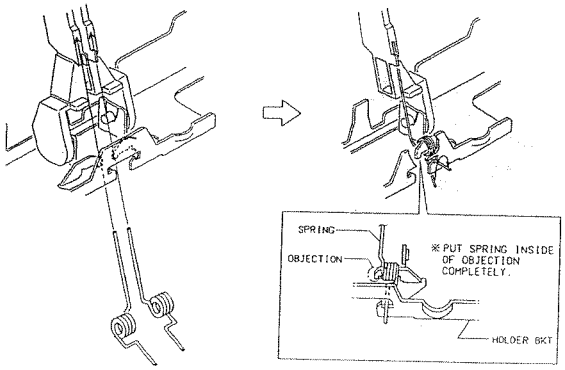

Cassette Mech. Ass'y removal

(15) Head assembly removal
1. Remove the Cassette mech. ass'y .
2. Remove the flexible wire from the cassette deck and remove the 3 screws Ⓚ holding the head ass'y.

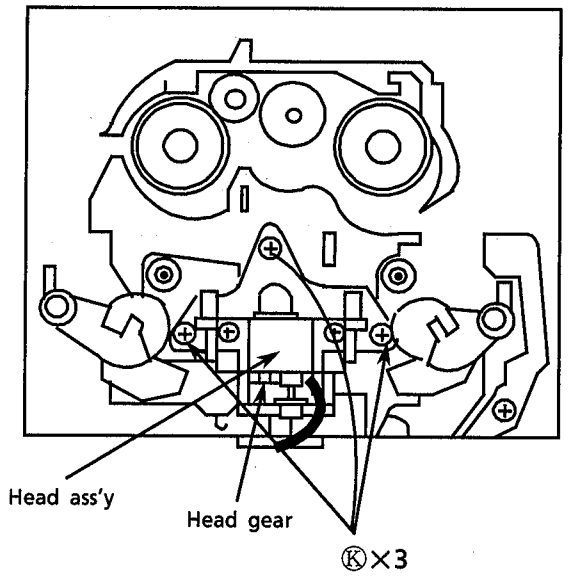

Fig.18 Cassette mechanism top view

(16) Head assembly
1. The direction of the head is changed with the direction lever .When servicing ,install the direction lever according to the direction of the head assembly .

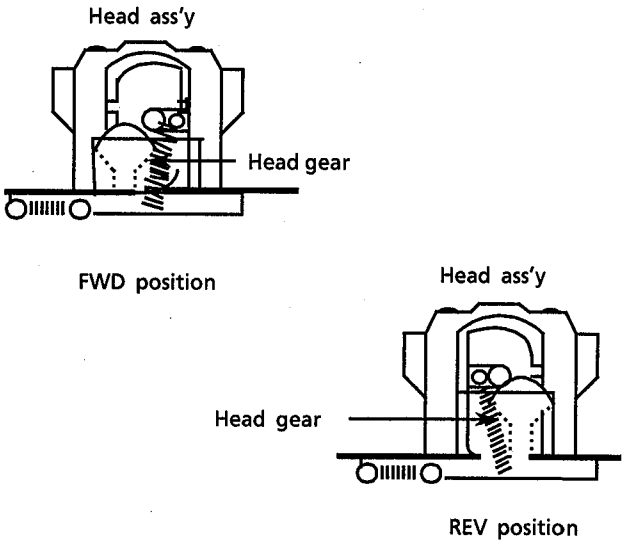

Fig.19-A Head ass'y side view

(17) Pinch roller (FWD/REV) removal
1. Remove the cassette mech. assembly.
2. Remove the hook holding the pinch roller.
3. Remove the pinch roller ass'y.

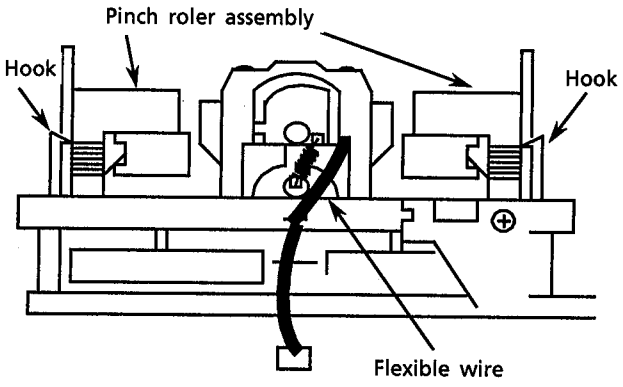

Fig. 20 Cassette mechanism bottom view

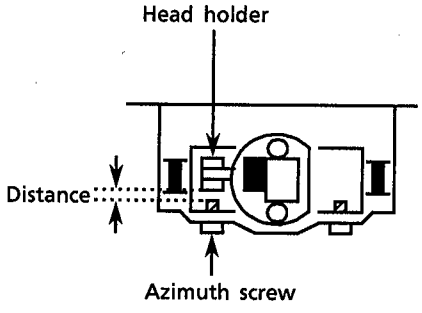

Fig.19-B A distance of between head older and azimuth screw

(18) Capstan motor removal.

1. Remove the cassette mechanism.
2. Remove the cassette deck control PCB.
3. Remove the 6 screws Ⓛ holding the bracket.
4. Remove the hooks (■) of the bracket.
5. Put the cutting on the flywheel A together the bracket's pall as shown in fig. 22(Flywheel A) and check that the flywheel B is removed from the bracket's pall (fig. 22-Flywheel B).
6. Remove the capstan motor with the bracket.
7. Unsolder the broken flat wire of the capstan motor.
8. Remove the 2 screws fixing the motor and the bracket.

* To remove the bracket, it is easier to remove mech."B" first.
Vice versa, assembling mech."A" is easier for reassembly.

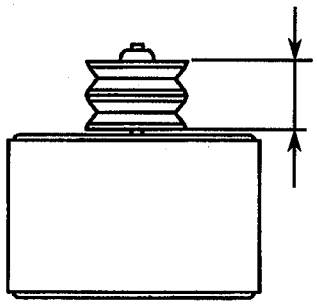

Fig. 21 Capstan motor pulley installation

(19) Flywheel removal

1. Remove the cassette mechanism assembly.
2. Remove the cassette amp PCB.
3. Remove the 6 screws Ⓛ and the bracket.
4. Remove the 4 hooks of the bracket.
5. Remove the bracket.
6. Remove the flywheels.

*The oil on the capstan must be wiped out after reassembling.

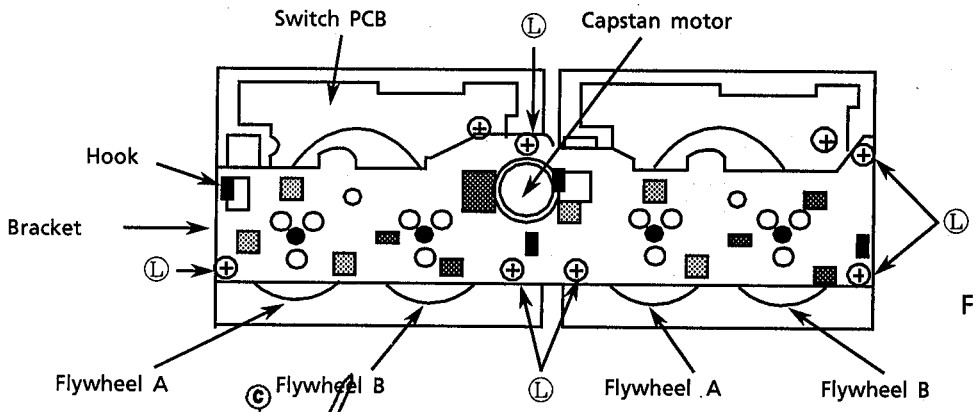

Fig. 22-A

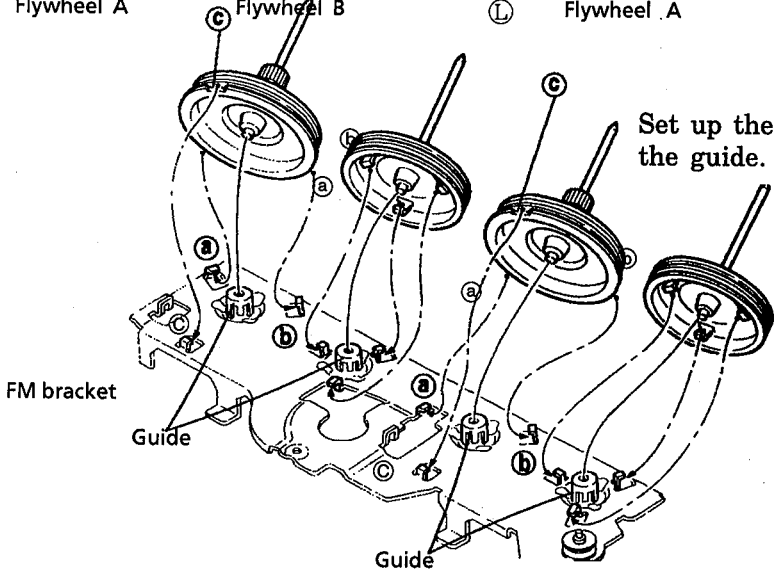

Fig. 22-B

(20) How to install the belts

1. Install the flywheels and belts as shown in the figure below. (Fig. 23)
   When putting the belts, put the long belt first.
2. Install the main reels to put the belts on the flywheels.

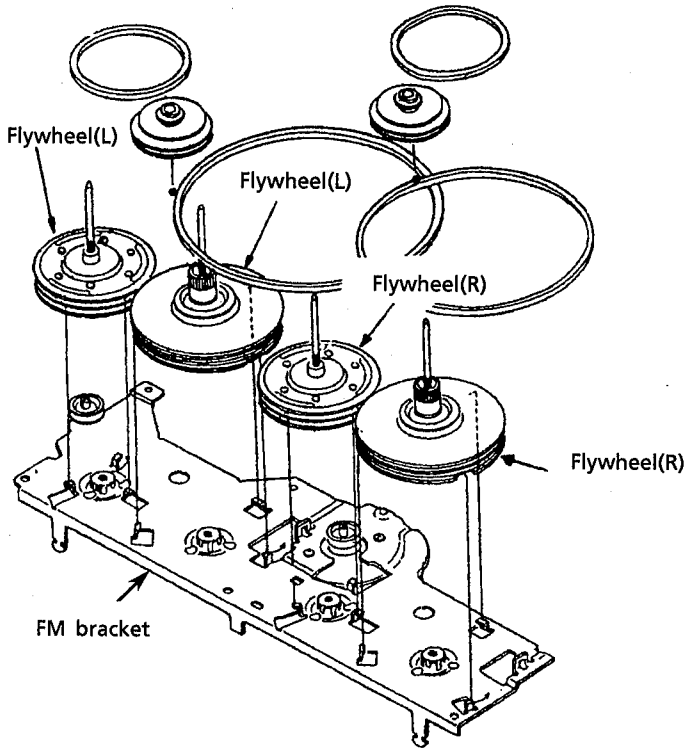

Fig. 23-A Install the Bracket and flywheels

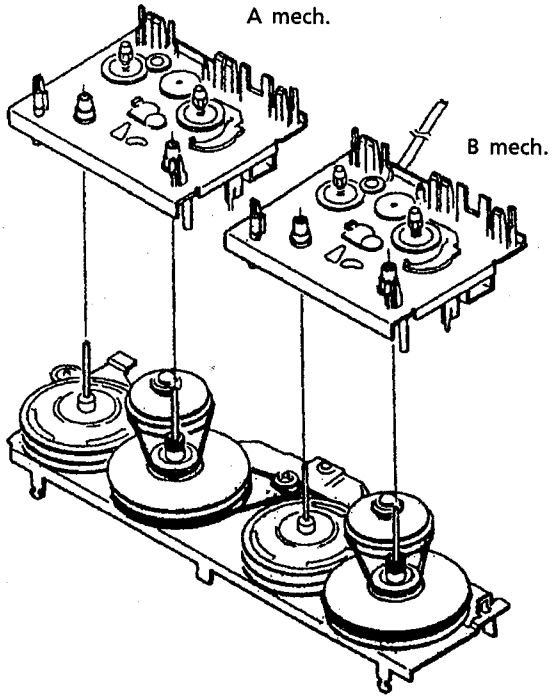

Fig. 23-C Install the cassette mech.

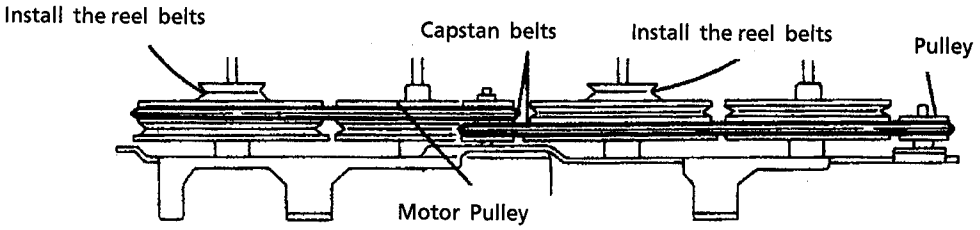

REEL BELTS → After hooking reel belts, no twist.

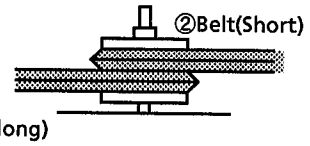

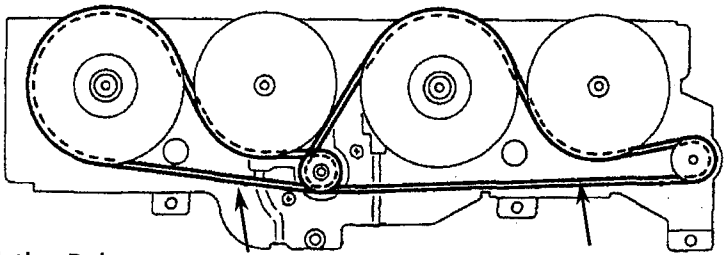

Fig. 23-B Install the Belts

(21) Switch PCB removal

1. Remove the flywheel.
2. Remove the 1 screw Ⓜ.
3. Unsolder the broken solenoid.
4. Release the 4 hooks holding the Switch PCB.
5. Remove it.

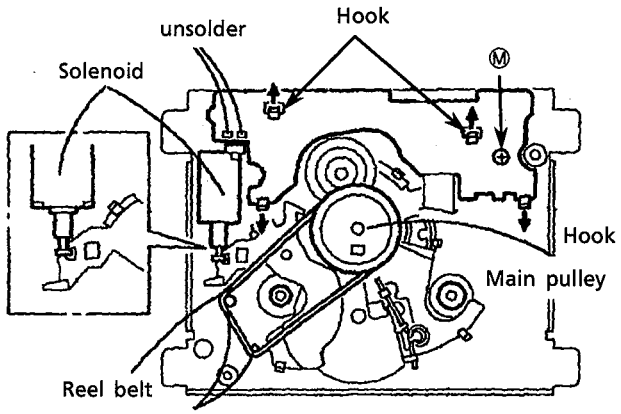

When attach the FM bracket, Install the reel belt on the stud (See fig. 23)

Fig. 24

(22) Control cam removal

1. Remove the FM bracket and flywheel.
2. Pull out the main pulley.
3. Remove the trigger arm.
   While opening the two tabs ⓐ under the trigger arm, pull out the trigger arm from the shaft.
4. Pull out the elevator ring.
5. Remove the FWD/REV arm assembly.
   a. Remove the FWD/REV arm spring.
   b. While opening the four FWD/REV arm retaining tabs ⓑ outwards,pull out the FWD/REV arm.
6. Pull out the control cam.
   While pulling the shaft stopper section of the control cam in the central direction, pull out the control cam.

When attaching the control cam

While pressing the FWD/REV arm in the direction of the sorrow,pull the head the front.

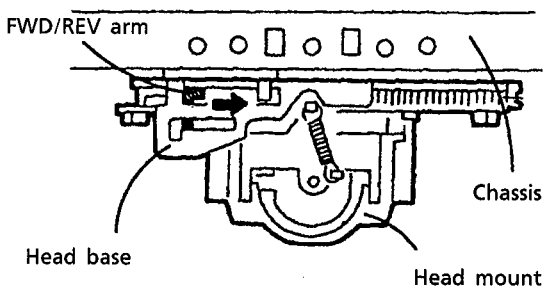

Fig. 25-c

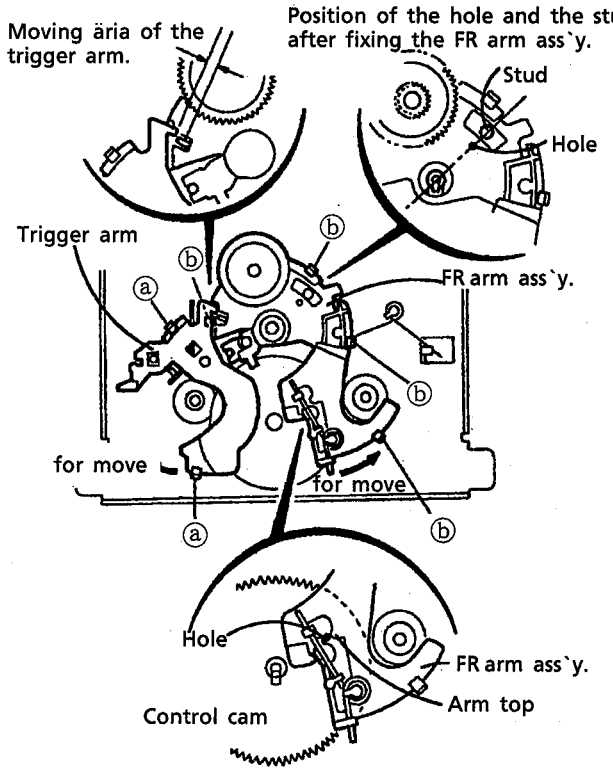

Position of the hole of cam and top of the arm after fixing the FR arm ass`y.

Fig. 25-a

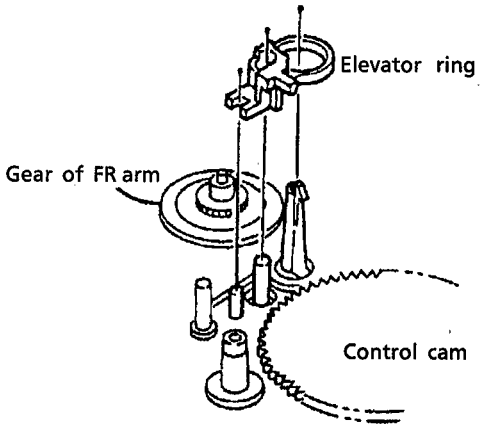

Fig. 25-b

After preforming the procedure shown above, the studs under the control cam move as shown.

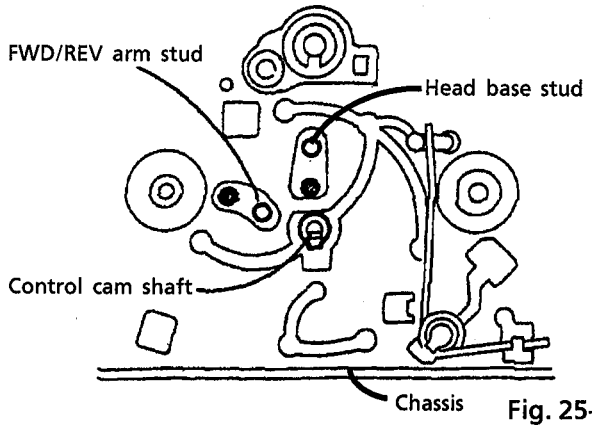

Fig. 25-d

(23) How to assemble

1. Move the FWD/REV arm in the direction of the arrow.
2. In step 1, pull the head base forward.
3. In step 2, after inserting the cam into the shaft, move the head base and FWD/REV arm slightly until the cam is fully inserted and it clicks to inform when it has been locked.
4. Rotate the cam counterclockwise to check if the cam rotates smoothly and the spring clicks according to the forward/backward movement of the head base.
5. After checking the rotation of the cam, rotate the cam until the notch section comes to the right so that the FWD/REV arm assembly can be attached.
6. Attach the FWD/REV arm assembly while observing the positioning of:
   the hole and stud
   the cam hole and arm edge
   shown in the figure 25-a.
   After attachment, move the FWD/REV arm in the direction of the arrow to check if it moves back to the original position.
7. Attach the elevator ring.
8. Attach the trigger arm.
   After attachment, move the trigger arm in the direction of the arrow to check if it moves back to the original position.

Working confirmation:
If the control cam rotates counterclockwise, the assembly was successful: if it does not rotates. It must be reassembled.

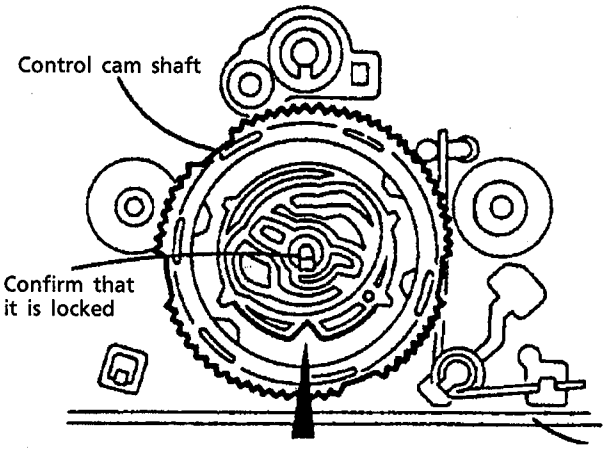

Fit the control cam its notch located as shown. (Engage with the gear of the control cam while moving the FWD/REV arm and head base slightly.)

Fig. 26-a

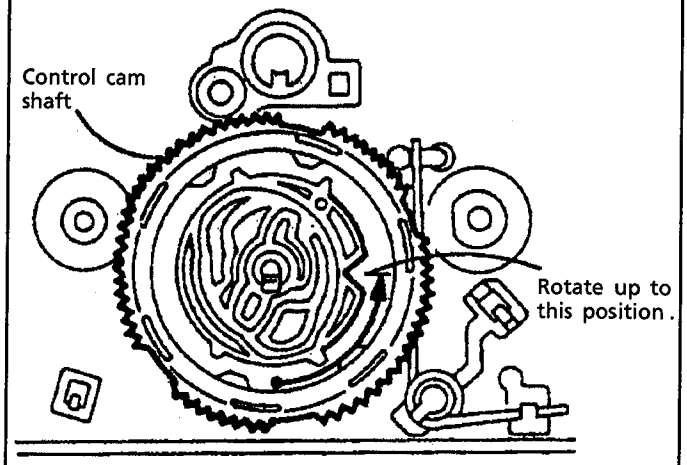

Attach the FWD/REV arm with the control cam rotated up to the position shown.

Fig. 26-b

CD Changer mech. Ass'y removal

(24) CD Tray assembly removal

1. Disassemble the changer mech..
2. Remove the screw Ⓒ holding the stopper bracket.(See Fig.27) ---- (U.S.A only)
3. Remove the rod from both ends' hooks which are secured on T.Bracket ⓐ and clamper baseⓑ. [See Fig. 27)
4. Remove 3 screwsⓁ securing T.Bracket.(See Fig. 29.)
5. Remove a screw Ⓝsecuring center of the clamper ass'y. (See Fig. 28)
6. Remove the clamper ass'y from ★ screw fixing side.
7. Remove a screw Ⓛwhich secures the return spring and lock levers from the chassis ass'y.(See Fig. 30.)
8. Remove 2 pallsⓓ which slightly secure the return spring to remove it.
9. Remove 3 lock levers.
10. Check that the lifter unit stopper is inserted into hole ⓔ located on CD tray ass'y. (See Fig. 31.)
11. Check that the driver unit elevator is seen from a hole (marked ⑤) on left side of the CD changer mech..(See Fig. 32 and 33.)
    [NOTE] Set the elevator in correct position (Fig. 33) by rotating the pulley gear with finger if it is not positioned correctly (Fig. 34.).
12. Rotate the motor pulley clockwise with finger until the lifter unit's stopper is lowered from ⓔhole located on the CD tray ass'y. (See Fig. 34.)
13. And, pull all 3 CD tray assemblies forward until they stop. (See Fig. 32.)
14. Press 2 pawls (f, f') located rear side of the CD tray ass'y according to an arrowⓗ to remove the CD tray ass'y. (See Fig. 35.)
    At first, removing the lowest tray is easier.

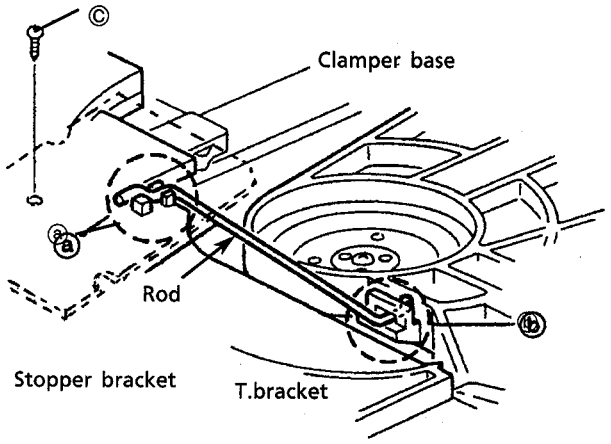

Fig. 27

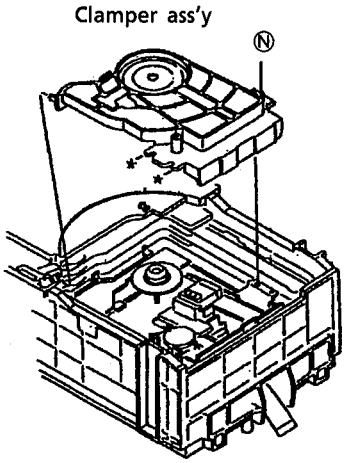

Fig.28

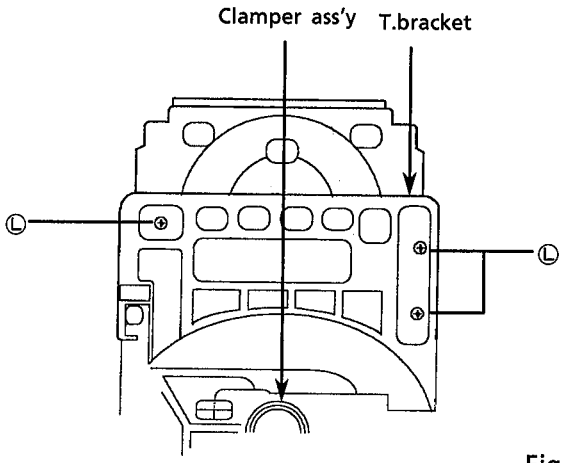

Fig.29

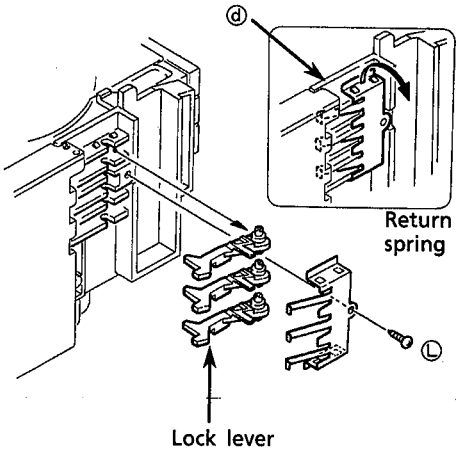

Fig.30

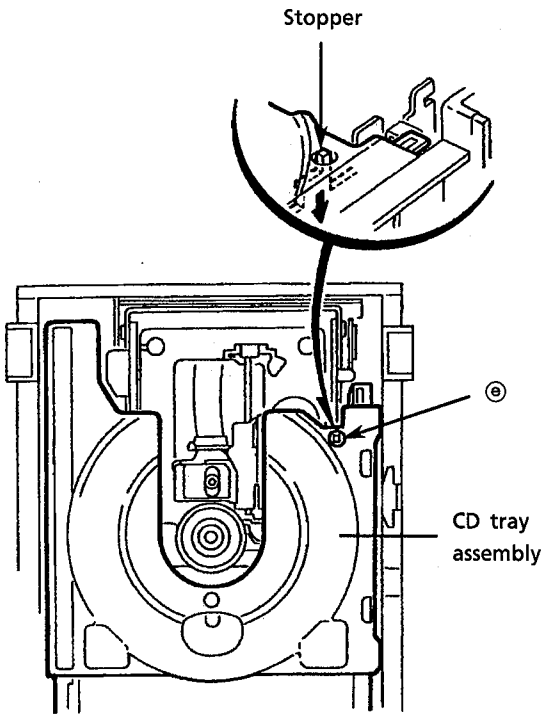

Fig. 31

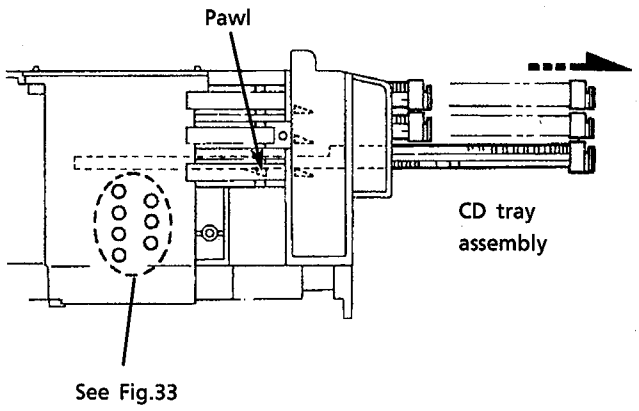

Fig. 32

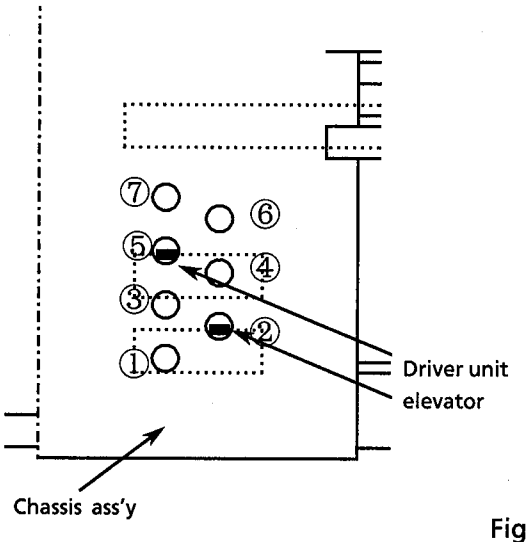

Fig. 33

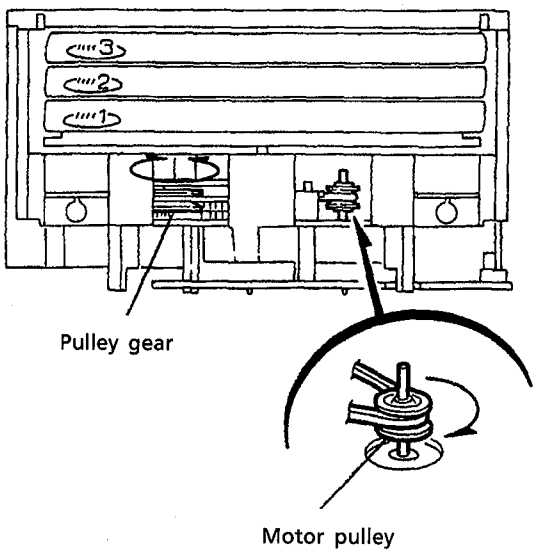

Fig. 34

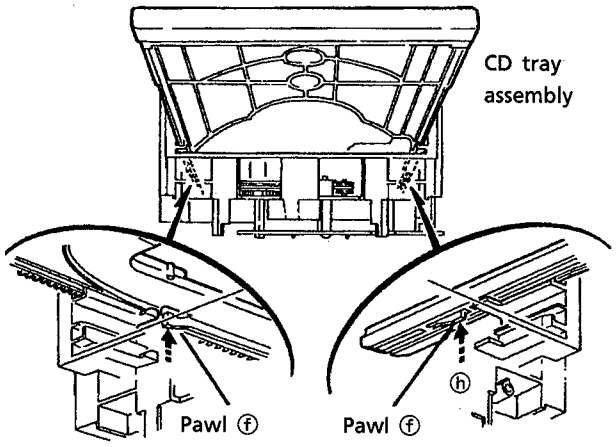

Fig. 35

(25) CD mechanism removal

1. Remove the CD tray ass,y .
2. Rotate the Cam R1, R2 ass'y counterclockwise so that CD mech. ass'y's shaft ⓗ is positioned as shown in Fig. 36.
3. Remove 4 screws Ⓙ securing CD mech. ass'y. (See Fig. 36.)

*How to replace pick-up unit

1. If CD mech. is removed without disassembling CD mech. ass'y, rotate the Cam R1, R2 ass'y clockwise to set the CD mech. ass'y's shaft(L) as shown in Fig. 37.
2. Lift the CD mech. ass'y toward the direction ⓘ to remove it from the lifter unit. (See Fig. 38.)

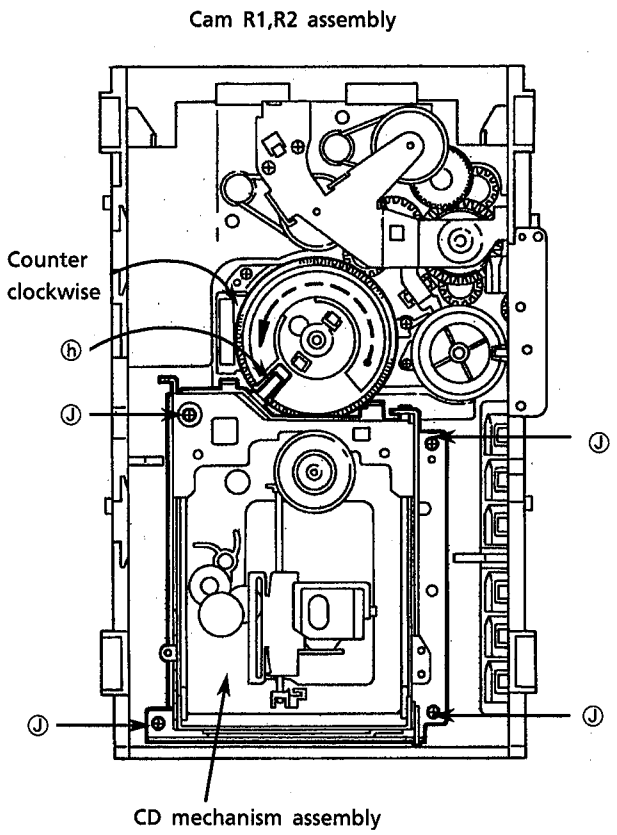

Fig. 36

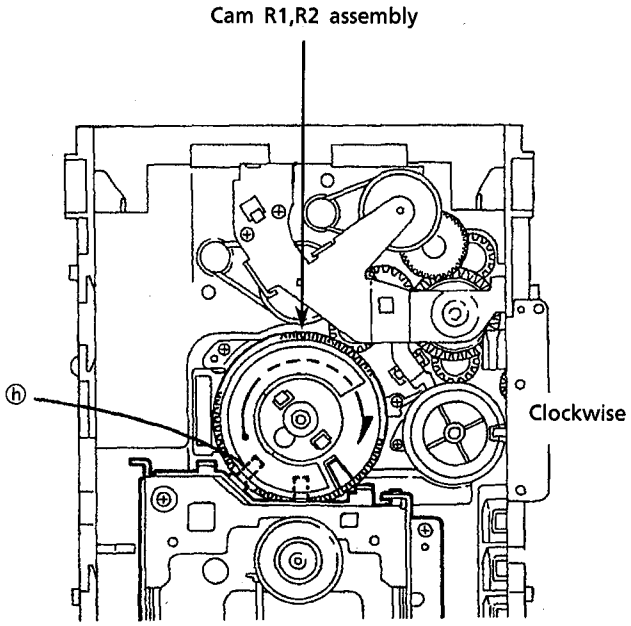

Fig. 37

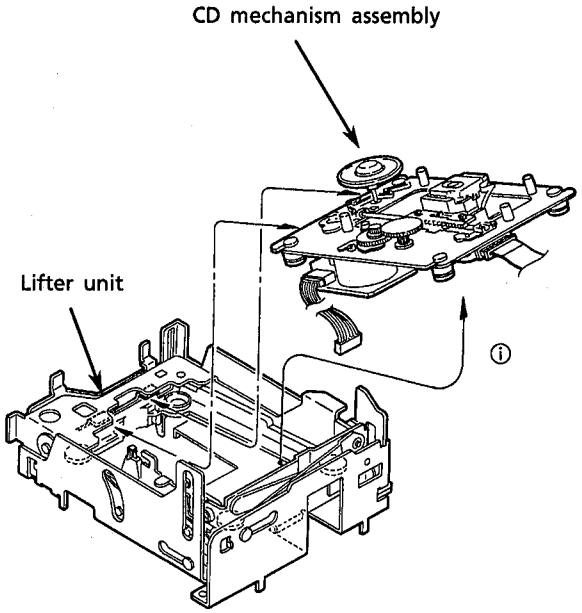

Fig. 38

(26) Actuator motor board removal

1. Unsolder 4 soldered point ⓘ for both motors. (See Fig. 39.)
2. Remove a screw Ⓒ securing the CD servo board. (See Fig. 39.)
3. Press the hook and release it to remove the CD servo board.
4. Remove 2 screws Ⓙsecuring the actuator motor board. (See Fig. 39.)
5. Remove 2 screws Ⓙsecuring the tray select switch board. (See Fig. 40.)

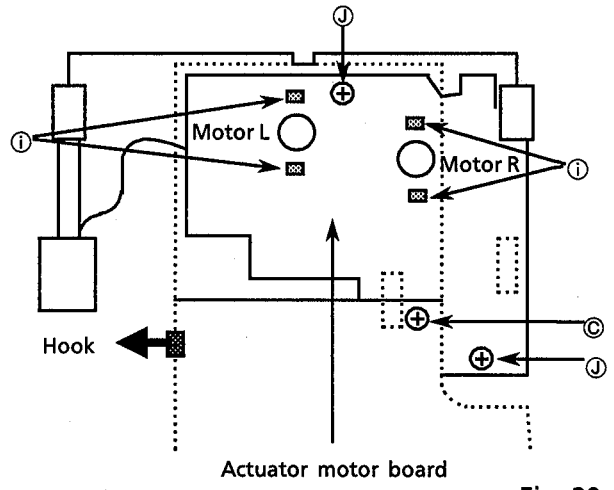

Fig. 39

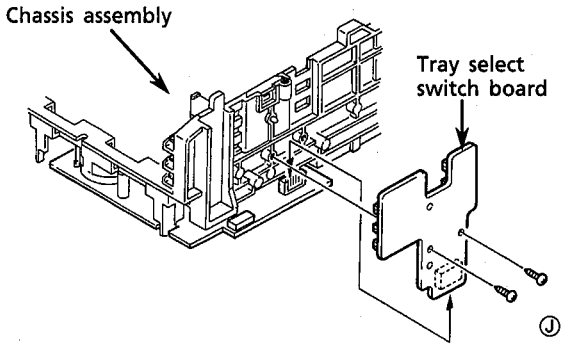

Fig. 40

(27) Cam unit removal

1. Disassemble CD mech. ass'y.
2. Rotate the Cam gear L so that the drive unit's pole ⓚ is positioned as shown in Fig. 41.
3. Remove the drive unit and cylinder gear. (See Fig.42.)
4. Rotate the Cam gear L so that the select gear's ⓙ is positioned as shown in Fig.43.
5. Remove 4 screws Ⓙ securing the cam unit which includes the cam gear L and Cam R1, R2 ass'y. (See Fig 43.)

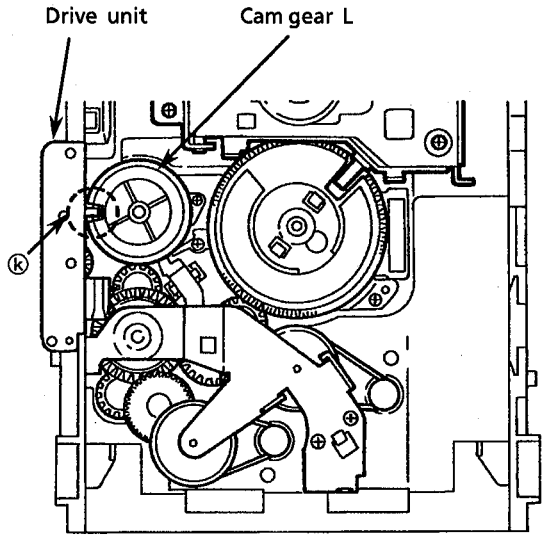

Fig. 41

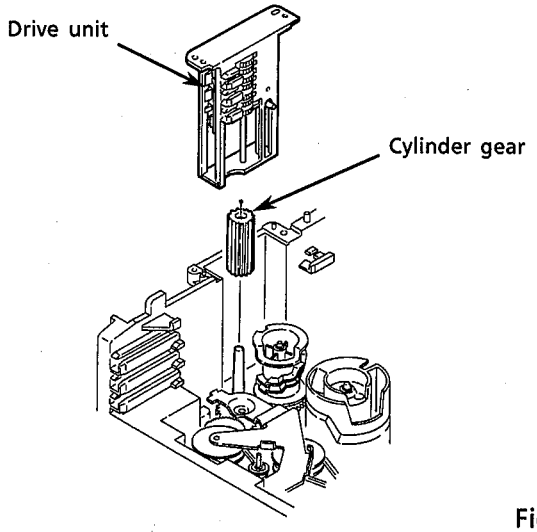

Fig. 42

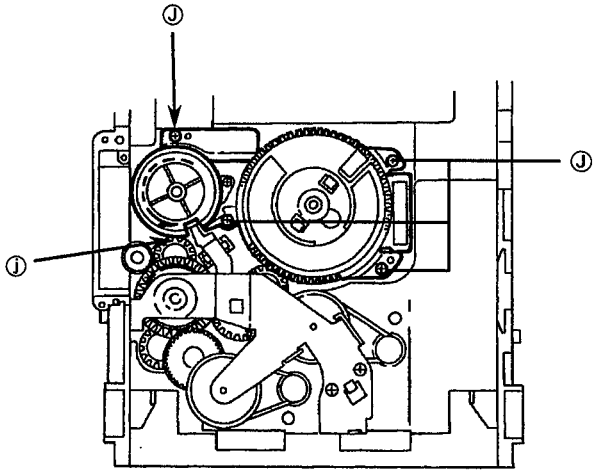

Fig. 43

(28) Removal for actuator motor and belt

1. Remove 2 screws Ⓟ securing the gear bracket. (See Fig. 44.)
2. Press the pawl Ⓜ securing the gear bracket to the arrow in the figure to remove the gear bracket. (See Fig. 44.)
3. Remove the gear bracket from the chassis ass'y's ⓝ securing top of the gear bracket. (See Fig. 45.)
4. Remove each belts from the both actuator motor pulleys and the pulley gears. (See Fig.44.)
5. Reverse the chassis ass'y and widen 4 poles ⓞ which secure both actuator motors to its arrows to remove the actuator motors. (See Fig.46 .)

[NOTE] The pulley gears and other gears which consist the gear unit may drop separately if the chassis ass'y is reversed without gear bracket and belt. See Fig. 47 to assemble them again.

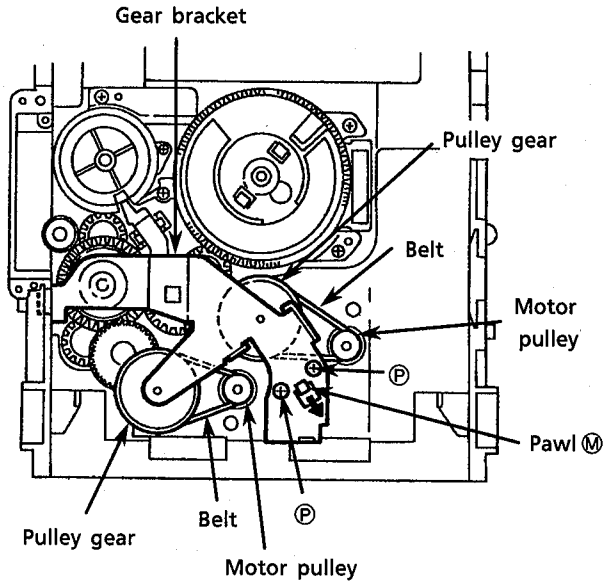

Fig. 44

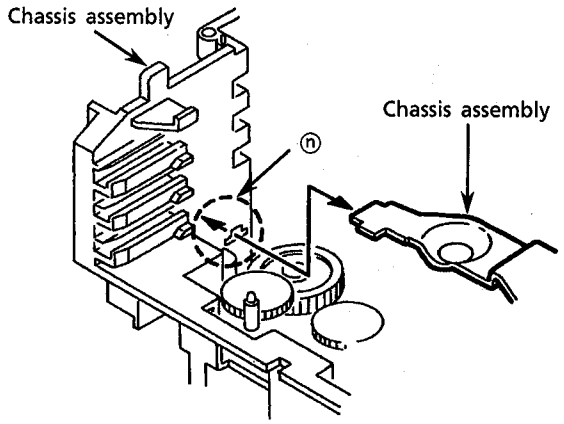

Fig. 45

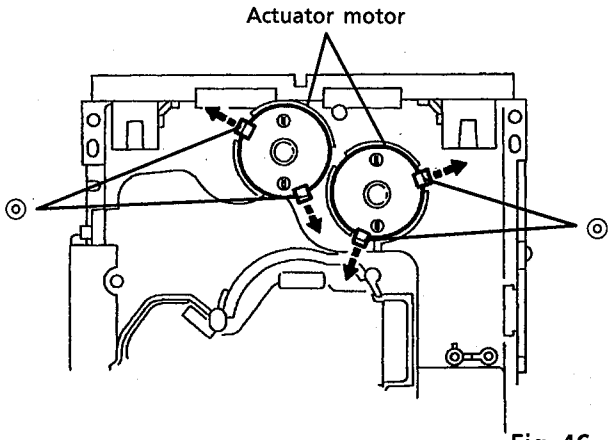

Fig. 46

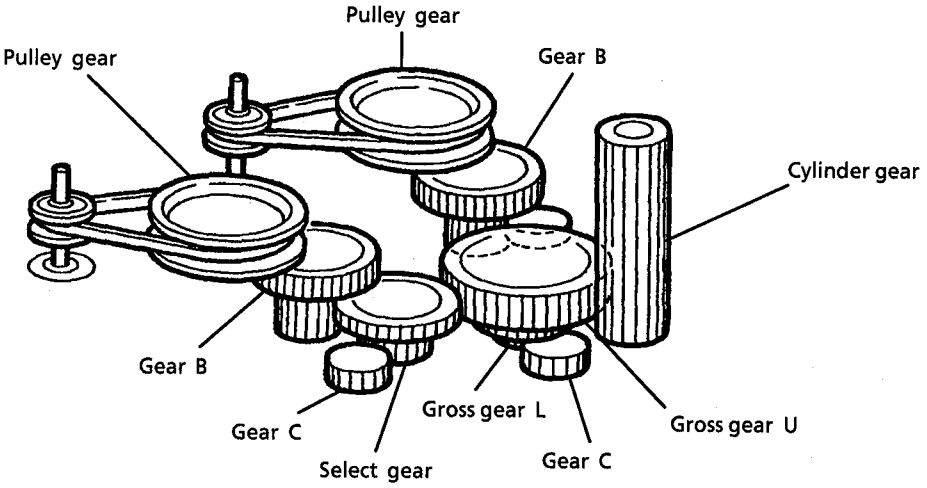

Fig. 47

(29) Removal of cam R1, R2 ass'y and cam gear L

1. Remove the slit washer securing Cam R1, R2 ass'y. (See Fig. 48.)
2. Remove 2 poles Ⓟ securing Cam R1 to remove Cam R2 from Cam R1.
3. Remove the slit washer securing Cam gear L.
4. Remove Cam gear L from the C.G. base ass'y.

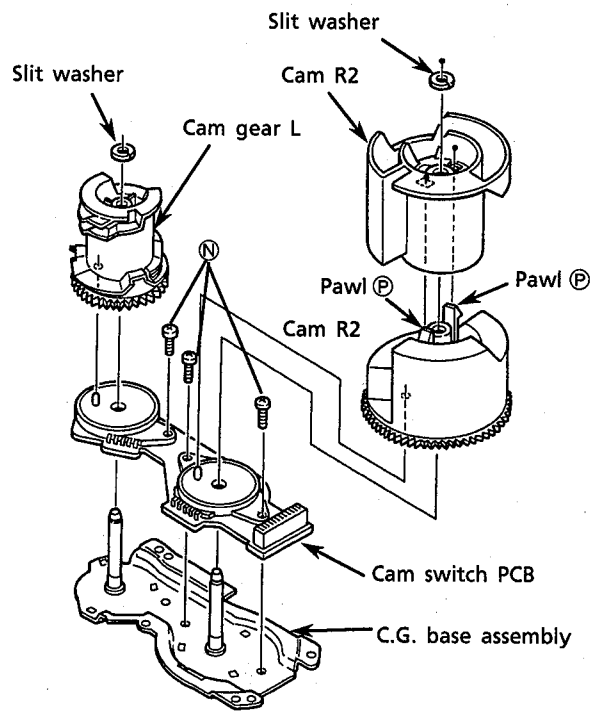

Fig. 48

(30) Removal of C.G. base ass'y

Remove 3 screws Ⓝ securing the C.G. base ass'y. (See Fig. 48 and 49.)

[NOTE] Set the drive unit's pawl Ⓡ so that it is positioned as shown in Fig. 49.
Confirm that the cam gear L engages with the gear unit by rotating the cam gear L.

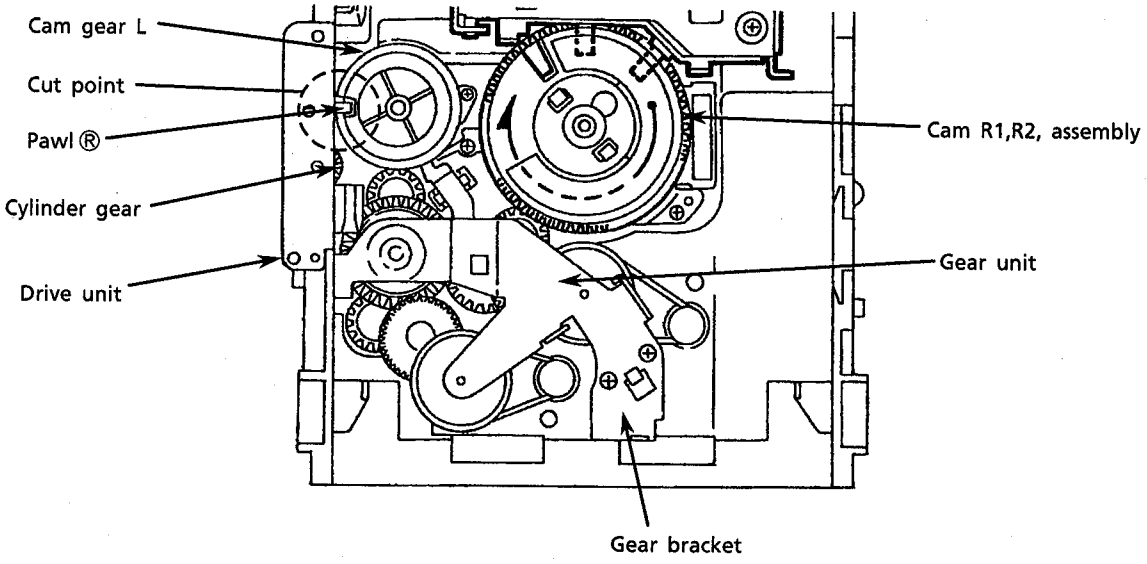

Fig. 49

(31) Removing the Pickup
1. Remove the CD mech. assembly.
2. Release the shaft to remove the pickup.

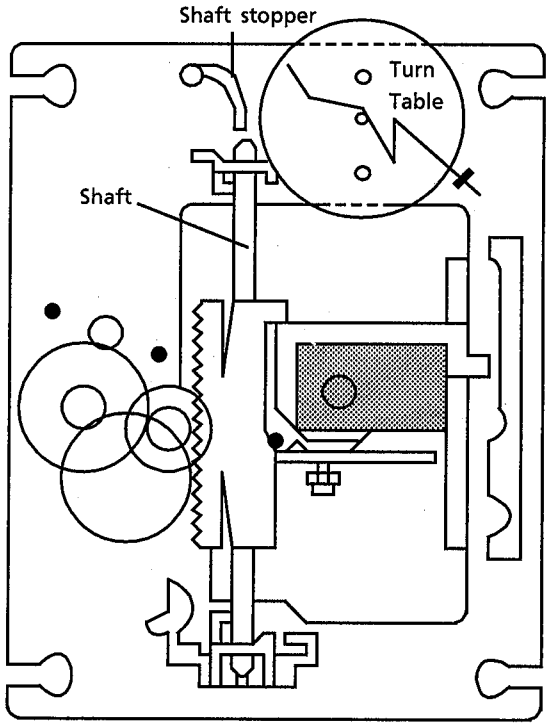

Fig. 50

(32) Spindle motor installation
1. Tighten the 2 screws to the same torque.
2. Fasten the spindle and feed motor P.C. board with the screw and solder.
3. Install the turntable.When installing, press straight down at the center of the turntable until the distance from the surface of the mech. base to the turntable is exactly 19.4±0.1mm.

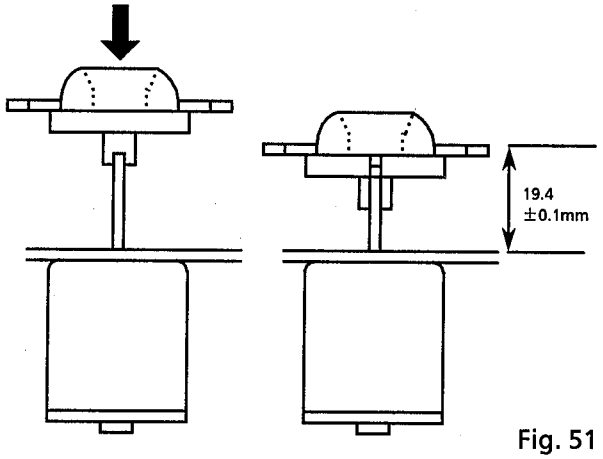

Fig. 51

(33) Removing the Spindle motor
1. Remove the CD mech. assembly.
2. Remove the turntable, and remove the 2 screws Ⓧ retaining the spindle motor.
3. Remove the screw retaining the spindle and feed motor circuit board and unsolder it.

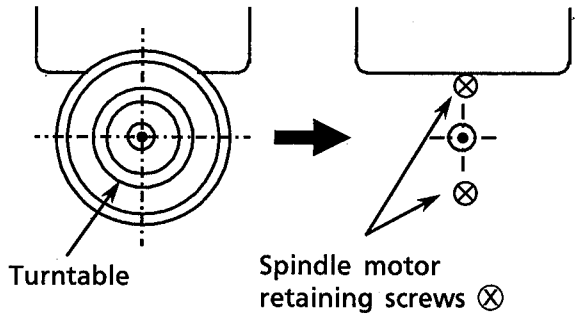

Fig. 52

(34) After inserting the turntable, bond the motor shaft and turntable together (at the section marked by an arrow in fig 53 on the left below).

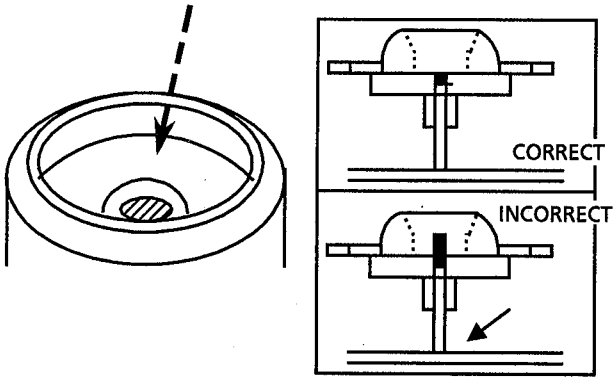

Fig. 53

(35) Use "LOCKTITE" #460 bonding agent, and apply as little as possible.

Take care not to allow any excess bonding agent to get onto the turntable.

Be extremely careful not to allow bonding agent to adhere to the motor bearing (the section marked by an allow in fig. 53 on the right).

Connected an extension cord

1.Remove the CD changer mechanism ass'y.
2.Disconnect the 7pin wire from the CN613(Source selector & SEA P.C.B)and disconnect the 7pin wire.
3.Connected the extension cord CN603 to CN613.

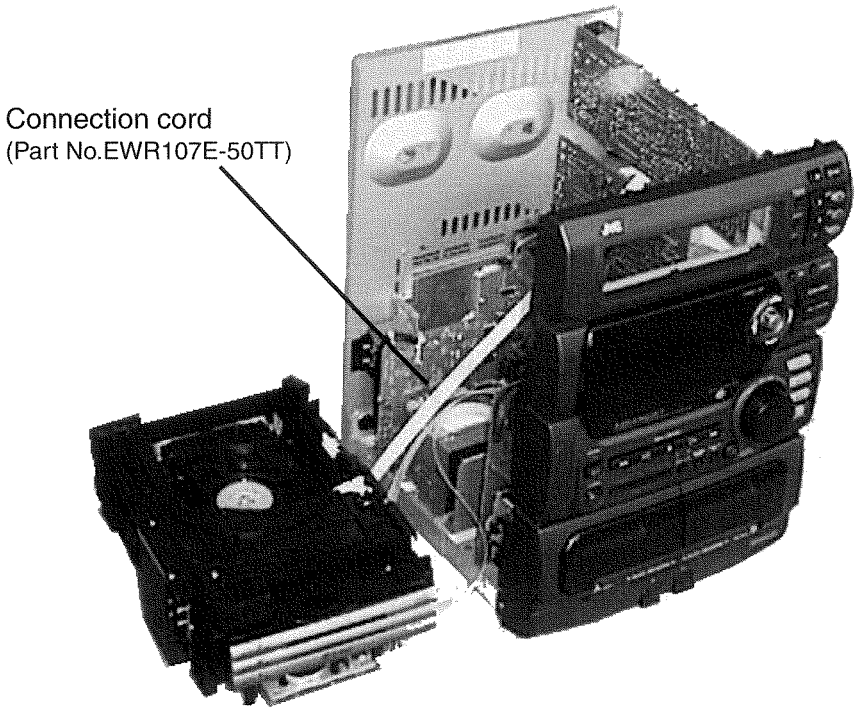

Changer mechanism Ass'y

Adjustment procedures

■ Tuner section

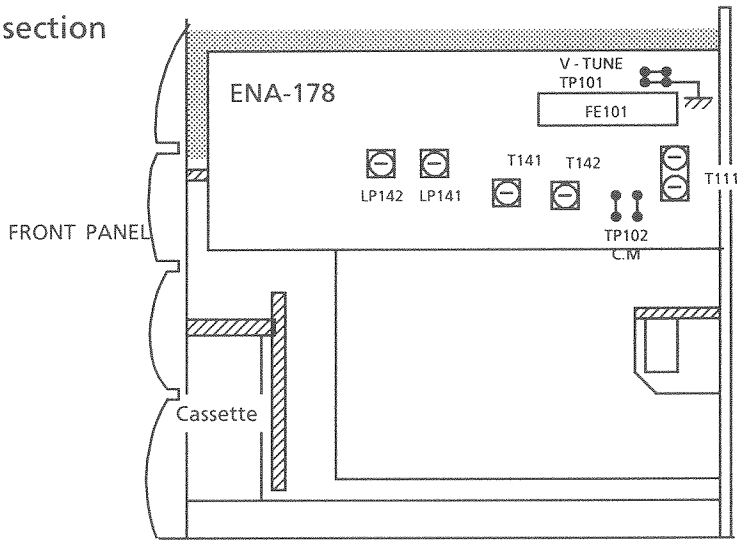

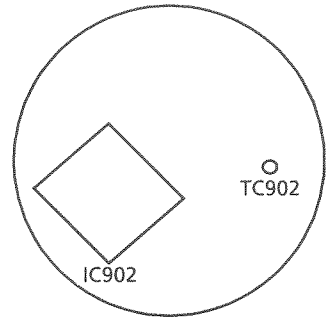

ENB-255-1
(System control PCB)

Fig.1

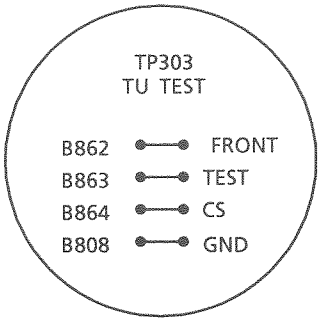

ENC-139-2
(Deck control PCB)

Clock Adjustment

1. After connecting B863 and B864 with some wire as shown in the figure below, connect the AC power cord into an AC outlet.
2. Confirm that the display is off and remove the wire.
3. Connect a frequency counter to TP303 B862 and B808.
4. Adjiust TC902 for the frequency 50000±0.29Hz.

(1) Tuning voltage

Confirm the voltages at TP101 is within the standard values shown in the table below. If the voltages are not satisfied, replace T111 for MW 5or FE101 for FM.

Tuning range & FM Tuning voltage (Unit : V)

Area	Range				
	LW (kHz)	MW (kHz)	FM (MHz)	FM TU.VOL	
				87.5MHz	108.0MHz
the U.S.A,Canad	—	530~1710	87.5~108.0	1.6±1.0	8.0±2.0

AM Tuning voltage (Unit : V)

Area	Frequency (MW)						
	522KHz	530KHz	531KHz	1600KHz	1602KHz	1629KHz	1710KHz
the U.S.A,Canad	—	>0.8	—		—	—	<8.8

(2) FM center meter

Receive a broadcast which understanding the frequency by using the function of 'MANUAL SEARCH'. Adjust T141 (detector coil) so that the voltage at TP102 becomes 0±1.5mV.

■ Deck Adjiust point

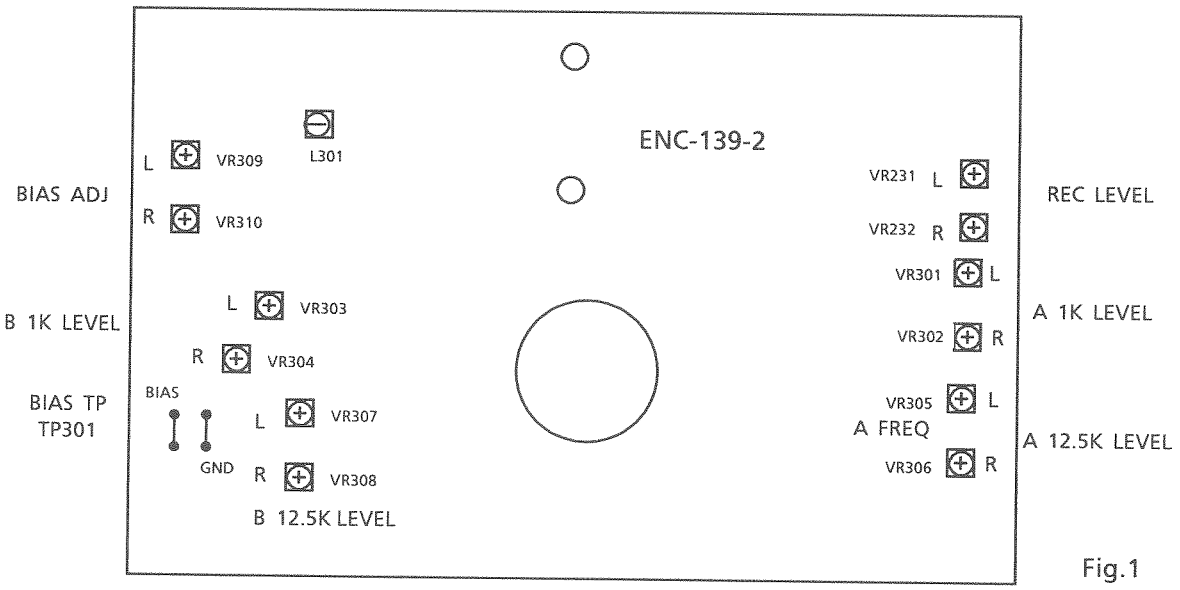

Fig.1

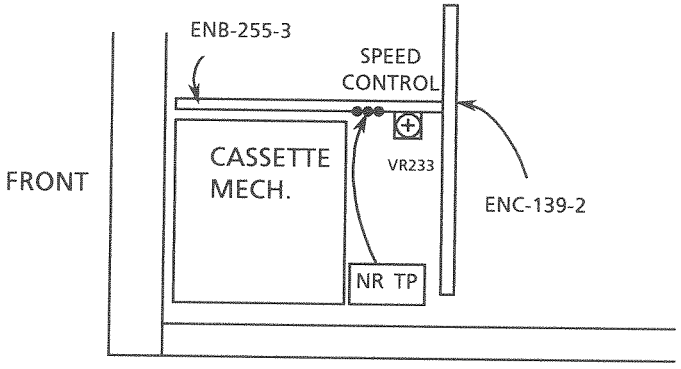

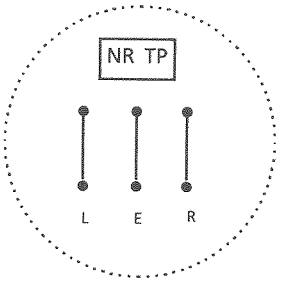

Speed Control PCB Fig.2

Deck section

1. Measuring instruments

Audio frequency signal generator (0dbs output at the 600 ohm output terminal from 50Hz to 20KHz)
Electronic voltmeter
Frequency counter
Wow & Flutter meter
Distortion Meter with band pass filter
Attenuator (600 ohm impedance)
A resistor with 600Ω

Tape No.	Frequency	Level (Wow & Flutter)	Purpose
VTT-703L	10kHz	−10dBs	Head azimuth , Frequency Response
VTT-712	3000Hz	0dBs 0.025%WRMS	Tape Speed , Wow & Flutter
VTT-724	1kHz	−4dBs	Standard Level
TMT-6447	—	—	Blank Skip
TMT-6247 , TMT-6237	—	—	Music Scan
TMT-7088S	—	—	Recording standard Normal : UR
AC-712	—	—	Recording standard METAL :MA
AC-513	—	—	Recording standard CrO_2 : SA
TW-2111, TW-2121	—	—	Forward / reverse play torque measuring
TW-2231	—	—	Feed forward / rewind torque measuring
C-120 Tape	—	—	Confirming the tape running

2.Adjustment and repairing the mechanism

Item	Adjustment method	Standard value	Remarks
Head azimuth	Deck A 1. Connect an electronic voltmeter to the NR TP901(figure 2) to playback VTT-703L. 2. Adjust screw Ⓐ so that the indication of the voltmeter becomes maximum when PLAY (▶) is pressed. 3. Adjust screw Ⓑ so that the indication of the voltmeter becomes maximum when PLAY (◀) is pressed. Deck B 4. Adjust screw Ⓒ so that the indication of the voltmeter becomes maximum when PLAY (▶) is pressed. 5. Adjust screw Ⓓ so that the indication of the voltmeter becomes maximum when PLAY (◀) is pressed. 6. After making the adjustment,apply screw lock to prevent screws Ⓐ, Ⓑ, Ⓒ and Ⓓ coming loose.	Maximum	1. **Refer to figure 3.** 2. When the specified characteristic cannot be obtained because of head wear, excessive magnetization, etc., replace the head assembly and adjust the head azimuth. Also, perform the electric adjustment. 3. When there is the difference of more than 3 ~ 4 dB between left and right output levels, replace the head assembly to avoid complaints.
Playback torque	1. Measure the torque in the playback mode by the torque meter.	26 ~ 72 g-cm	When the standard torque cannot be obtained, replace the FR arm assembly or motor.
Fast forward torque	1. Measure the torque in the fast forward mode by the torque meter.	75 ~ 175 g-cm	When the standard torque cannot be obtained,replace the FR arm assembly or motor.
Rewind torque	1. Measure the torque in the rewind mode by the torque meter.	75~ 175 g-cm	When the standard torque cannot be obtained, replace the FR arm assembly or motor.
Wow & flutter	1. Connect the wow & flutter meter to the DOLBY TP(figure 2) and play back VTT-712. 2. Its reading should be within 0.25% (WTD).	Less than 0.25%	As a complaint may occur if the wow & flutter fluctuates by 0.1% even though it is allowed in the standard, repairing is required.

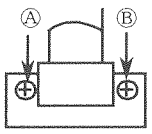

Deck A

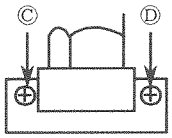

Deck B

Fig.3

3. Electrical Adjustments (Make the following adjustments after adjusting the head azimuth.)

In principle, the adjustments should be made in the following sequence.
Set the NR switch to OFF and the BEAT CUT switch to "1".
Adjustments marked with an asterisk (*) should always be made after the head is replaced

0dBs=0.775V

Item	Adjustment Method	Adjustment Location	Standard Value	Remarks
Tape Speed	1. Connect a frequency counter to the NR TP 901 (figure 2) and play back VTT-712. 2. Adjust the semi-fixed resistor VR901 on ENH-292 - 1 (figure 2).	VR233	3,000 Hz ±10Hz	Connect a wow & flutter meter with a built-in frequency counter to the speaker terminals.
* Standard level (Playback Level)	1. Connect an electronic voltmeter to the NR TP901(figure 2). Play back VTT-724 (1 kHz : −4dBs) to adjust the semi - fixed resistors.	**Deck A** L: VR301 R: VR302 **Deck B** L: VR303 R: VR304	488mV (−4dBs)	1) The playback level varies when the head is replaced so should be adjusted. Use an electronic voltmeter with an impedance of 100 kΩ or more.
* Playback Frequency Response	1. Connect an electronic voltmeter to the NR TP 901(figure 2). 2. Play VTT-703L (10kHz : −10dBs) and adjust semi-fixed resistors to obtain the standard values.	**Deck A** L: VR305 R: VR306 **Deck B** L: VR307 R: VR308	245mV (−10dBs)	—
* Recording Bias Frequency	1. Connect a frequency counter to the BIAS TP(figure 2), and perform a recording to adjust bias frequency.	L301	105 kHz ±5 kHz	
* Record / Play Frequency Response (Bias current)	1. Supply 1kHz and 12.5kHz with 30mV signals to AUX terminals respectively to record them. 2. Connect an electronic voltmeter to the NR TP901 (figure 2) to confirm the recorded values. 3. If the values are not satisfied, adjust the semi-fixed resistors and record the signal again to confirm the recorded values.	L : VR309 R : VR310	0±2 dB with 1 kHz as the standard.	**Refer to figure 4 below.** 1) The recording and playback frequency response of a cassette deck are adjusted by adjusting the bias. 2) Perform the adjustment with normal tape and confirm that the values are within the range for metal tape.

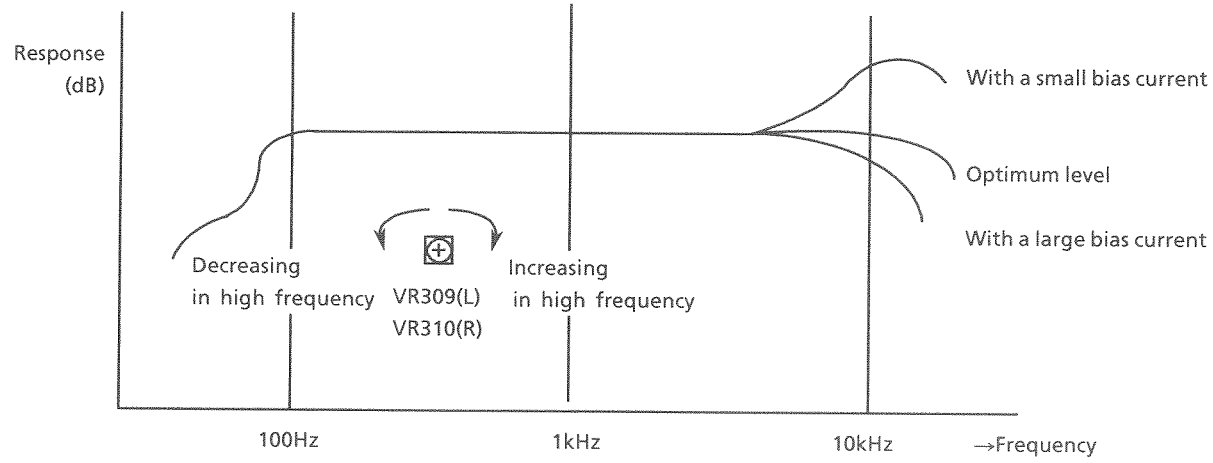

Fig.4

Flow of Functional Operation Until TOC is Read

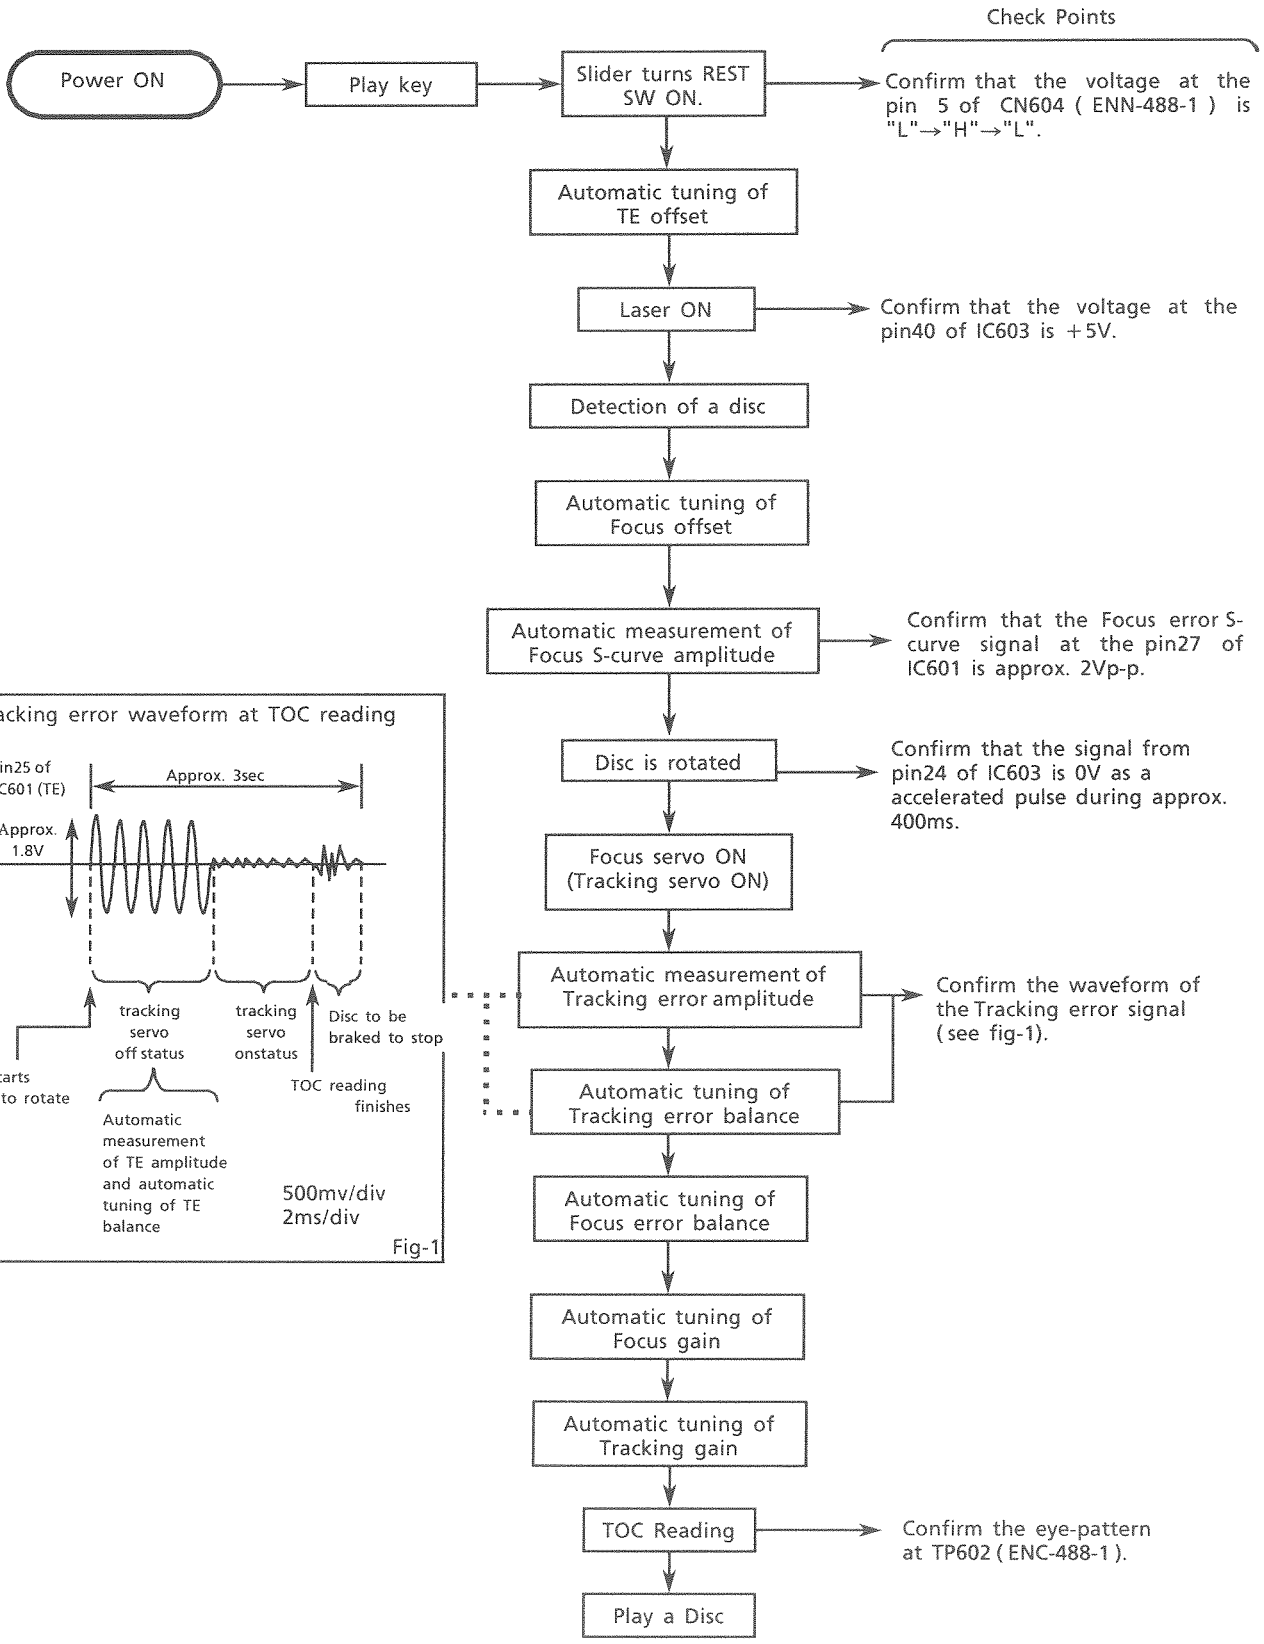
Check Points
Power ON
Play key
Slider turns REST SW ON.
Confirm that the voltage at the pin 5 of CN604 (ENN-488-1) is "L"→"H"→"L".
Automatic tuning of TE offset
Laser ON
Confirm that the voltage at the pin40 of IC603 is +5V.
Detection of a disc
Automatic tuning of Focus offset
Automatic measurement of Focus S-curve amplitude
Confirm that the Focus error S-curve signal at the pin27 of IC601 is approx. 2Vp-p.
Disc is rotated
Confirm that the signal from pin24 of IC603 is 0V as a accelerated pulse during approx. 400ms.
Focus servo ON (Tracking servo ON)
Automatic measurement of Tracking error amplitude
Confirm the waveform of the Tracking error signal (see fig-1).
Automatic tuning of Tracking error balance
Automatic tuning of Focus error balance
Automatic tuning of Focus gain
Automatic tuning of Tracking gain
TOC Reading
Confirm the eye-pattern at TP602 (ENC-488-1).
Play a Disc
■ Tracking error waveform at TOC reading
pin25 of IC601 (TE)
Approx. 3sec
Approx. 1.8V
VREF
tracking servo off status
tracking servo onstatus
Disc to be braked to stop
Disc starts to rotate
TOC reading finishes
Automatic measurement of TE amplitude and automatic tuning of TE balance
500mv/div
2ms/div
Fig-1

Maintenance of Laser Pickup

(1) Cleaning the pick up lens

Befor you replace the pick up, please try to clean the lens with a alcohol soaked cotton swab.

(2) Life of the laser diode (Fig.1)

When the life of the laser diode has expired, the following symptoms will appear.

(1) The level of RF output (EFM output: ampli tude of eye pattern) will be low.

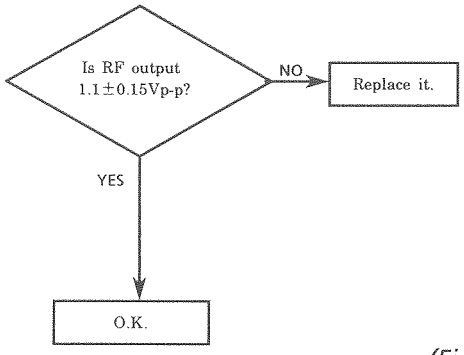

(Fig.1)

(3) Semi-fixed resistor on the APC PC board

The semi-fixed resistor on the APC printed circuit board which is attached to the pickup is used to adjust the laser power. Since this adjustment should be performed to match the characteristics of the whole optical block, do not touch the semi-fixed resistor.

If the laser power is lower than the specified value, the laser diode is almost worn out, and the laser pickup should be replaced.

If the semi-fixed resistor is adjusted while the pickup is functioning normally, the laser pickup may be damaged due to excessive current.

Replacement of Laser Pickup

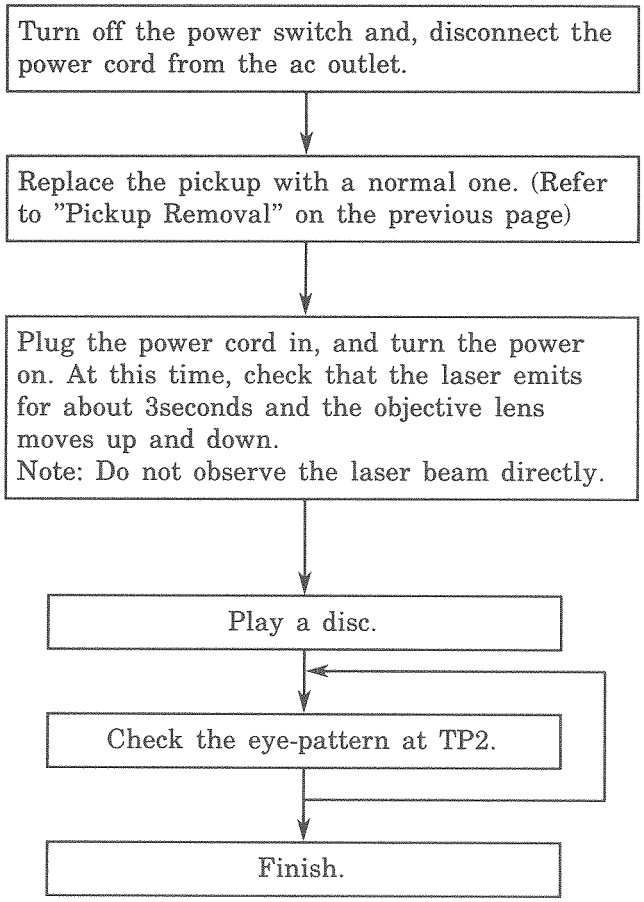
Turn off the power switch and, disconnect the power cord from the ac outlet.
Replace the pickup with a normal one. (Refer to "Pickup Removal" on the previous page)
Plug the power cord in, and turn the power on. At this time, check that the laser emits for about 3seconds and the objective lens moves up and down.
Note: Do not observe the laser beam directly.
Play a disc.
Check the eye-pattern at TP2.
Finish.

Block Diagrams

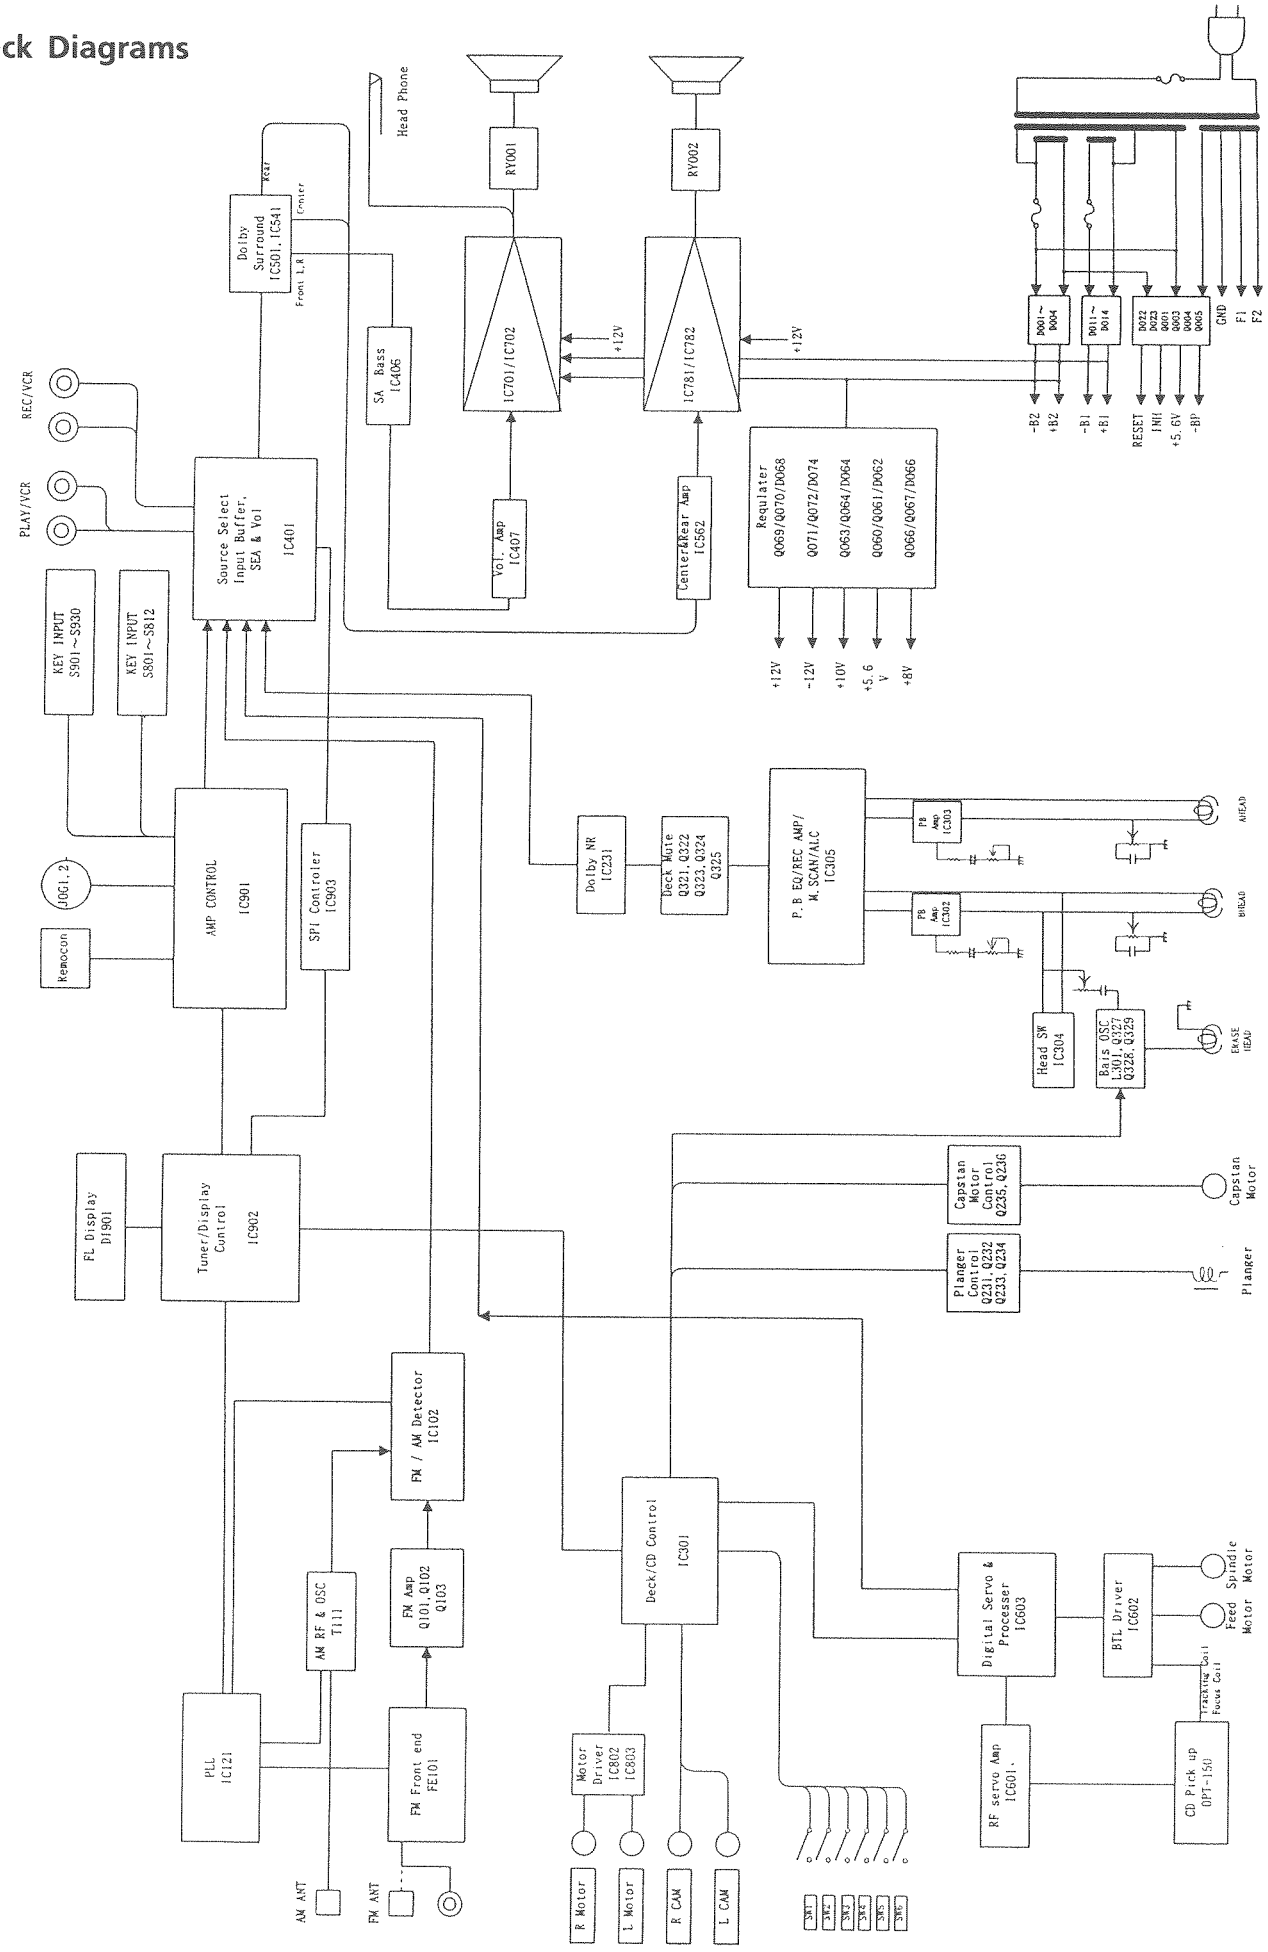

EXPLANATI(
MODEL CA-

SHEET NUMBER	MODEL NUMBE TO BE APPL
1/11	CA-D701T/CA-I /CA-D851TR
2/11	CA-D701T/CA-I /CA-D851TR
3/11	CA-D701T/CA-I /CA-D851TR
4/11	CA-D701T/CA-I /CA-D851TR
5/11	CA-D701T/CA-I /CA-D851TR
6/11	CA-D701T/CA-I
7/11	CA-D701T
8/11	CA-D851TR
9/11	CA-D701T
10/11	CA-D701T/CA-I /CA-D851TR
11/11	CA-D701T/CA-I /CA-D851TR

VERSION CODES

J : U.S.A.
C : CANADA
EN : NORDIC COUNTRIES
EF : CONTINENTAL EUROPE EXCEPT GERMANY
G : GERMANY
VX : EASTERN EUROPE
BS : U.K.
A : AUSTRARIA
UP : KOREA
UB : HONGKONG
US : SINGAPORE
UT : TAIWAN
U : UNIVERSAL EXCEPT ALL OF ABOVES

NOTES:
MARK (*) IS TO SHOW DEVIA
DETAILS ARE EXPLAINED NE/

POWER SUPP

J/C

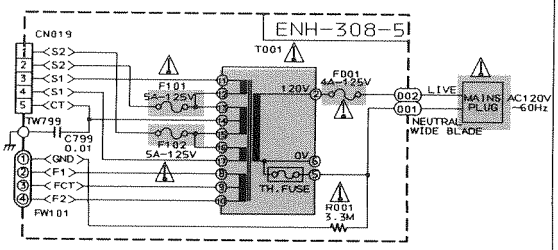

EF/EN/G/

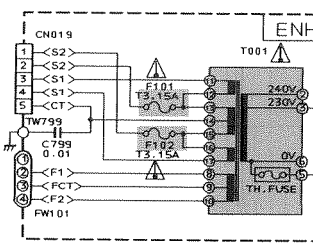

UP

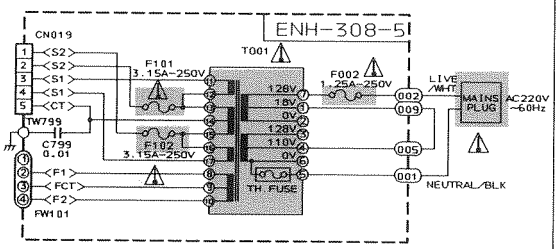

U/U

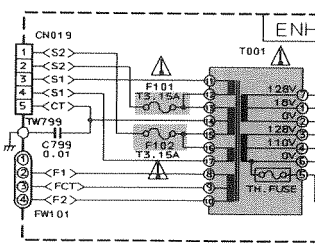

VOLTAGE SELECTOR LOCATION



ATION OF OVERALL OF SCHEMA.
L CA-D701T/CA-D761T/CA-D851TR

NUMBERS APPLIED	CIRCUITS DESCRIPTION
T/CA-D761T TR	·PRIMARY WITH MAINS TRANSFORMER
T/CA-D761T TR	·DC REGULATORS/AUDIO OUTPUT
T/CA-D761T TR	·EXTERNAL SIGNAL INPUT ·SOURCE SELECTOR SWITCH ·MIC AMPLIFIER
T/CA-D761T TR	·TAPE DECK MECHANISMS CONTROL ·MISCELLANEOUS CIRCUITS FOR TAPE DECK SUCH AS AMPLIFIER, SWITCH, BIAS AND OTHERS
T/CA-D761T TR	·FL DISPLAY/USER CONTROL KEYS FOR TUNER SECTION AND AUDIO DISC/SYSTEM CONTROL LSI FOR TUNER SECTION
T/CA-D761T	· (ONLY FOR J, C, U, UB, US, UT, UP, A) TUNER RF/IF/FM MULTIPLEX
-	· (ONLY FOR EF, EN, BS, G) TUNER RF/IF/FM MULTIPLEX
TR	· (ONLY FOR EF, EN, BS, G) TUNER RF/IF/FM MULTIPLEX/RDS SIGNAL PROCESSOR ICs
-	· (ONLY FOR VX) TUNER RF/IF/FM MULTIPLEX
T/CA-D761T TR	·AMPLIFIER FOR AUDIO DISC ·SYSTEM CONTROL LSI FOR AUDIO DISC
T/CA-D761T TR	·AUDIO DISC MECHANISMS CONTROL

DEVIATION IN VERSIONS.
NED NEAR THE MARK.

SUPPLY SECTION

EN/G/VX/BS

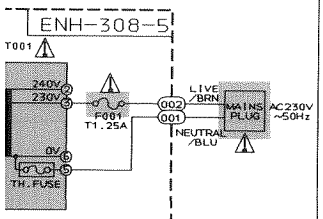

A

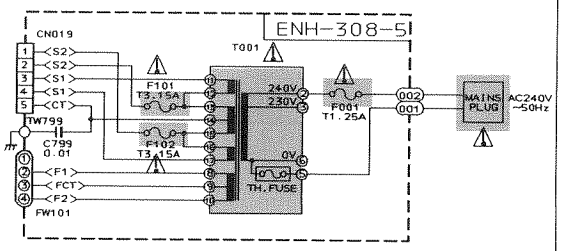

U/UB/US/UT

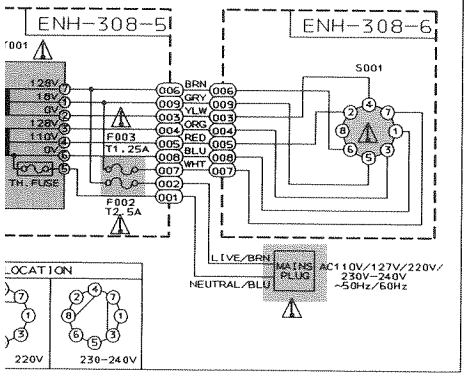

Tuner Section: Only used for J,C,U,UB,US,UT,UP,A version)

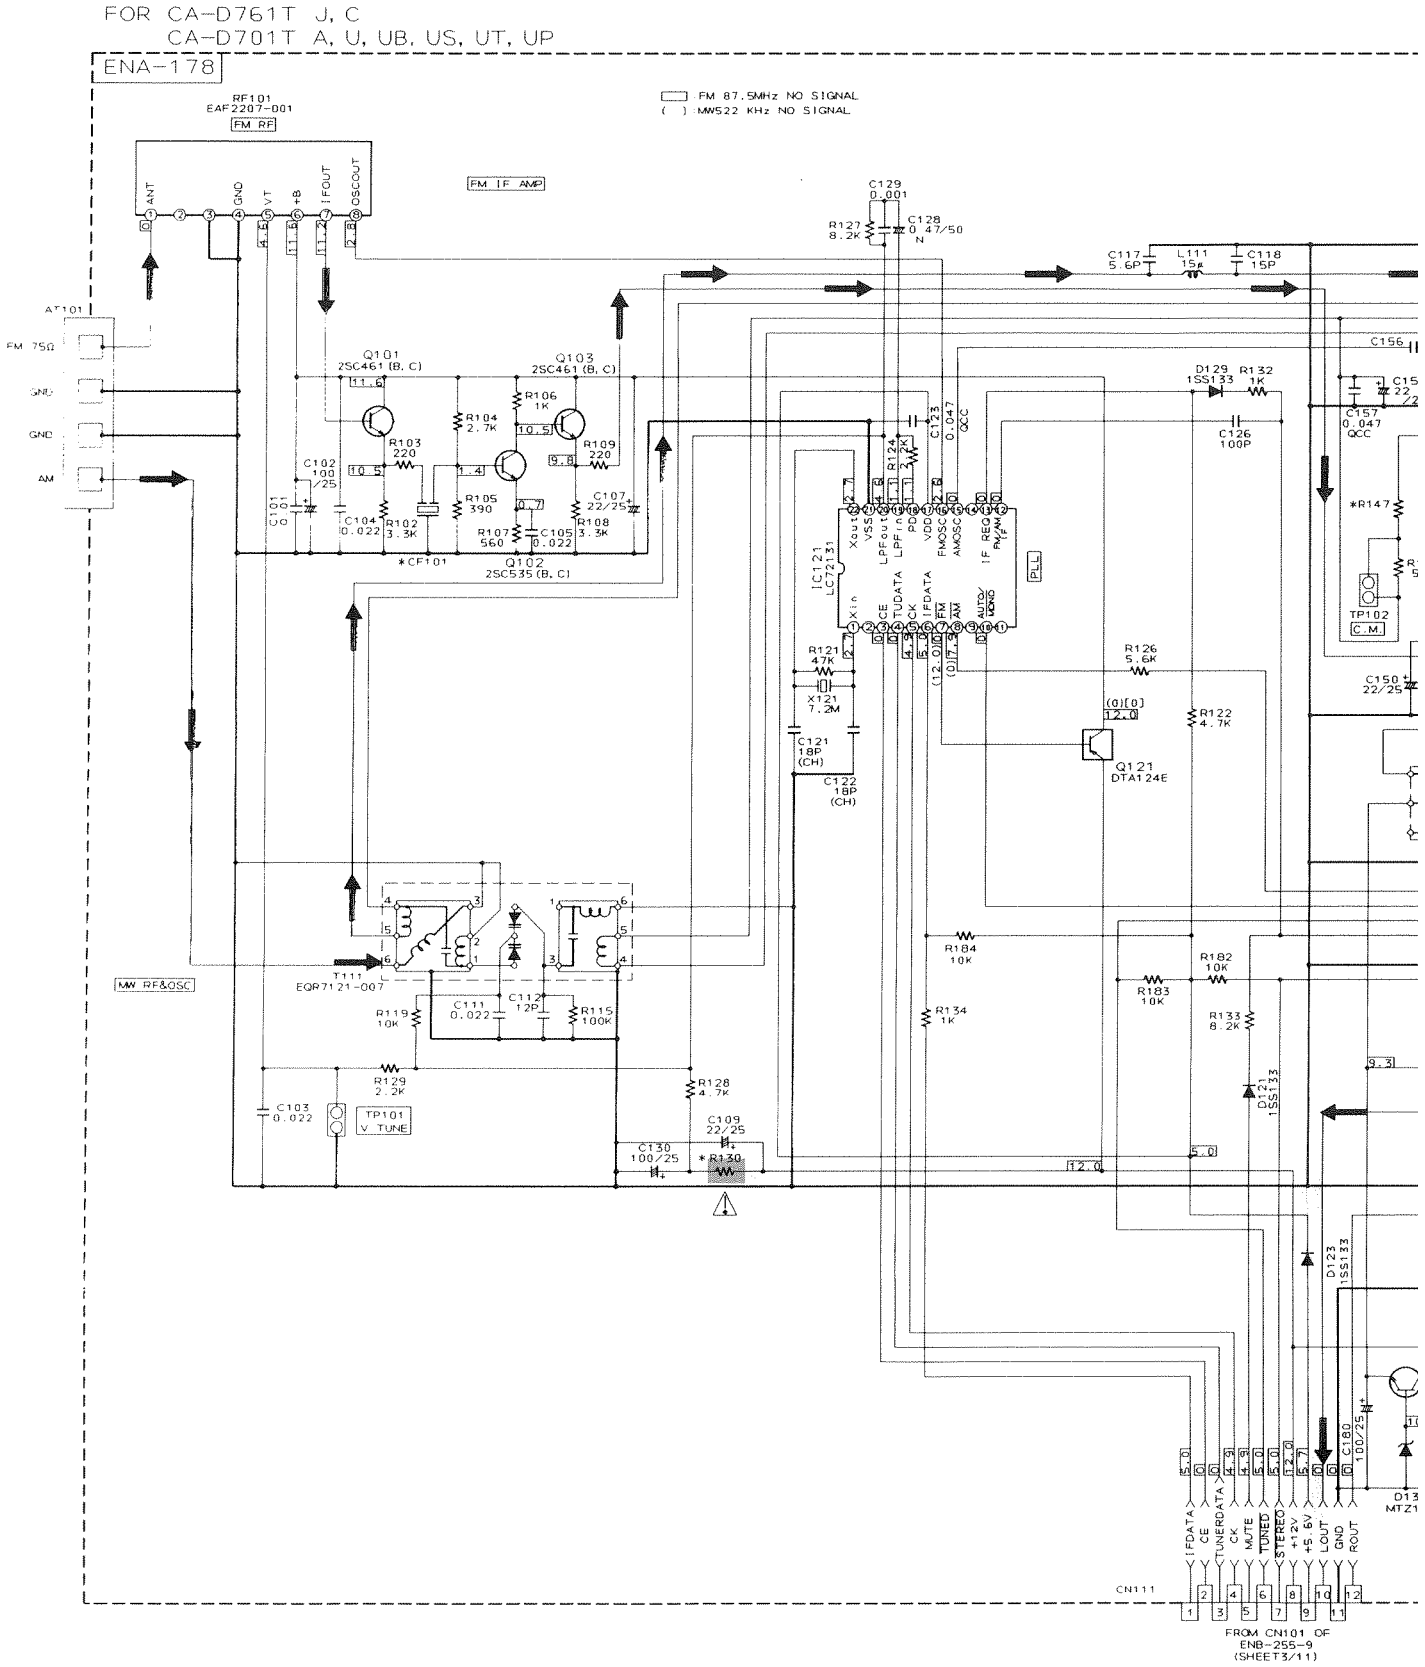

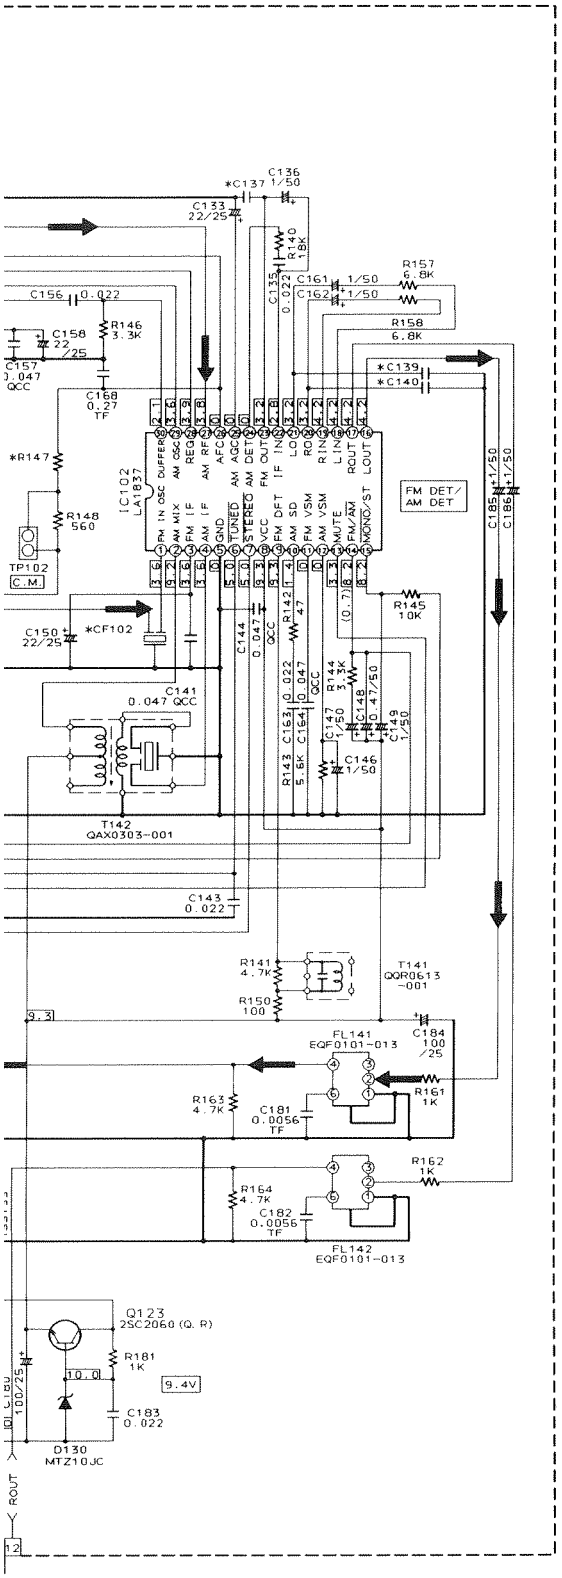

* MARK

	CA-D761T J, C	CA-D701T U, UB, US, UT, UP, A
C137	680P	560P
C139, 140	0.033TF	0.022TF
CF101, 102	QAX0284 -001Z	QAX0285 -001Z
R130	68 UNF.C. (1/4W)	68 UNF.F. (1/4W)
R147	15K	27K

RF101
EAF2207-001

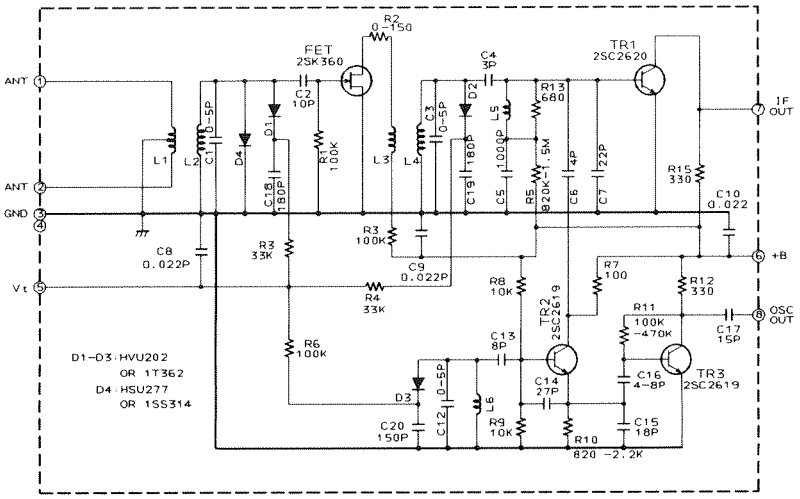

Notes:

1. ⬅ indicates Main signal path.
2. ⇦ indicates REC. signal path.
3. ⬅ indicates CENTER & REAR signal path.
4. When replacing the parts in the darkened are (▨) and those marked with ⚠ ,be sure to use the designated parts to ensure safety.
5. This is the standard circuit diagram. The design and contents are subject to change withoutnotice.

P2-47-a P2-47-b

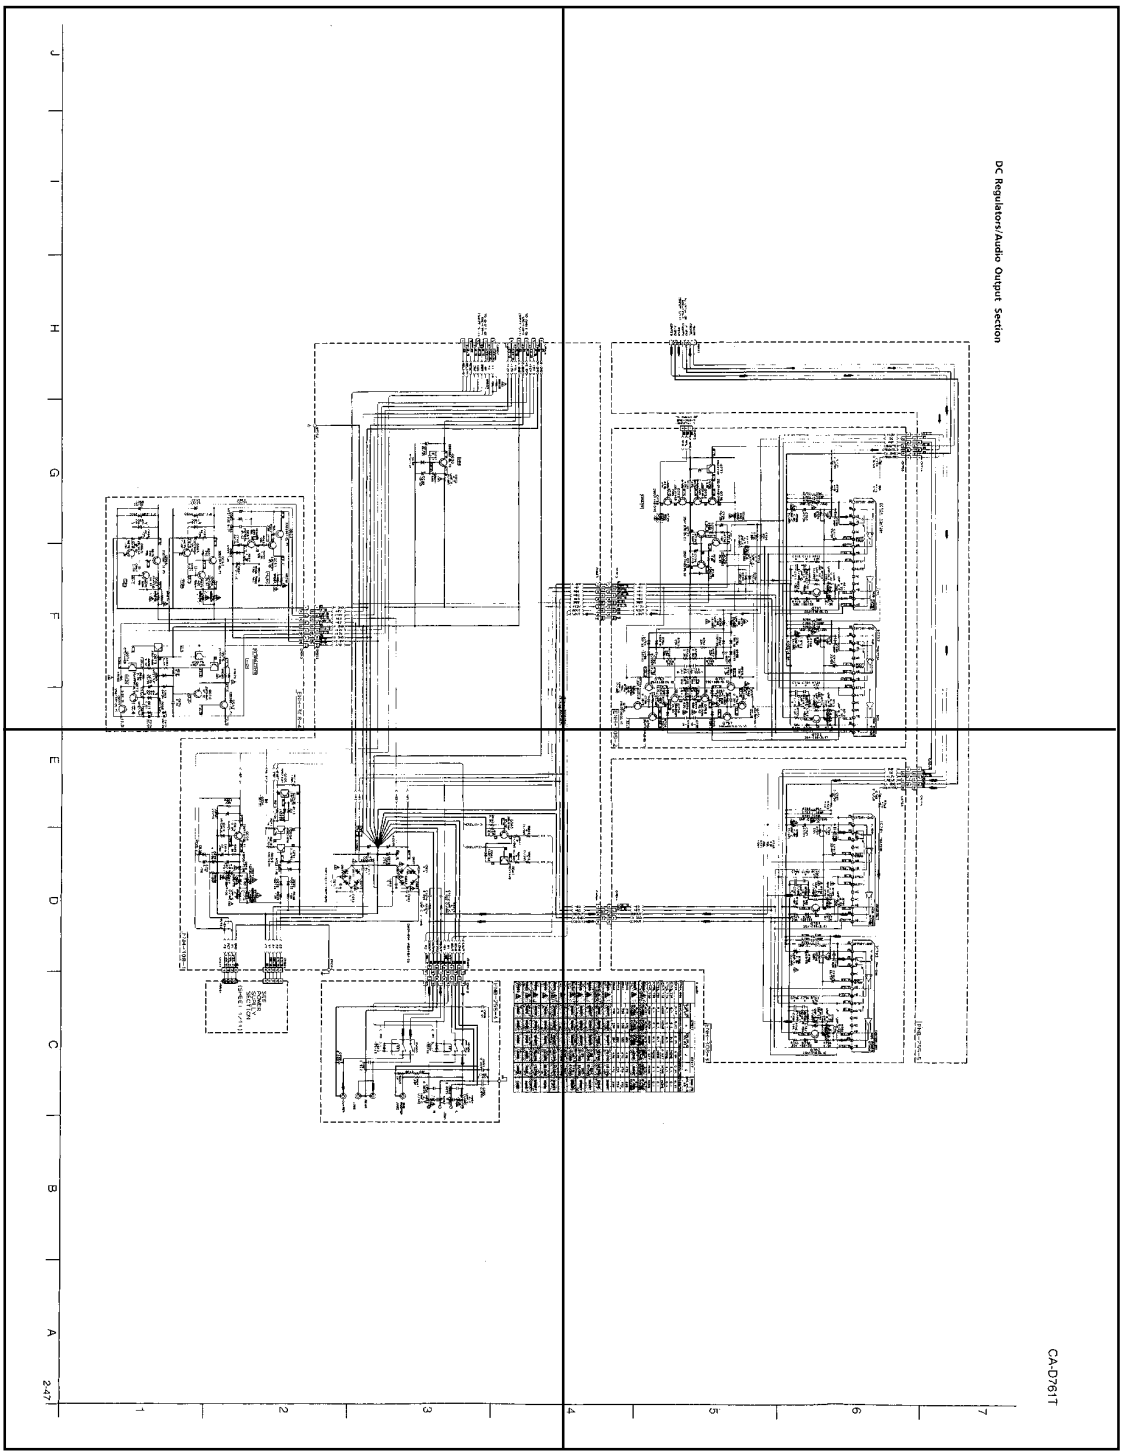

P2-47-c P2-47-d

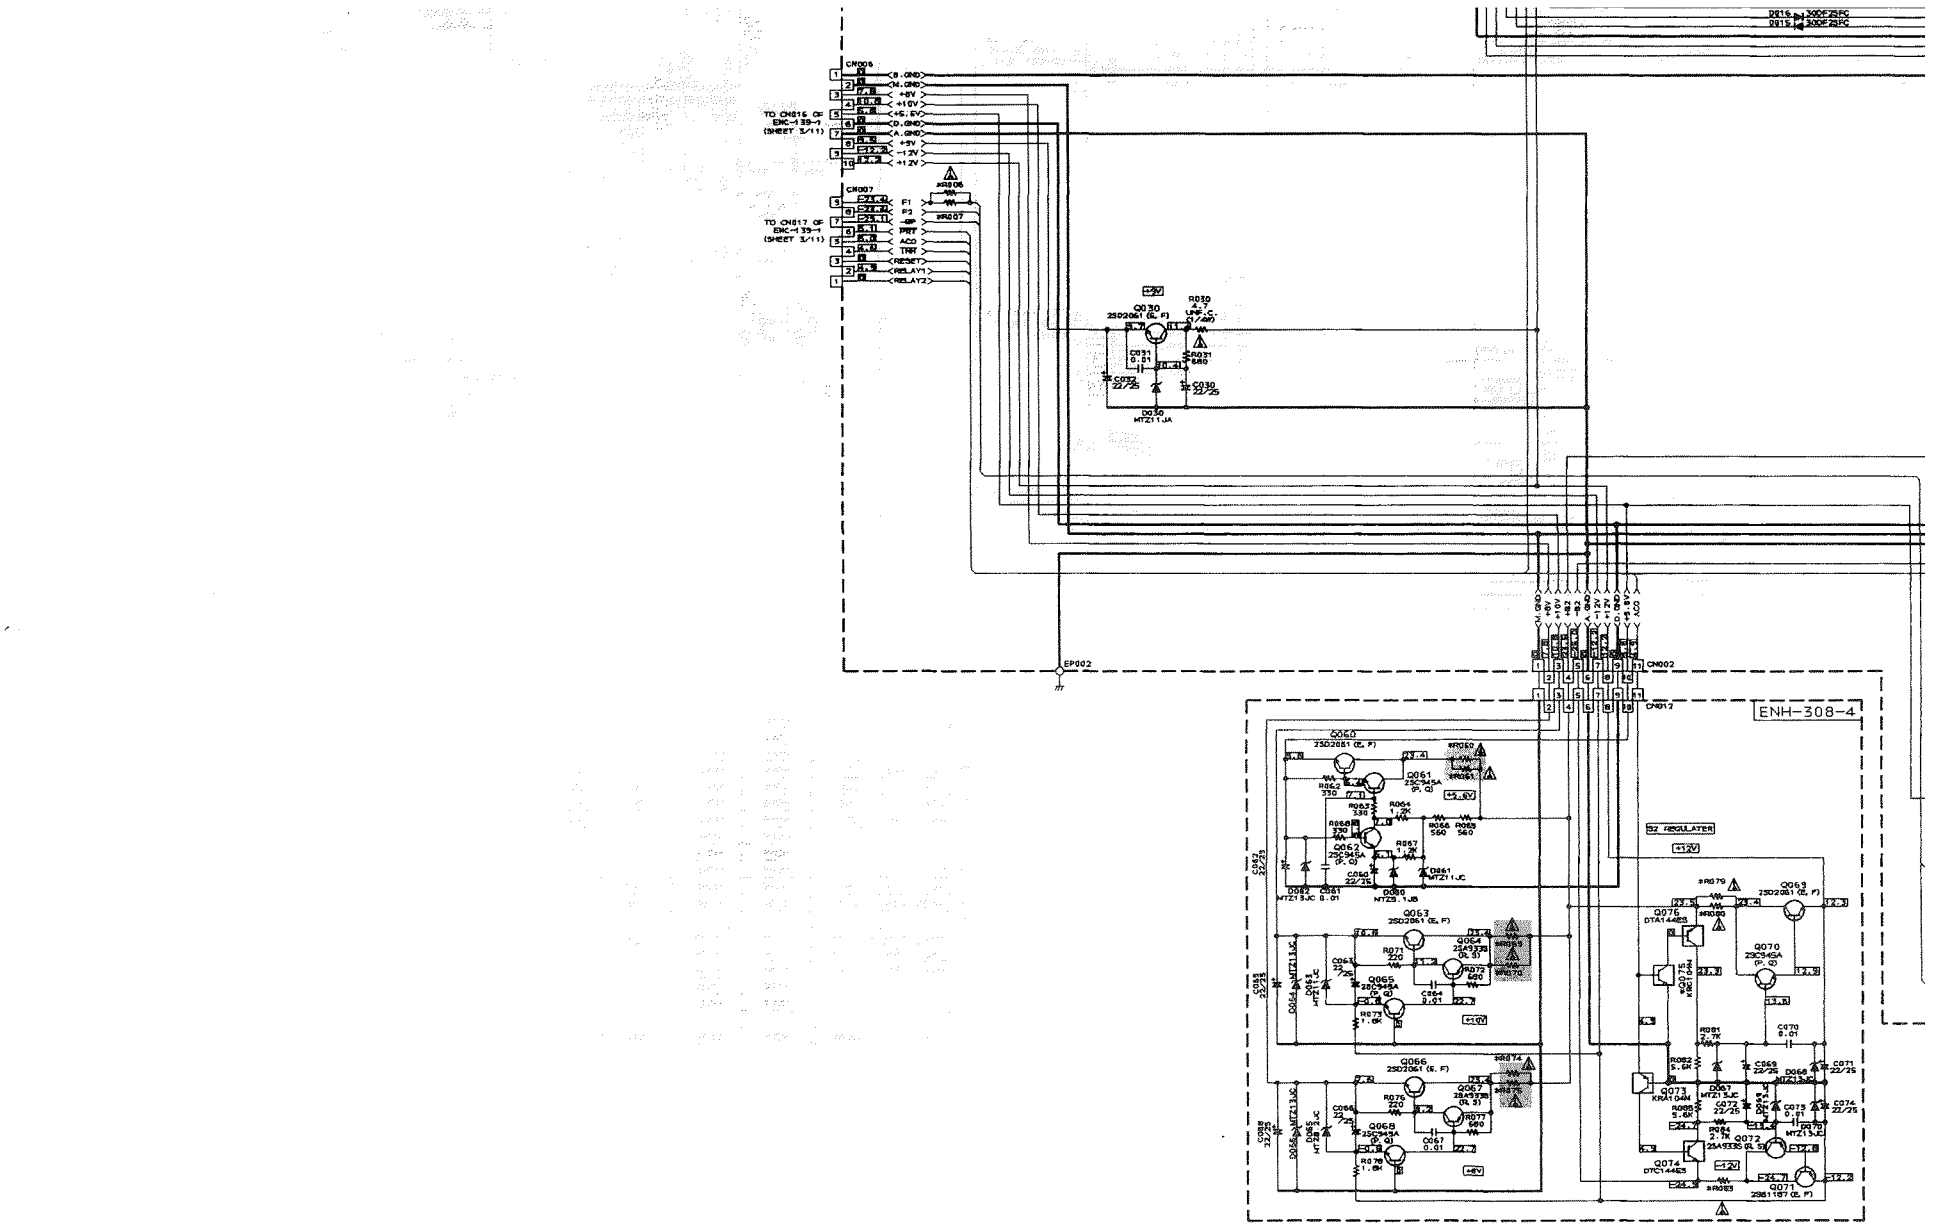
ENH-308-4
CN005
CN007
CN002
CN012
EP002
TO CN816 OF EMC-139-1 (SHEET 3/11)
TO CN817 OF EMC-139-1 (SHEET 3/11)
32 REGULATER
+12V
+8V
+5.6V
+1V
-1V
-12V

J | I | H | G | F

P2-47-a

DC Regulators/Audio Output Section

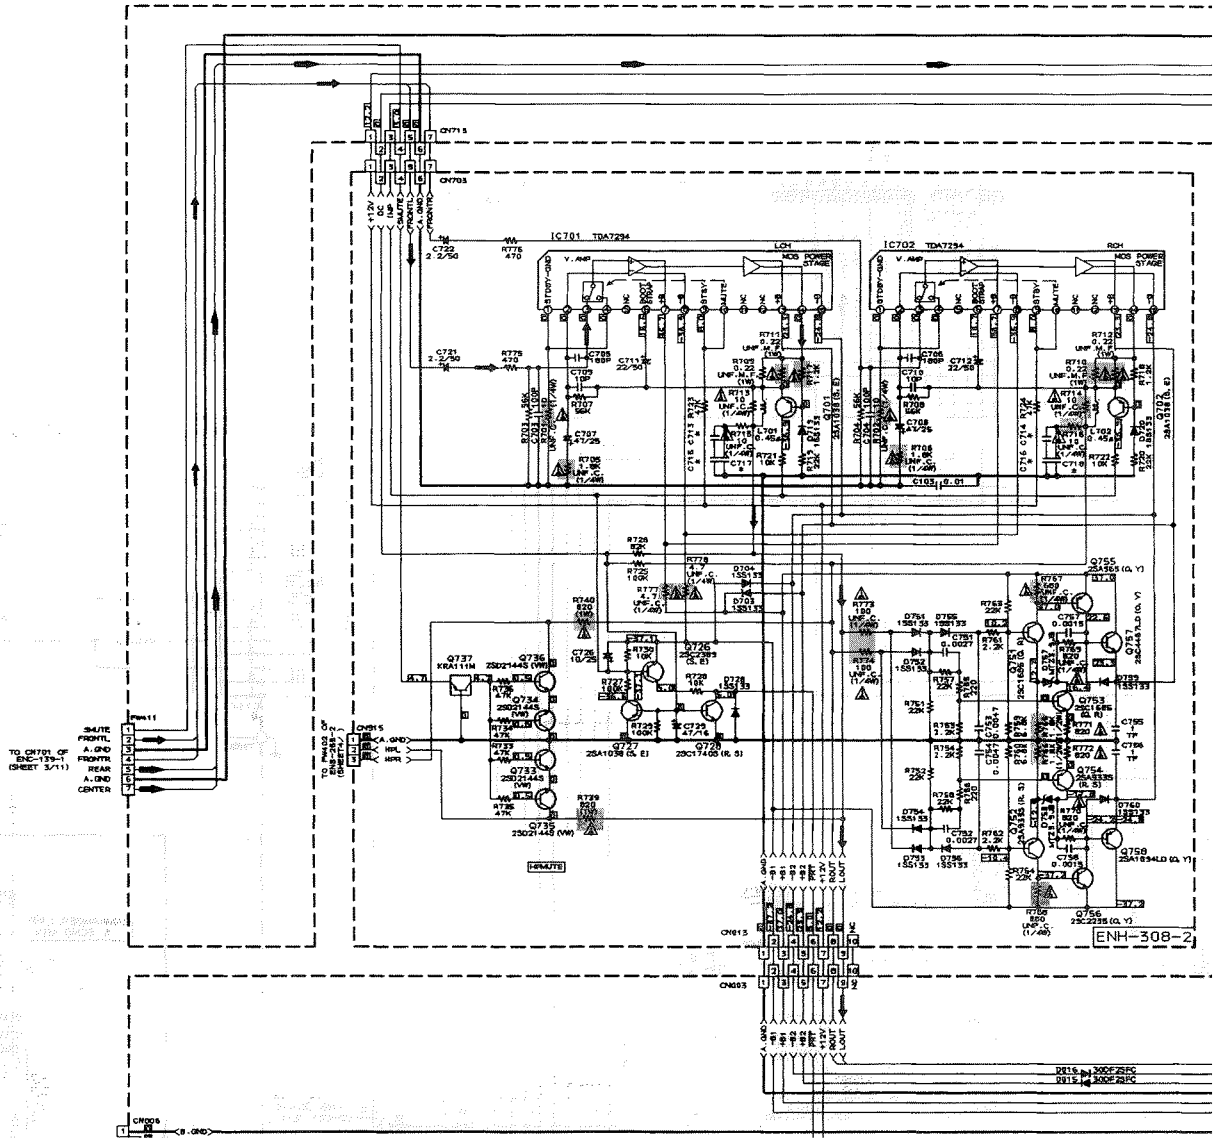

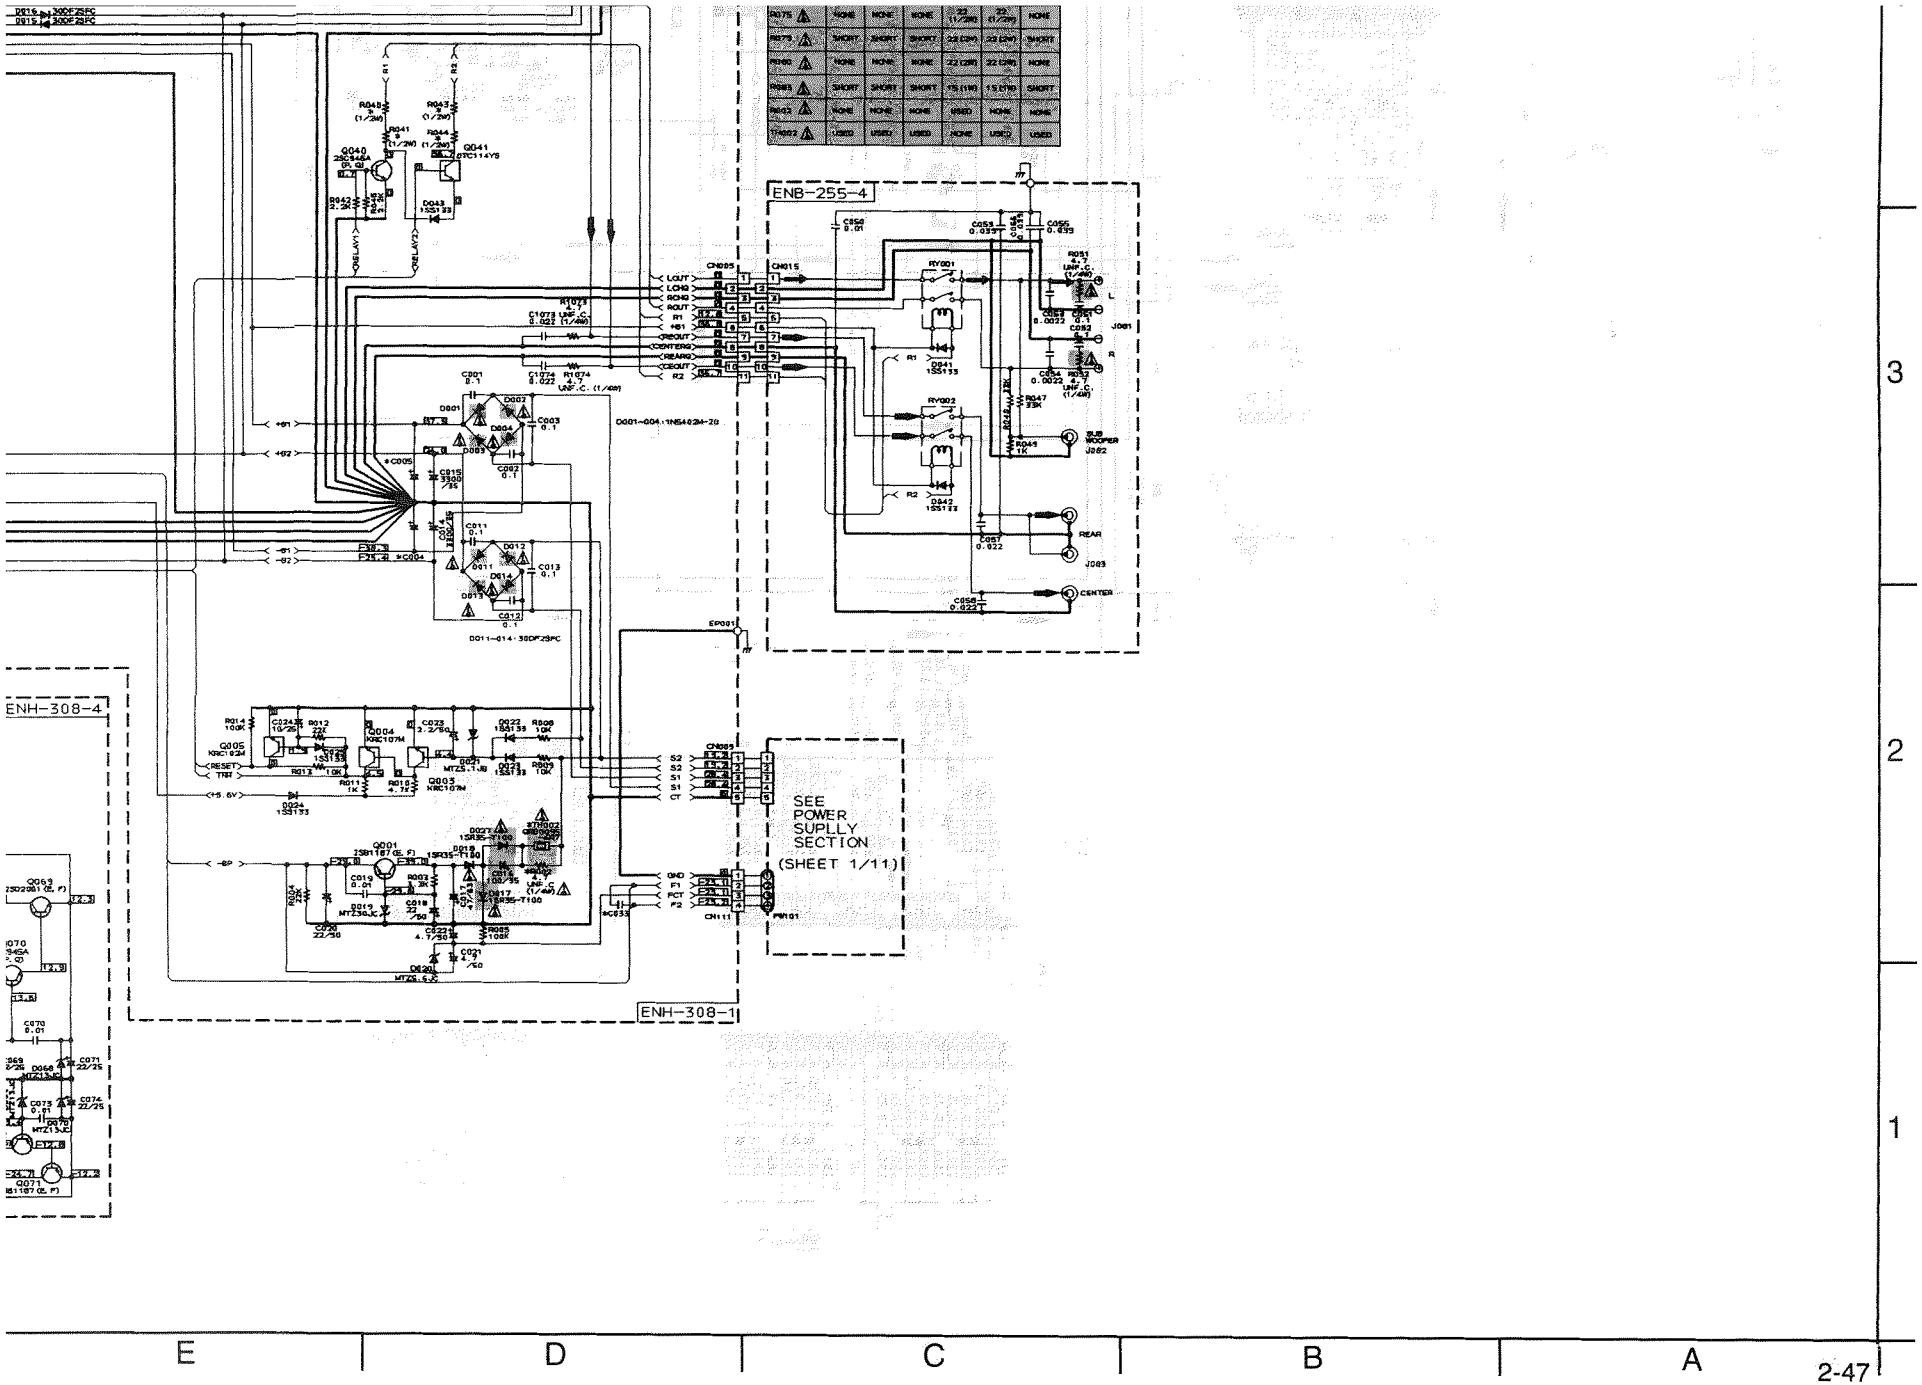
ENB-255-4
ENH-308-4
ENH-308-1
SEE POWER SUPLLY SECTION (SHEET 1/11)
E
D
C
B
A
3
2
1

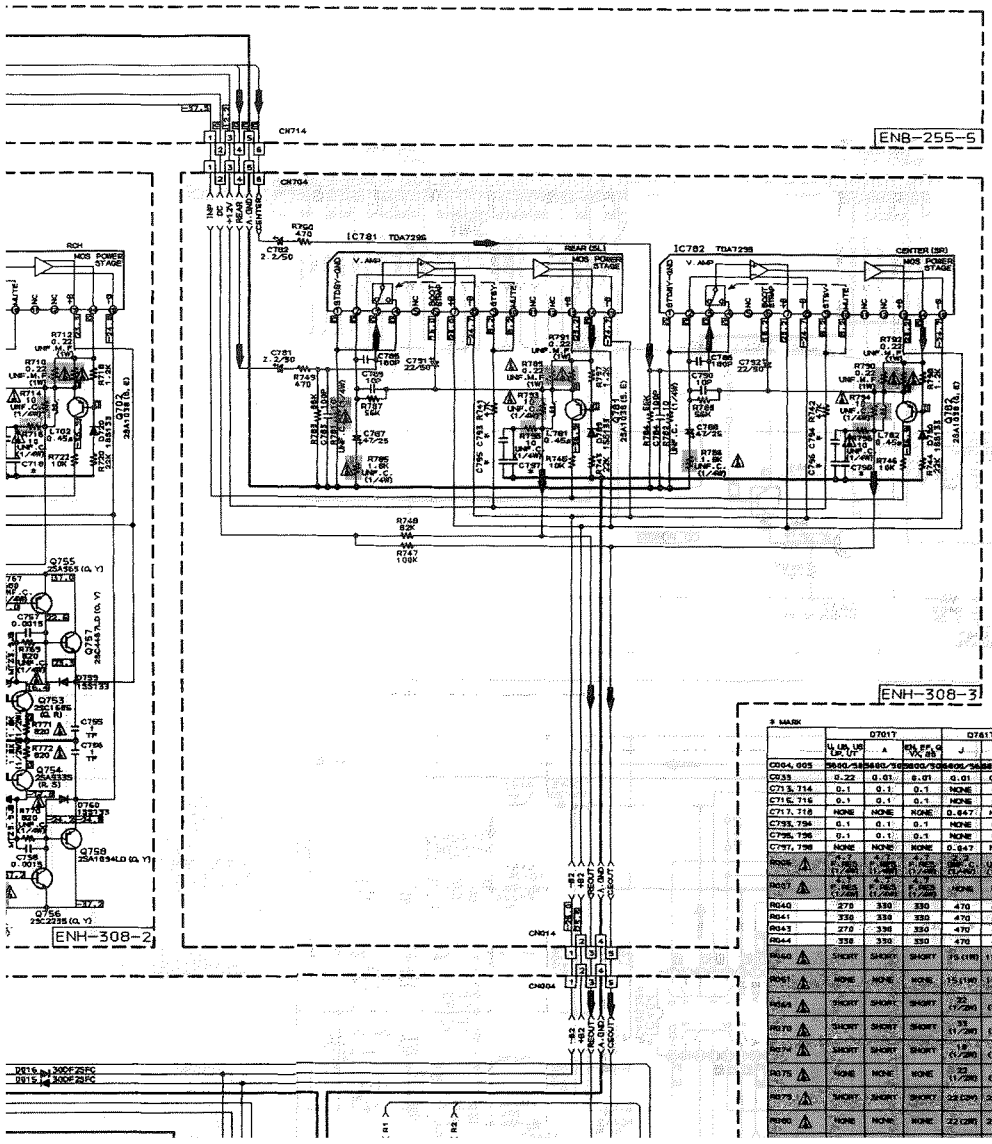

	D7017			D761T		D851TR
	U, UN, UC, LA, LC	A	EN, EP, Q, CA, CB	J	C	EN, EP, Q, CB
C004, 005	3800/3800/3800/3800/3800/3800/3800/3800/50					
C033	0.22	0.01	0.01	0.01	0.01	0.01
C713, 714	0.1	0.1	0.1	NONE	0.1	0.1
C715, 716	0.1	0.1	0.1	NONE	0.1	0.1
C717, 718	NONE	NONE	NONE	0.047	NONE	NONE
C793, 794	0.1	0.1	0.1	NONE	0.1	0.1
C795, 796	0.1	0.1	0.1	NONE	0.1	0.1
C797, 798	NONE	NONE	NONE	0.047	NONE	NONE
R004 ⚠	4.7 (1/2W)	4.7 (1/2W)	4.7 (1/2W)	4.7 (1/2W)	4.7 (1/2W)	4.7 (1/2W)
R007 ⚠	4.7 (1/2W)	4.7 (1/2W)	4.7 (1/2W)	NONE	NONE	4.7 (1/2W)
R040	270	330	330	470	470	330
R041	330	330	330	470	470	330
R043	270	330	330	470	470	330
R044	330	330	330	470	470	330
R640 ⚠	SHORT	SHORT	SHORT	75 (1W)	15 (1W)	SHORT
R641 ⚠	NONE	NONE	NONE	15 (1W)	15 (1W)	NONE
R642 ⚠	SHORT	SHORT	SHORT	33 (1/2W)	33 (1/2W)	SHORT
R670 ⚠	SHORT	SHORT	SHORT	33 (1/2W)	33 (1/2W)	SHORT
R674 ⚠	SHORT	SHORT	SHORT	15 (1/2W)	15 (1/2W)	SHORT
R675 ⚠	NONE	NONE	NONE	33 (1/2W)	33 (1/2W)	NONE
R676 ⚠	SHORT	SHORT	SHORT	33 (1W)	33 (1W)	SHORT
R680 ⚠	NONE	NONE	NONE	33 (1W)	33 (1W)	NONE

P2-48-a P2-48-b

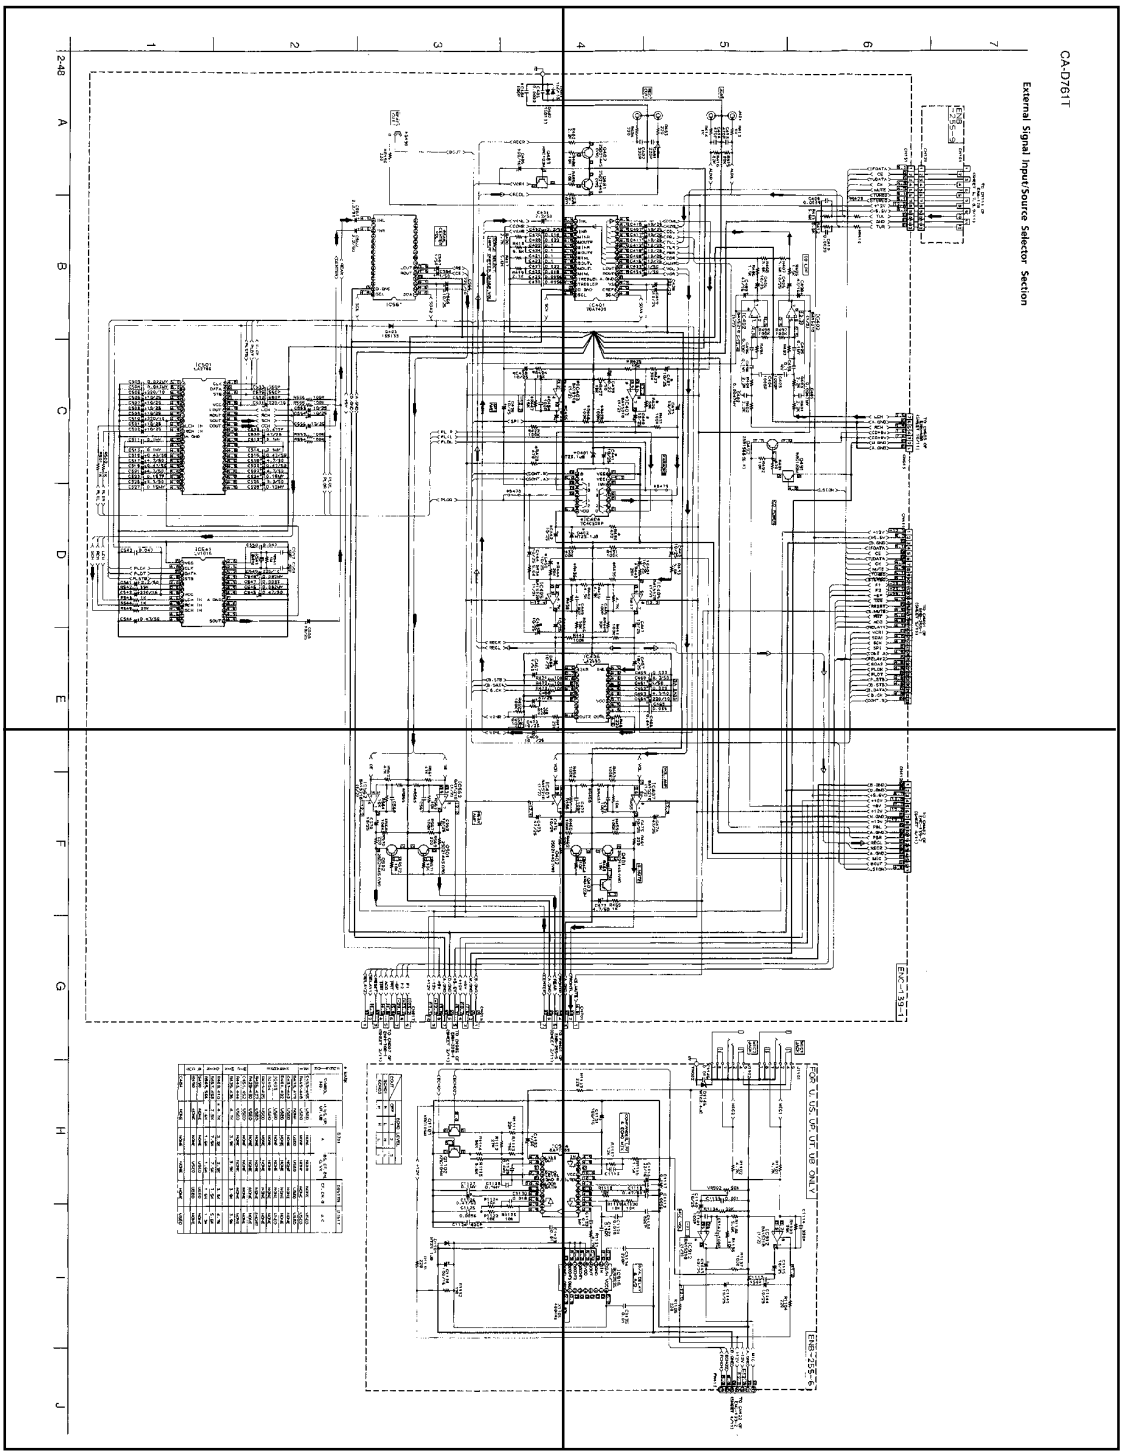

P2-48-c P2-48-d

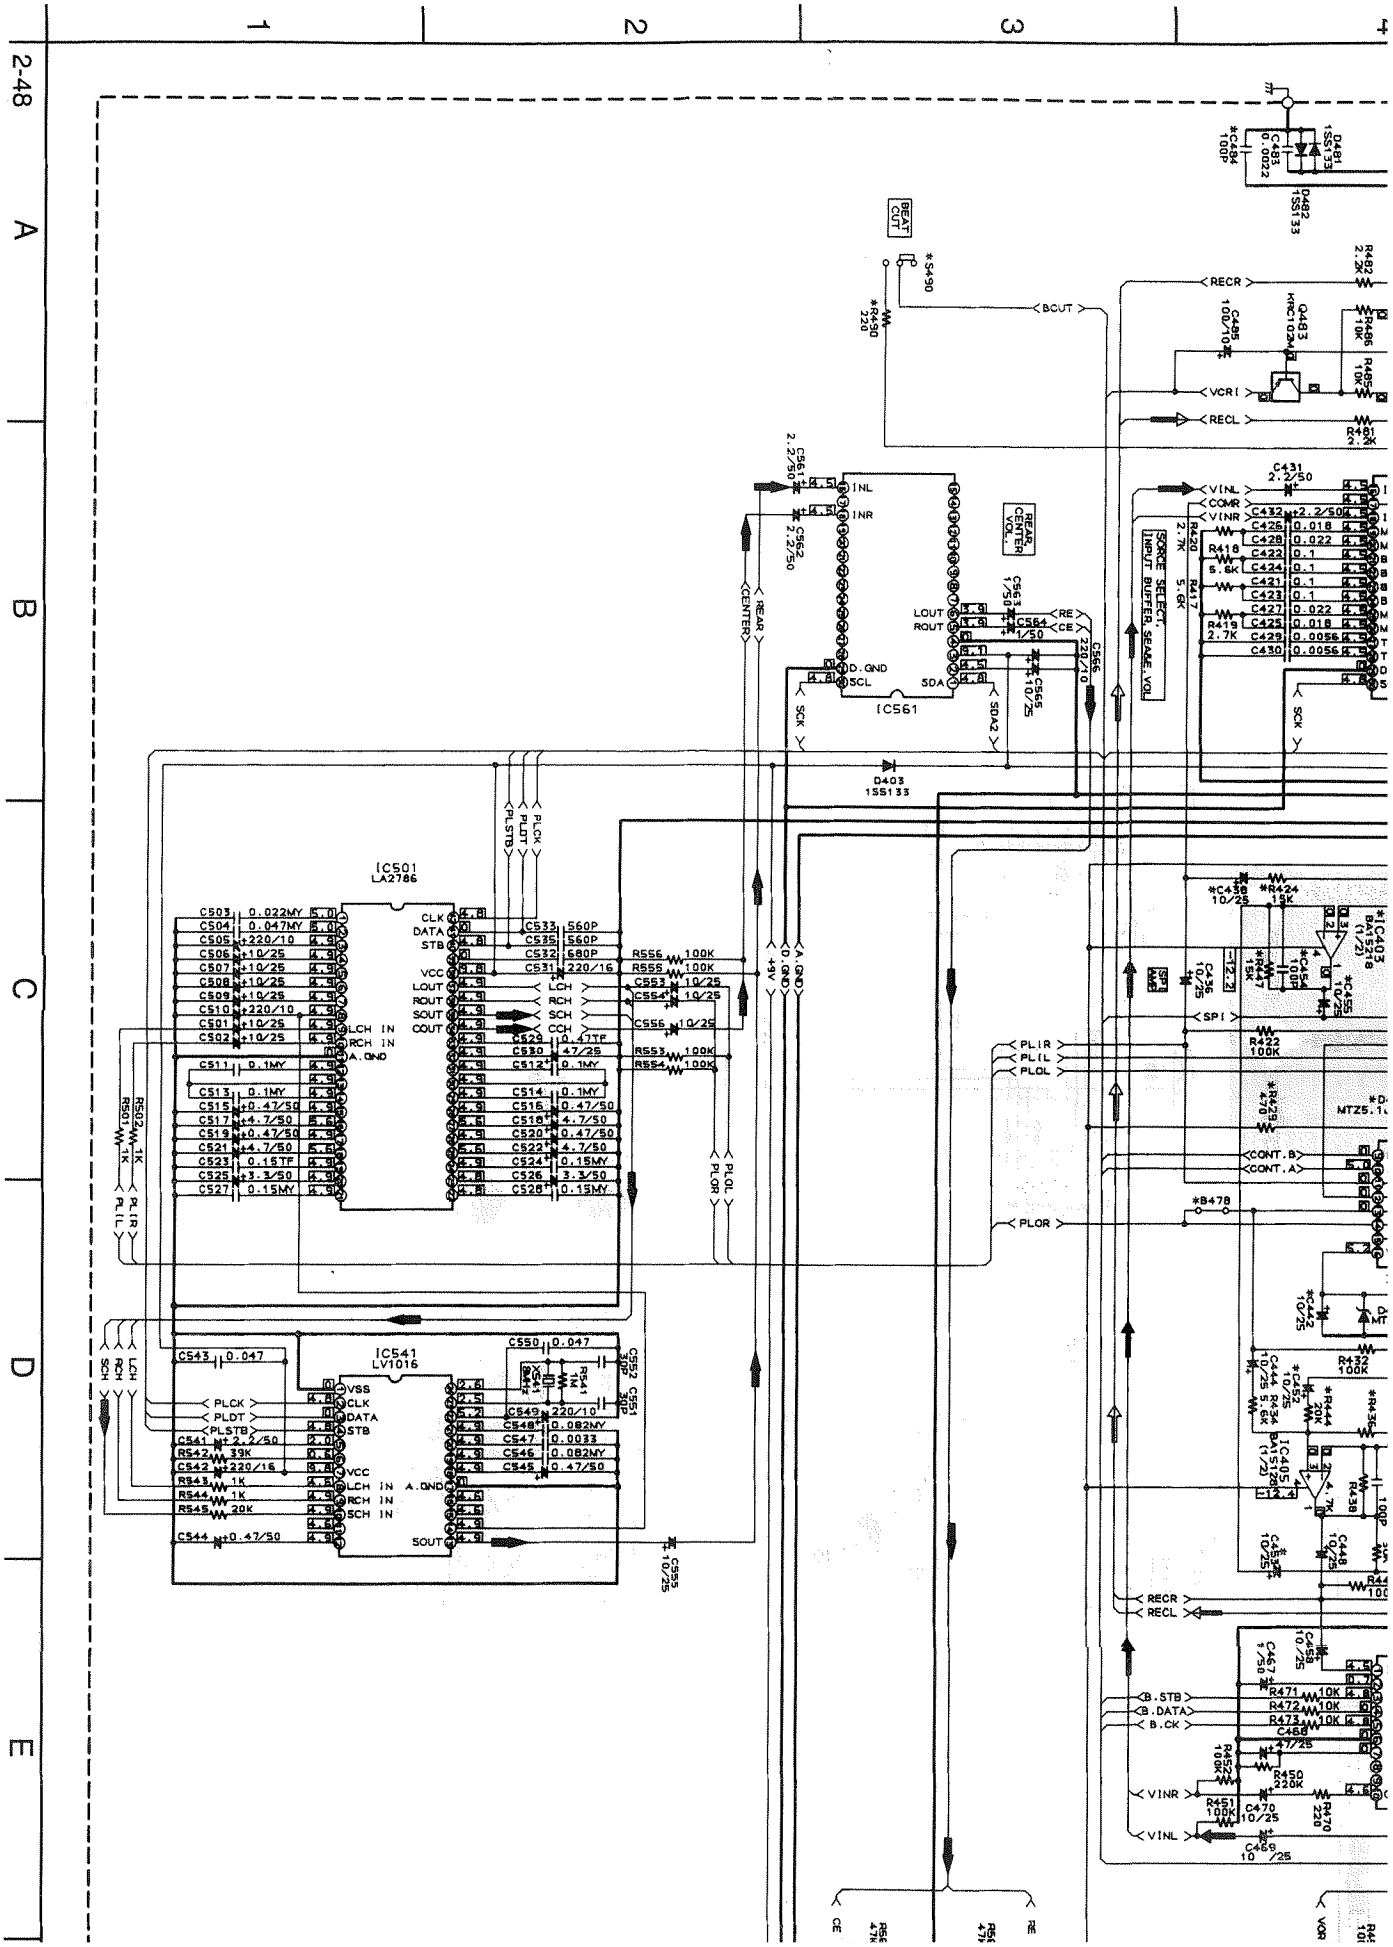
1
2
3
4
A
B
C
D
E
2-48
IC501
LA2786
IC541
LV1016
IC561
IC403
BA15218
(1/2)
IC405
BA15218
(1/2)
D403
1SS133
D481
1SS133
D482
1SS133
BEAT CUT
*S490
*R490
220
BOUT
RECR
RECL
VCR(
Q483
KRC102M
C485
100/10
R482
2.2K
R486
10K
R485
10K
R484
2.2K
C431
2.2/50
VINL
COMR
VINR
C432
2.2/50K
R420
2.7K
R417
5.6K
R418
5.6K
R419
2.7K
C426
0.018
C428
0.022
C422
0.1
C424
0.1
C421
0.1
C423
0.1
C427
0.022
C425
0.018
C429
0.0056
C430
0.0056
SOURCE SELECT
INPUT BUFFER SEAMLESS VOL
REAR CENTER VOL
C561
2.2/50
C562
2.2/50
INL
INR
CENTER
REAR
LOUT
ROUT
C563
1/50
C564
1/50
RE
CE
C566
220/10
C565
10/25
D.GND
SCL
SDA
SCK
SDA2
+9V
A.GND
D.GND
PLCK
PLDT
PLSTB
C503 0.022MY
C504 0.047MY
C505 220/10
C506 10/25
C507 10/25
C508 10/25
C509 10/25
C510 220/10
C501 10/25
C502 10/25
C511 0.1MY
C513 0.1MY
C515 0.47/50
C517 4.7/50
C519 0.47/50
C521 4.7/50
C523 0.15TF
C525 3.3/50
C527 0.15MY
LCH IN
RCH IN
A.GND
CLK
DATA
STB
VCC
LOUT
ROUT
SOUT
COUT
C533 560P
C535 560P
C532 680P
C531 220/16
LCH
RCH
SCH
CCH
C529 0.47TF
C530 47/25
C512 0.1MY
C514 0.1MY
C516 0.47/50
C518 4.7/50
C520 0.47/50
C522 4.7/50
C524 0.15MY
C526 3.3/50
C528 0.15MY
R556 100K
R555 100K
C553 10/25
C554 10/25
C556 10/25
R553 100K
R554 100K
PLOR
PLOL
R502 1K
R501 1K
PLIR
PLIL
C543 0.047
C550 0.047
C552 30P
C551 30P
X541
16.9344
R541 1M
C549 220/10
C548 0.082MY
C547 0.0033
C546 0.082MY
C545 0.47/50
VSS
CLK
DATA
STB
VCC
LCH IN
RCH IN
SCH IN
A.GND
SOUT
C541 2.2/50
R542 39K
C542 220/16
R543 1K
R544 1K
R545 20K
C544 0.47/50
C555 10/25
SCH
RCH
LCH
C439 10/25
*R424 15K
R423 15K
C454 10/25
C456 10/25
C455 10/25
SPI
R422 100K
*R429 470
MTZ5.1
CONT.B
CONT.A
*B478
*C437 10/25
C438 10/25
R432 100K
C444 10/25
R434 5.6K
*R444 20K
*R435 10K
R438 4.7K
100P
C448 10/25
C445 10/25
C458 10/25
C467 1/50
B.STB
B.DATA
B.CK
R471 10K
R472 10K
R473 10K
C468 47/25
R452 10K
R450 220K
R451 10K
R470 220
C470 10/25
C469 10/25
VINR
VINL
VOR
CE
RE
R56 47K

External Signal Input/Source Selector Section

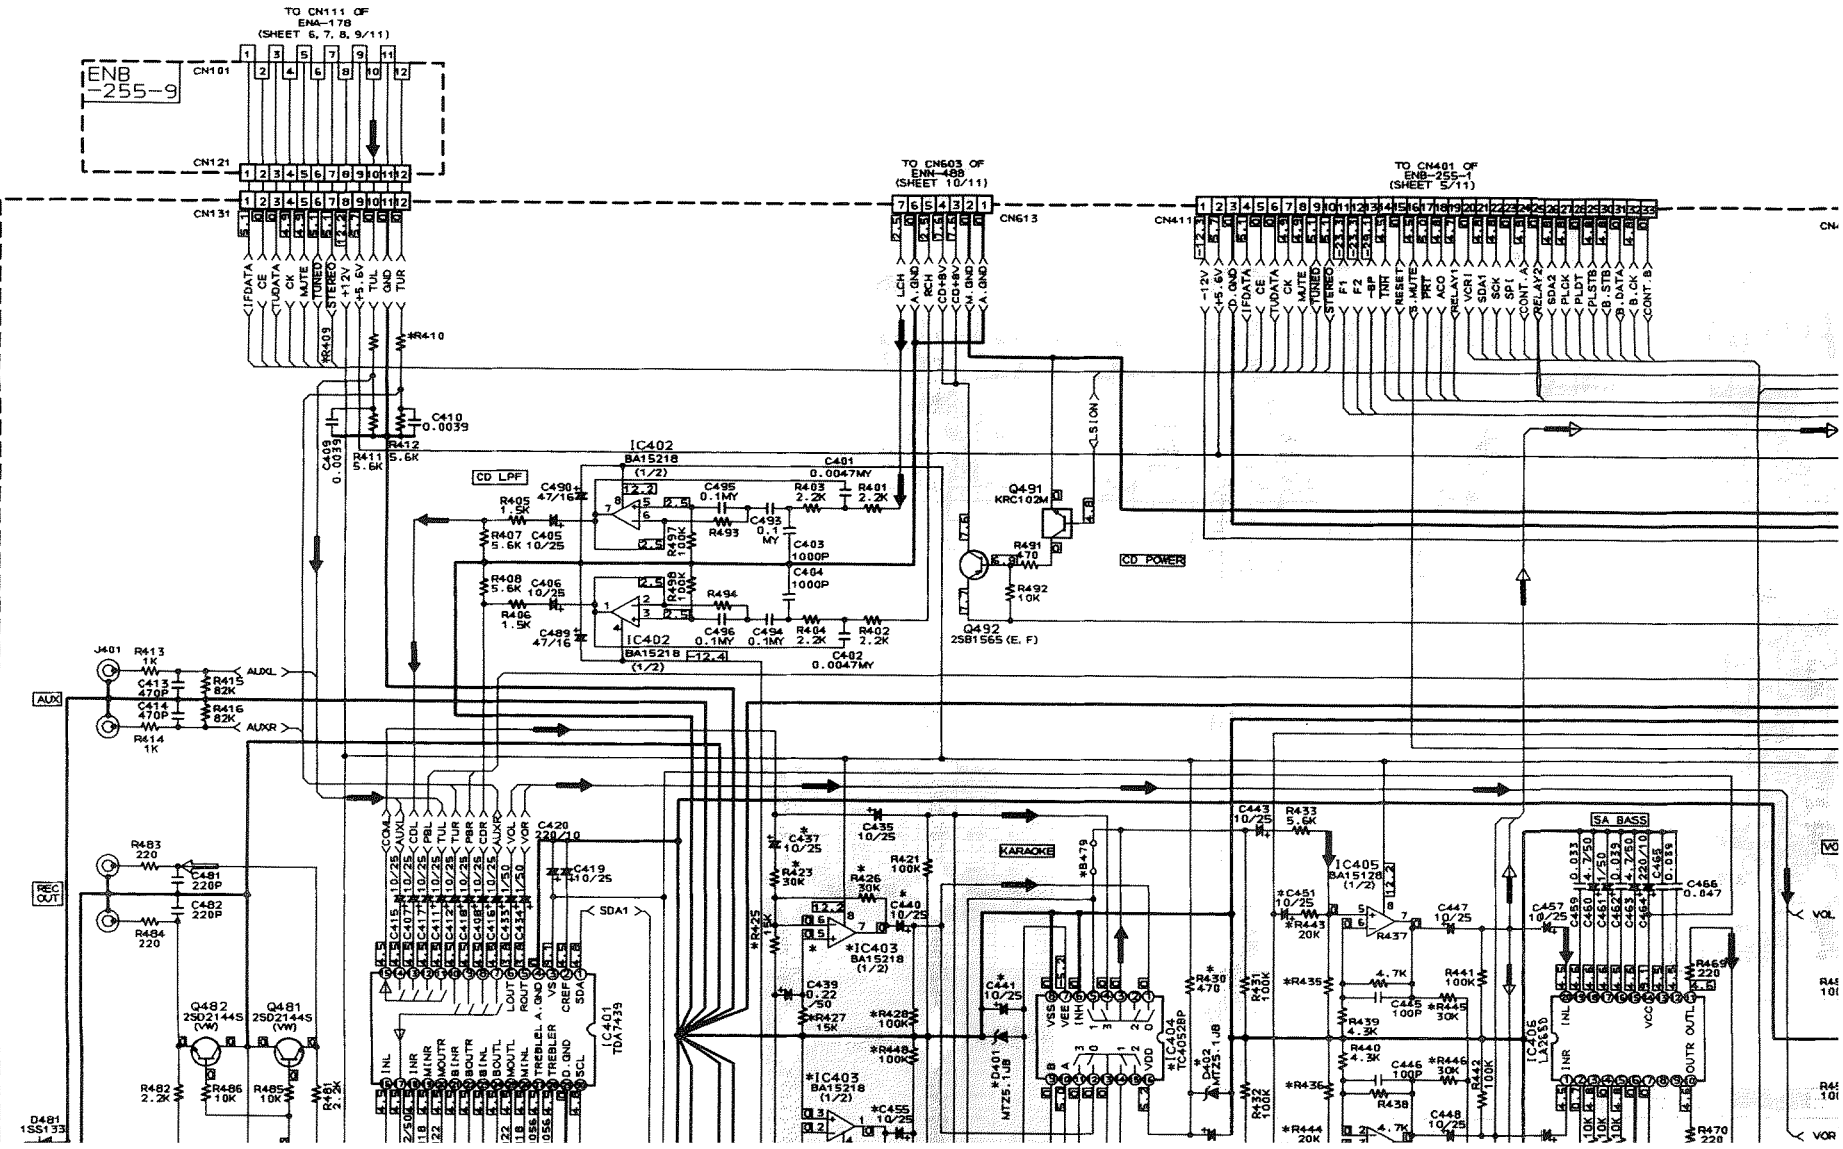

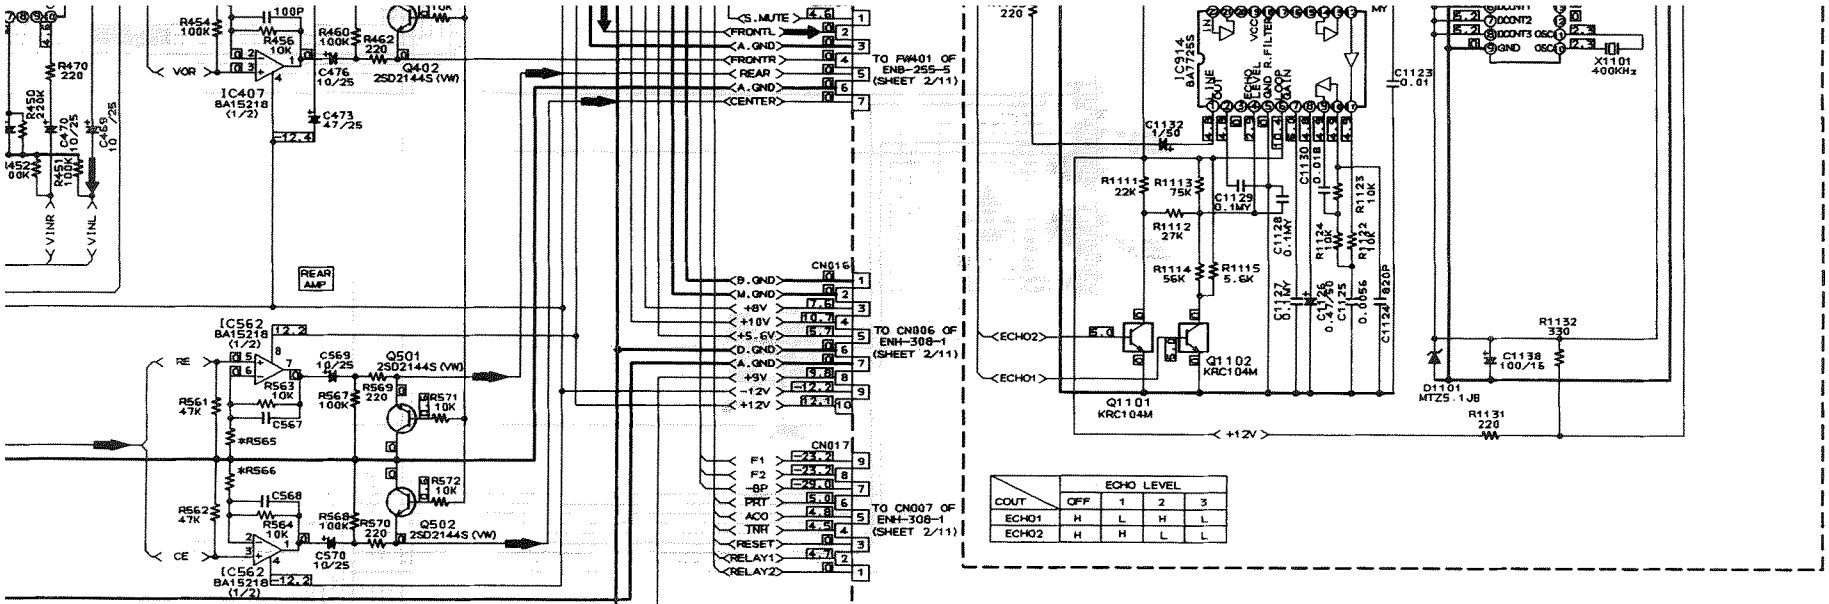

COUT	ECHO LEVEL			
	OFF	1	2	3
ECHO1	H	L	H	L
ECHO2	H	H	L	L

* MARK

FUNCTION	SYMBOL NO.	D701			D851TR	D761T
		U, US, UP, UT, UB	A	BS, EF, EN, G, VX	EF, EN, G	J, C
SBI	C453~455	USED	NONE	NONE	NONE	USED
	R445~448	USED	NONE	NONE	NONE	USED
KARAOKE	B478, 479	NONE	USED	USED	USED	USED
	C437~442	USED	NONE	NONE	NONE	NONE
	D401, 402	USED	NONE	NONE	NONE	NONE
	IC403	USED	NONE	NONE	NONE	USED
	IC404	USED	NONE	NONE	NONE	NONE
	R423~425	USED	NONE	NONE	NONE	NONE
	R426, 427	USED	NONE	NONE	NONE	SHORT
	R428~430	USED	NONE	NONE	NONE	NONE
MIC MIX	C451, 452	USED	NONE	NONE	NONE	NONE
	R443, 444	USED	NONE	NONE	NONE	NONE
	R435, 436	4.7K	3.9K	3.9K	3.9K	3.9K
GAIN	R409, 410	• 4.7K	3.3K	3.3K	3.3K	4.7K
	R457, 458	7.5K	7.5K	7.5K	7.5K	5.6K
	R565, 566	1.6K	1.6K	1.6K	1.6K	1.3K
B CUT	S490	NONE	NONE	USED	USED	NONE
	R490	NONE	NONE	USED	USED	NONE
	C484	NONE	NONE	NONE	NONE	USED

E | F | G | H | I | J

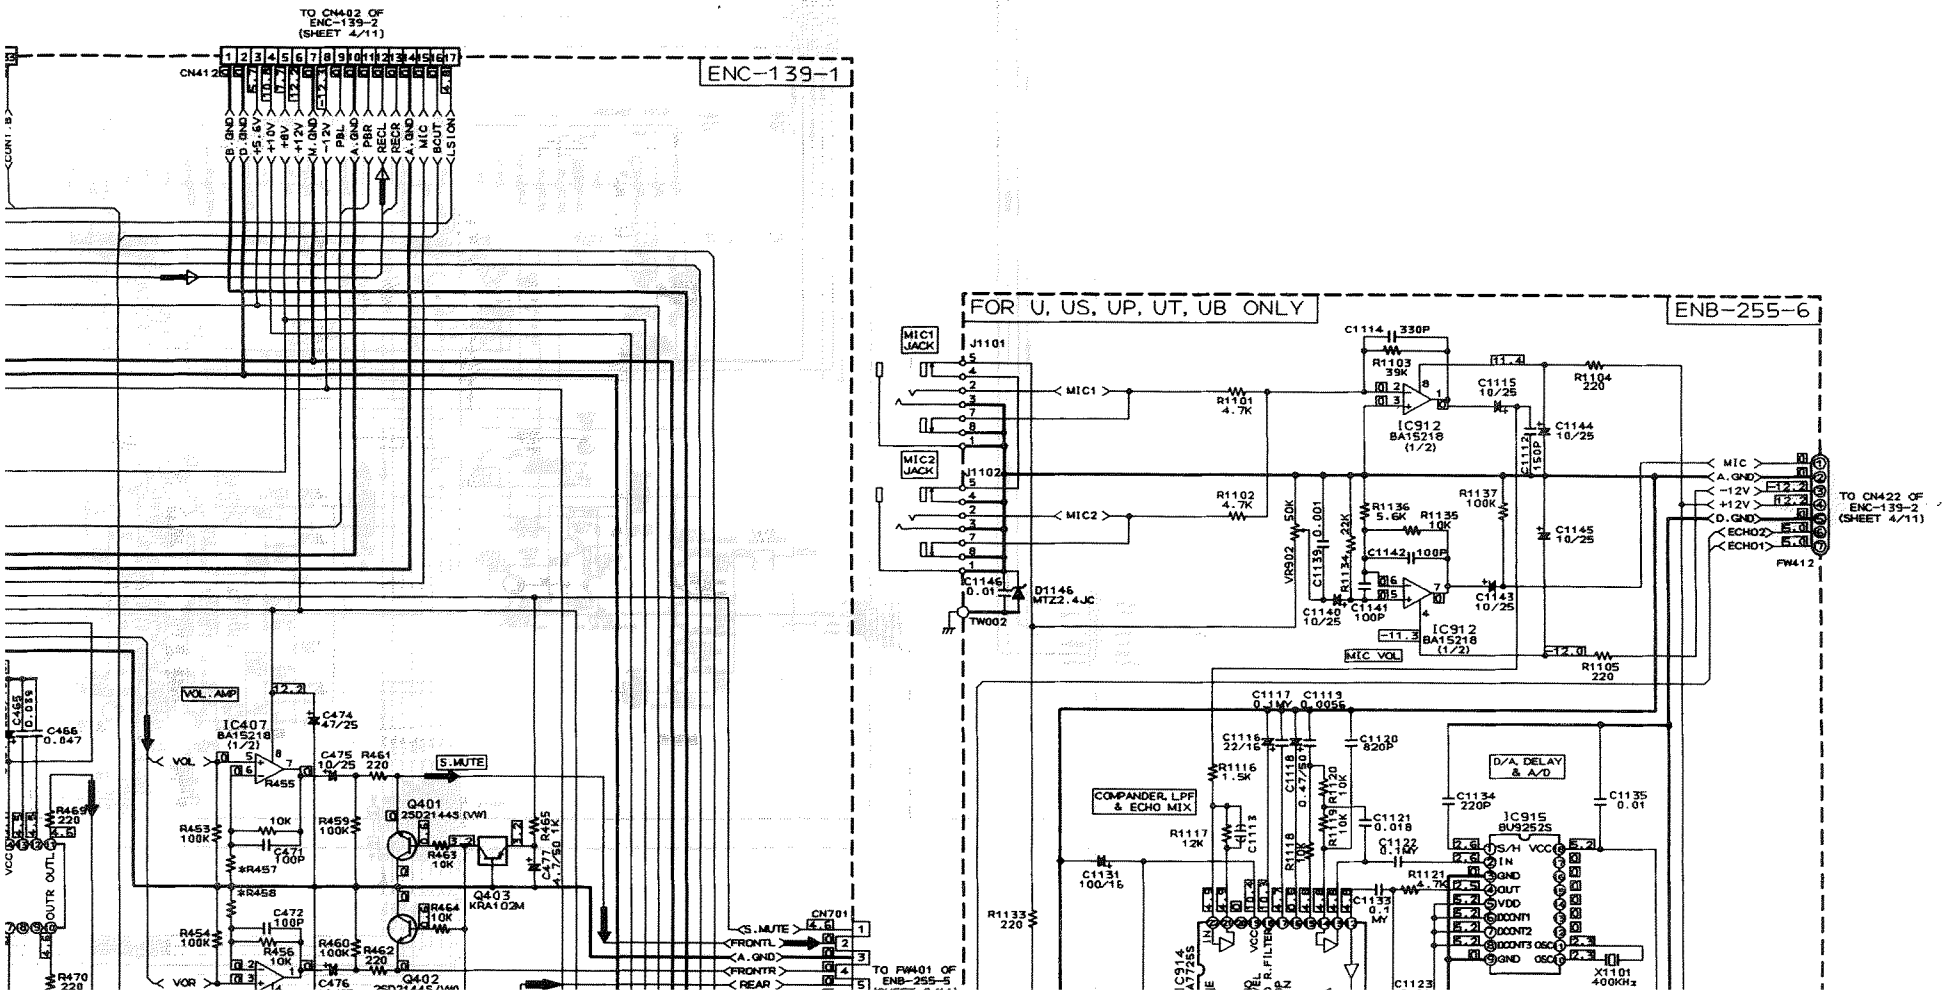
ENC-139-1
TO CN402 OF ENC-139-2 (SHEET 4/11)
CN412
FOR U, US, UP, UT, UB ONLY
ENB-255-6
MIC1 JACK
MIC2 JACK
J1101
J1102
MIC1
MIC2
IC912 BA15218 (1/2)
MIC VOL
VOL. AMP
IC407 BA15218 (1/2)
VOL
S.MUTE
Q401 2SD2144S (VW)
Q402
Q403 KRA102M
COMPANDER, LPF & ECHO MIX
D/A, DELAY & A/D
IC915 BU9252S
X1101 400KHz
TW002
D1146 MTZ2.4JC
TO FW401 OF ENB-255-5
TO CN422 OF ENC-139-2 (SHEET 4/11)
FW412
FRONTL
FRONTR
REAR
A.GND
OUTR OUT
OUTL
VOR

P2-49-a P2-49-b

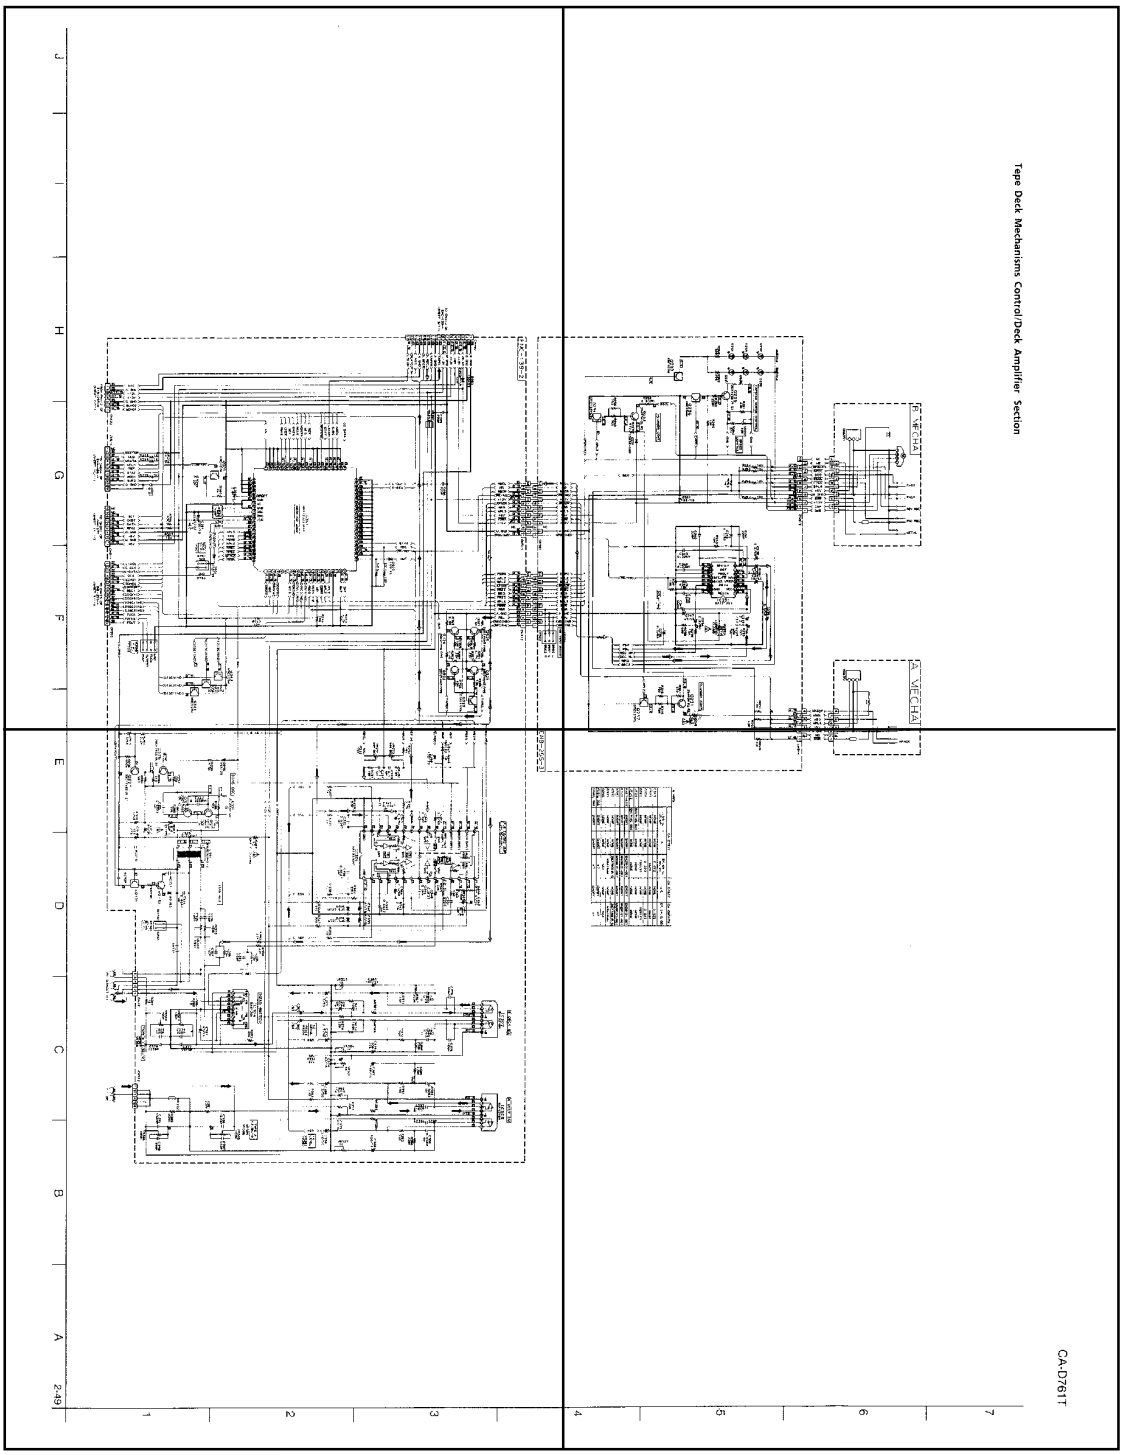

P2-49-c P2-49-d

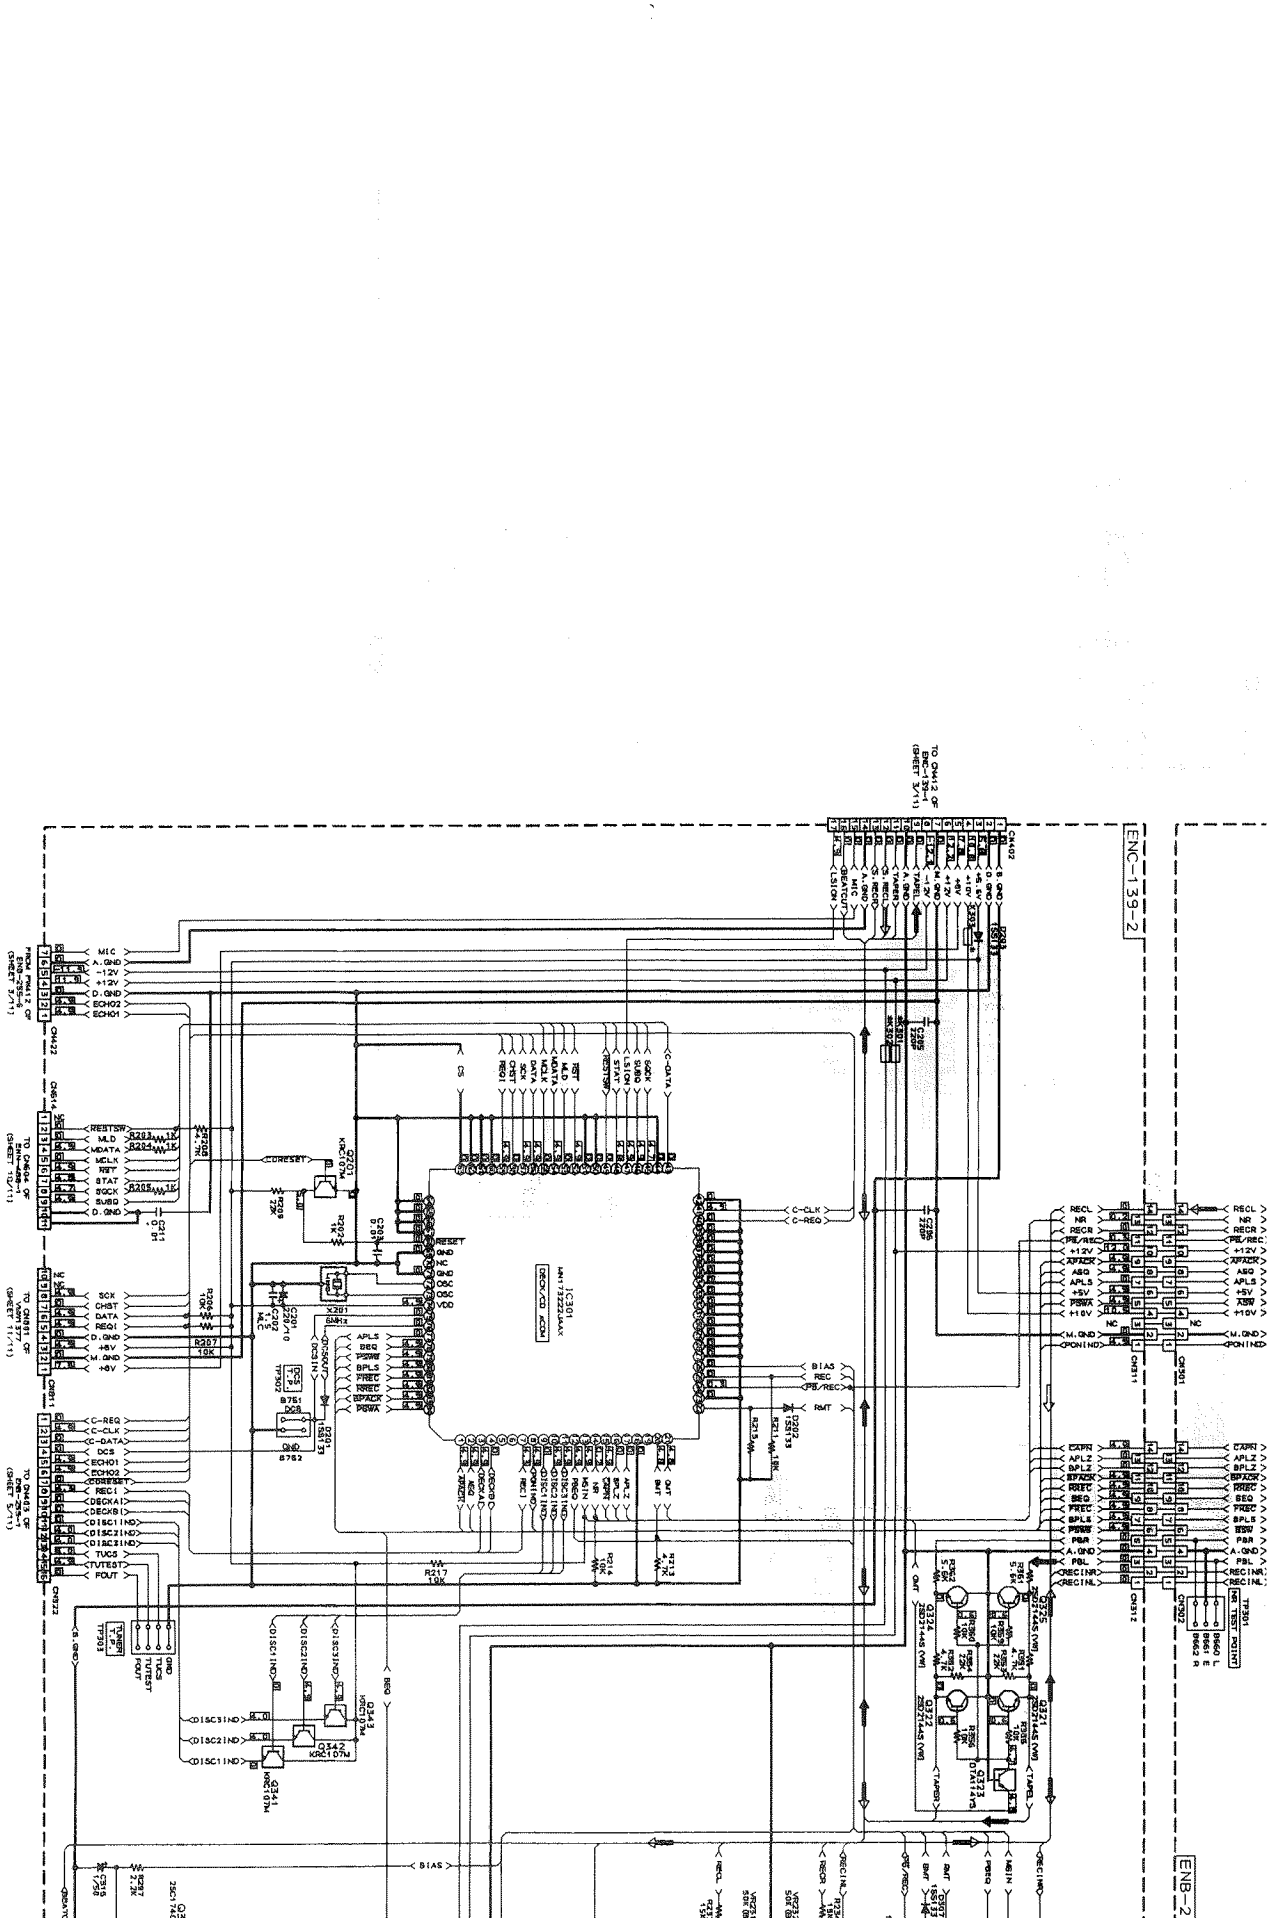
ENC-139-2
ENB-2

Tepe Deck Mechanisms Control/Deck Amplifier Section

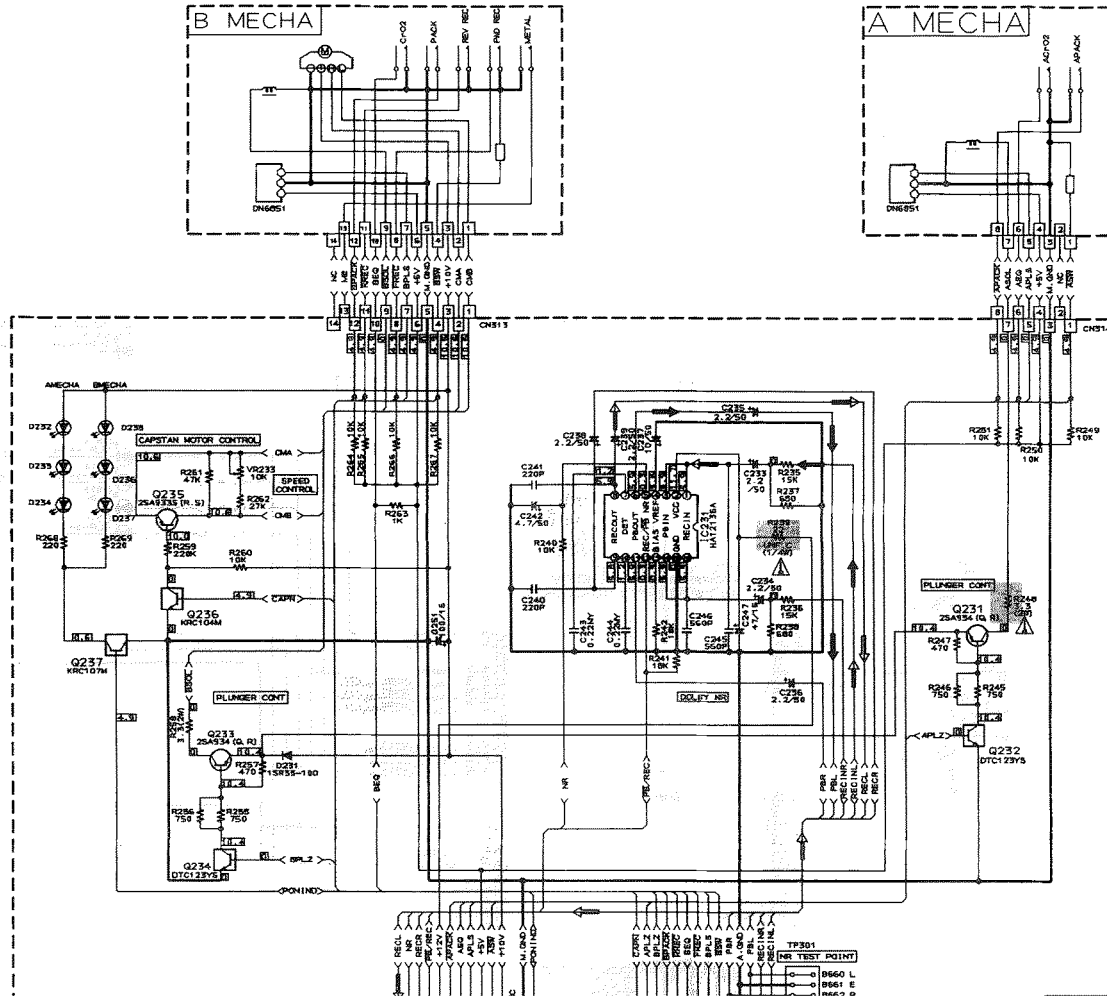

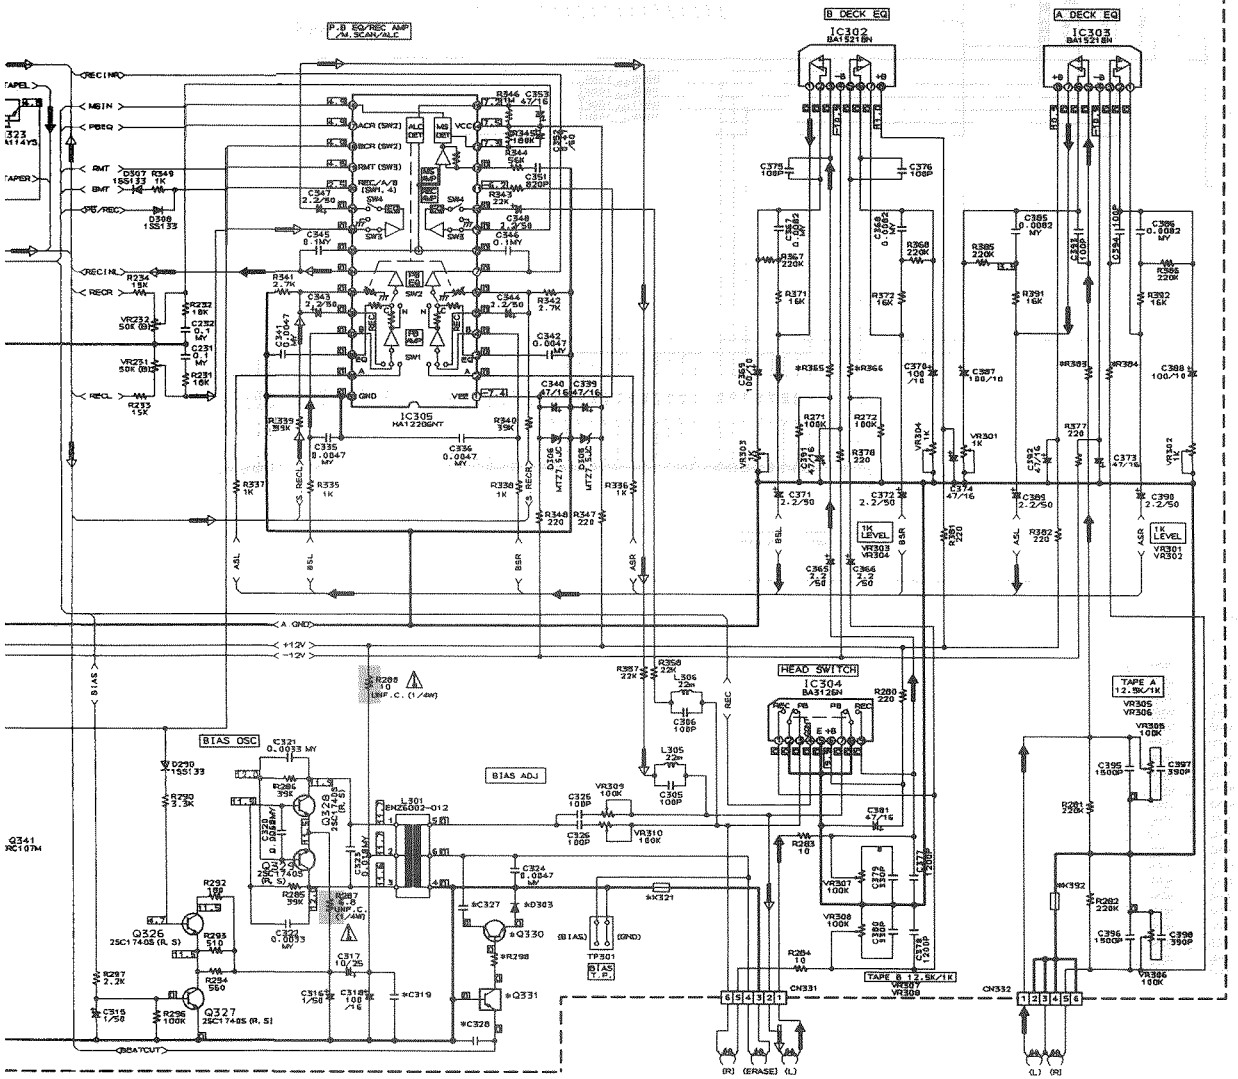
P.B EQ/REC AMP /M, SCAN/ALC
B DECK EQ
IC302
BA15218N
A DECK EQ
IC303
BA15218N
IC305
HA1220GNT
IC304
BA3126N
HEAD SWITCH
BIAS OSC
BIAS ADJ
TAPE A 12.5K/1K
TAPE B 12.5K/1K
1K LEVEL
Q326
2SC1740S (R, S)
Q327
2SC1740S (R, S)
Q328
2SC1740S (R, S)
Q329
2SC1740S (R, S)
L301
ENA2603-012
L305
22μ
L306
22μ
CN331
CN332
TP301
BIAS
(BIAS)
(GND)
(R) (ERASE) (L)
(L) (R)
A GND
+12V
BIAS
REC
ASL
BSL
BSR
ASR
RECT
RECR
RECL
MSIN
PBEQ
RMT
EMT
SW1
SW2
SW3
SW4
SW5
SW6
SW7
SW8
SW9
SW10
SW11
SW12
SW13
SW14
SW15
SW16
SW17
SW18
SW19
SW20
SW21
SW22
SW23
SW24
SW25
SW26
SW27
SW28
SW29
SW30
SW31
SW32
SW33
SW34
SW35
SW36
SW37
SW38
SW39
SW40
SW41
SW42
SW43
SW44
SW45
SW46
SW47
SW48
SW49
SW50
SW51
SW52
SW53
SW54
SW55
SW56
SW57
SW58
SW59
SW60
SW61
SW62
SW63
SW64
SW65
SW66
SW67
SW68
SW69
SW70
SW71
SW72
SW73
SW74
SW75
SW76
SW77
SW78
SW79
SW80
SW81
SW82
SW83
SW84
SW85
SW86
SW87
SW88
SW89
SW90
SW91
SW92
SW93
SW94
SW95
SW96
SW97
SW98
SW99
SW100
SW101
SW102
SW103
SW104
SW105
SW106
SW107
SW108
SW109
SW110
SW111
SW112
SW113
SW114
SW115
SW116
SW117
SW118
SW119
SW120
SW121
SW122
SW123
SW124
SW125
SW126
SW127
SW128
SW129
SW130
SW131
SW132
SW133
SW134
SW135
SW136
SW137
SW138
SW139
SW140
SW141
SW142
SW143
SW144
SW145
SW146
SW147
SW148
SW149
SW150
SW151
SW152
SW153
SW154
SW155
SW156
SW157
SW158
SW159
SW160
SW161
SW162
SW163
SW164
SW165
SW166
SW167
SW168
SW169
SW170
SW171
SW172
SW173
SW174
SW175
SW176
SW177
SW178
SW179
SW180
SW181
SW182
SW183
SW184
SW185
SW186
SW187
SW188
SW189
SW190
SW191
SW192
SW193
SW194
SW195
SW196
SW197
SW198
SW199
SW200
SW201
SW202
SW203
SW204
SW205
SW206
SW207
SW208
SW209
SW210
SW211
SW212
SW213
SW214
SW215
SW216
SW217
SW218
SW219
SW220
SW221
SW222
SW223
SW224
SW225
SW226
SW227
SW228
SW229
SW230
SW231
SW232
SW233
SW234
SW235
SW236
SW237
SW238
SW239
SW240
SW241
SW242
SW243
SW244
SW245
SW246
SW247
SW248
SW249
SW250
SW251
SW252
SW253
SW254
SW255
SW256
SW257
SW258
SW259
SW260
SW261
SW262
SW263
SW264
SW265
SW266
SW267
SW268
SW269
SW270
SW271
SW272
SW273
SW274
SW275
SW276
SW277
SW278
SW279
SW280
SW281
SW282
SW283
SW284
SW285
SW286
SW287
SW288
SW289
SW290
SW291
SW292
SW293
SW294
SW295
SW296
SW297
SW298
SW299
SW300
SW301
SW302
SW303
SW304
SW305
SW306
SW307
SW308
SW309
SW310
SW311
SW312
SW313
SW314
SW315
SW316
SW317
SW318
SW319
SW320
SW321
SW322
SW323
SW324
SW325
SW326
SW327
SW328
SW329
SW330
SW331
SW332
SW333
SW334
SW335
SW336
SW337
SW338
SW339
SW340
SW341
SW342
SW343
SW344
SW345
SW346
SW347
SW348
SW349
SW350
SW351
SW352
SW353
SW354
SW355
SW356
SW357
SW358
SW359
SW360
SW361
SW362
SW363
SW364
SW365
SW366
SW367
SW368
SW369
SW370
SW371
SW372
SW373
SW374
SW375
SW376
SW377
SW378
SW379
SW380
SW381
SW382
SW383
SW384
SW385
SW386
SW387
SW388
SW389
SW390
SW391
SW392
SW393
SW394
SW395
SW396
SW397
SW398
SW399
SW400
SW401
SW402
SW403
SW404
SW405
SW406
SW407
SW408
SW409
SW410
SW411
SW412
SW413
SW414
SW415
SW416
SW417
SW418
SW419
SW420
SW421
SW422
SW423
SW424
SW425
SW426
SW427
SW428
SW429
SW430
SW431
SW432
SW433
SW434
SW435
SW436
SW437
SW438
SW439
SW440
SW441
SW442
SW443
SW444
SW445
SW446
SW447
SW448
SW449
SW450
SW451
SW452
SW453
SW454
SW455
SW456
SW457
SW458
SW459
SW460
SW461
SW462
SW463
SW464
SW465
SW466
SW467
SW468
SW469
SW470
SW471
SW472
SW473
SW474
SW475
SW476
SW477
SW478
SW479
SW480
SW481
SW482
SW483
SW484
SW485
SW486
SW487
SW488
SW489
SW490
SW491
SW492
SW493
SW494
SW495
SW496
SW497
SW498
SW499
SW500
SW501
SW502
SW503
SW504
SW505
SW506
SW507
SW508
SW509
SW510
SW511
SW512
SW513
SW514
SW515
SW516
SW517
SW518
SW519
SW520
SW521
SW522
SW523
SW524
SW525
SW526
SW527
SW528
SW529
SW530
SW531
SW532
SW533
SW534
SW535
SW536
SW537
SW538
SW539
SW540
SW541
SW542
SW543
SW544
SW545
SW546
SW547
SW548
SW549
SW550
SW551
SW552
SW553
SW554
SW555
SW556
SW557
SW558
SW559
SW560
SW561
SW562
SW563
SW564
SW565
SW566
SW567
SW568
SW569
SW570
SW571
SW572
SW573
SW574
SW575
SW576
SW577
SW578
SW579
SW580
SW581
SW582
SW583
SW584
SW585
SW586
SW587
SW588
SW589
SW590
SW591
SW592
SW593
SW594
SW595
SW596
SW597
SW598
SW599
SW600
SW601
SW602
SW603
SW604
SW605
SW606
SW607
SW608
SW609
SW610
SW611
SW612
SW613
SW614
SW615
SW616
SW617
SW618
SW619
SW620
SW621
SW622
SW623
SW624
SW625
SW626
SW627
SW628
SW629
SW630
SW631
SW632
SW633
SW634
SW635
SW636
SW637
SW638
SW639
SW640
SW641
SW642
SW643
SW644
SW645
SW646
SW647
SW648
SW649
SW650
SW651
SW652
SW653
SW654
SW655
SW656
SW657
SW658
SW659
SW660
SW661
SW662
SW663
SW664
SW665
SW666
SW667
SW668
SW669
SW670
SW671
SW672
SW673
SW674
SW675
SW676
SW677
SW678
SW679
SW680
SW681
SW682
SW683
SW684
SW685
SW686
SW687
SW688
SW689
SW690
SW691
SW692
SW693
SW694
SW695
SW696
SW697
SW698
SW699
SW700
SW701
SW702
SW703
SW704
SW705
SW706
SW707
SW708
SW709
SW710
SW711
SW712
SW713
SW714
SW715
SW716
SW717
SW718
SW719
SW720
SW721
SW722
SW723
SW724
SW725
SW726
SW727
SW728
SW729
SW730
SW731
SW732
SW733
SW734
SW735
SW736
SW737
SW738
SW739
SW740
SW741
SW742
SW743
SW744
SW745
SW746
SW747
SW748
SW749
SW750
SW751
SW752
SW753
SW754
SW755
SW756
SW757
SW758
SW759
SW760
SW761
SW762
SW763
SW764
SW765
SW766
SW767
SW768
SW769
SW770
SW771
SW772
SW773
SW774
SW775
SW776
SW777
SW778
SW779
SW780
SW781
SW782
SW783
SW784
SW785
SW786
SW787
SW788
SW789
SW790
SW791
SW792
SW793
SW794
SW795
SW796
SW797
SW798
SW799
SW800
SW801
SW802
SW803
SW804
SW805
SW806
SW807
SW808
SW809
SW810
SW811
SW812
SW813
SW814
SW815
SW816
SW817
SW818
SW819
SW820
SW821
SW822
SW823
SW824
SW825
SW826
SW827
SW828
SW829
SW830
SW831
SW832
SW833
SW834
SW835
SW836
SW837
SW838
SW839
SW840
SW841
SW842
SW843
SW844
SW845
SW846
SW847
SW848
SW849
SW850
SW851
SW852
SW853
SW854
SW855
SW856
SW857
SW858
SW859
SW860
SW861
SW862
SW863
SW864
SW865
SW866
SW867
SW868
SW869
SW870
SW871
SW872
SW873
SW874
SW875
SW876
SW877
SW878
SW879
SW880
SW881
SW882
SW883
SW884
SW885
SW886
SW887
SW888
SW889
SW890
SW891
SW892
SW893
SW894
SW895
SW896
SW897
SW898
SW899
SW900
SW901
SW902
SW903
SW904
SW905
SW906
SW907
SW908
SW909
SW910
SW911
SW912
SW913
SW914
SW915
SW916
SW917
SW918
SW919
SW920
SW921
SW922
SW923
SW924
SW925
SW926
SW927
SW928
SW929
SW930
SW931
SW932
SW933
SW934
SW935
SW936
SW937
SW938
SW939
SW940
SW941
SW942
SW943
SW944
SW945
SW946
SW947
SW948
SW949
SW950
SW951
SW952
SW953
SW954
SW955
SW956
SW957
SW958
SW959
SW960
SW961
SW962
SW963
SW964
SW965
SW966
SW967
SW968
SW969
SW970
SW971
SW972
SW973
SW974
SW975
SW976
SW977
SW978
SW979
SW980
SW981
SW982
SW983
SW984
SW985
SW986
SW987
SW988
SW989
SW990
SW991
SW992
SW993
SW994
SW995
SW996
SW997
SW998
SW999
SW1000

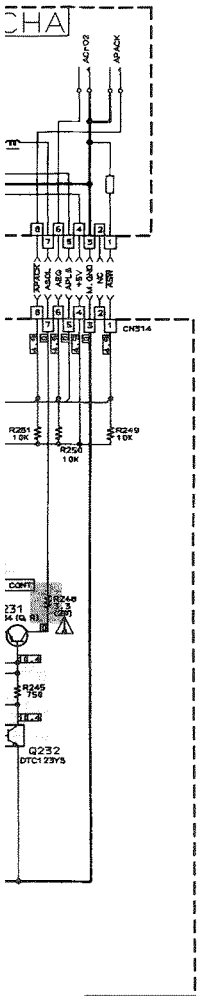

※ MARK	CA-D781T			CA-D761T	CA-D851TR
	U, UB, U, UT, UP	A	EF, EN, G, BS, VX	J, C	EF, EN, G, BS
C319	NONE	NONE	0.022	NONE	0.022
C327	NONE	NONE	560P	NONE	560P
C328	NONE	NONE	0.022	NONE	0.022
D303	NONE	NONE	1SS133	NONE	1SS133
JT201	BAT7145-083	NONE	NONE	NONE	NONE
JT202	BAT7145-084	NONE	NONE	NONE	NONE
K381~383	SHORT	SHORT	ENZ8101-007	SHORT	ENZ8101-007
K321	SHORT	SHORT	ENZ8101-007	SHORT	ENZ8101-007
K392	SHORT	SHORT	ENZ8101-007	SHORT	ENZ8101-007
Q330	NONE	NONE	2SC1623 (L, S)	NONE	2SC1623 (L, S)
Q331	NONE	NONE	KRA104M	NONE	KRA104M
R298	NONE	NONE	560	NONE	560
R365, 366	SHORT	SHORT	47	SHORT	47
R383, 384	SHORT	SHORT	47	SHORT	47

7

6

5

4

P2-50-a P2-50-b

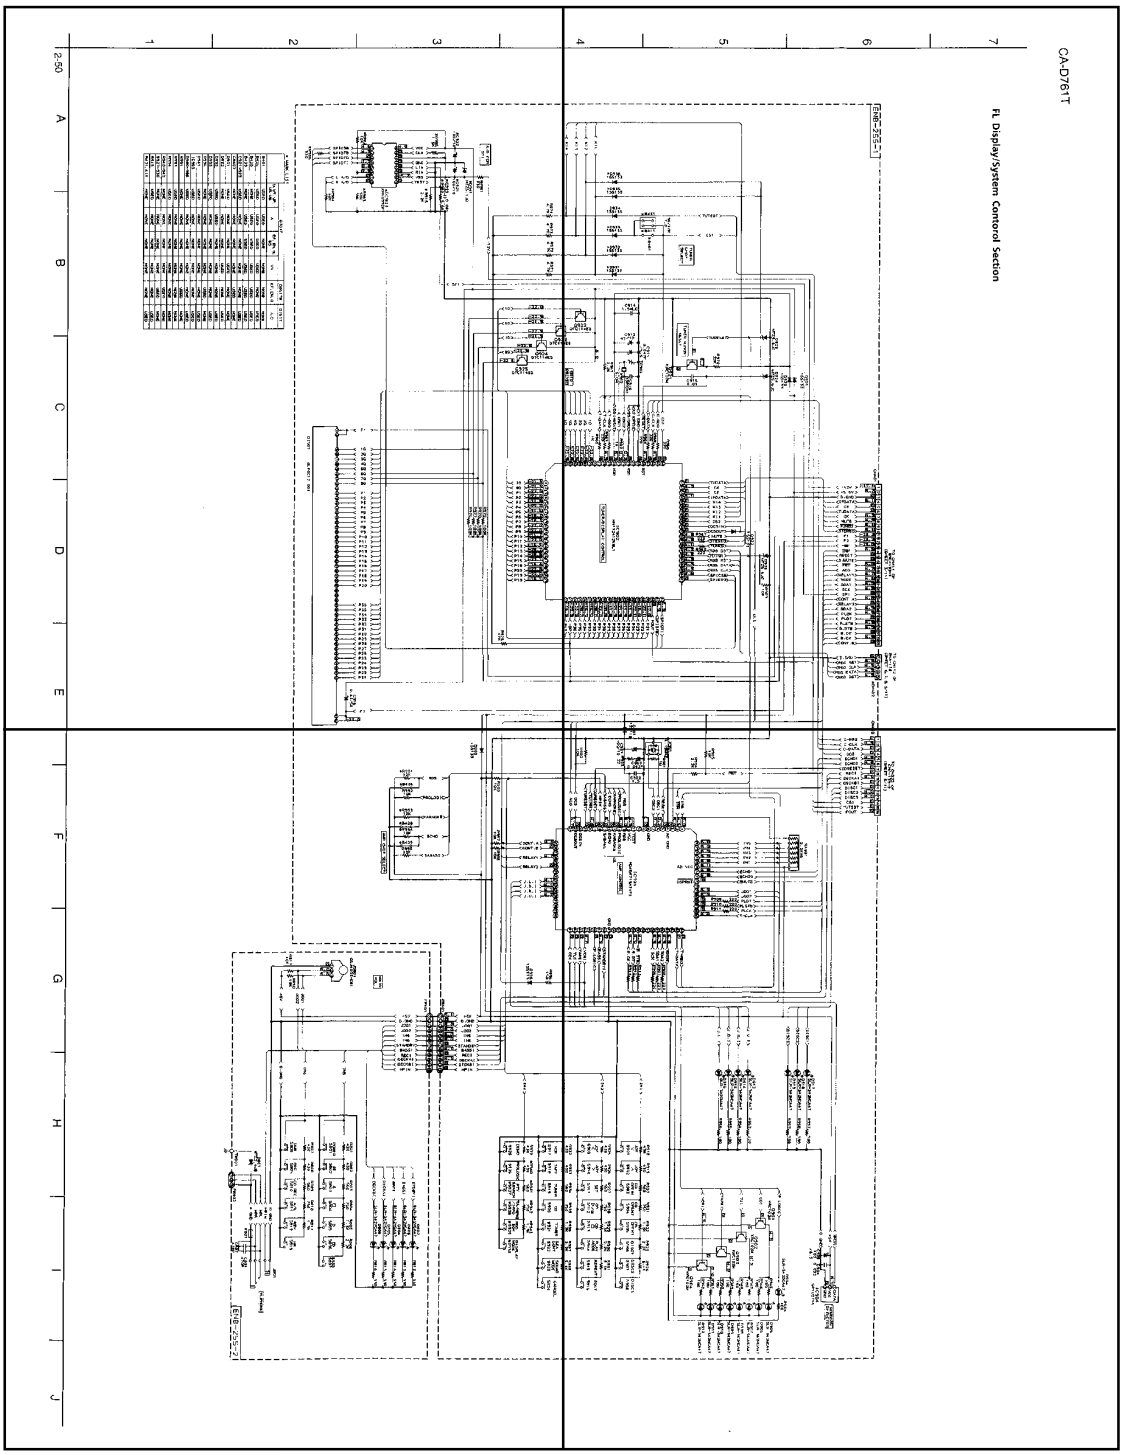

P2-50-c P2-50-d

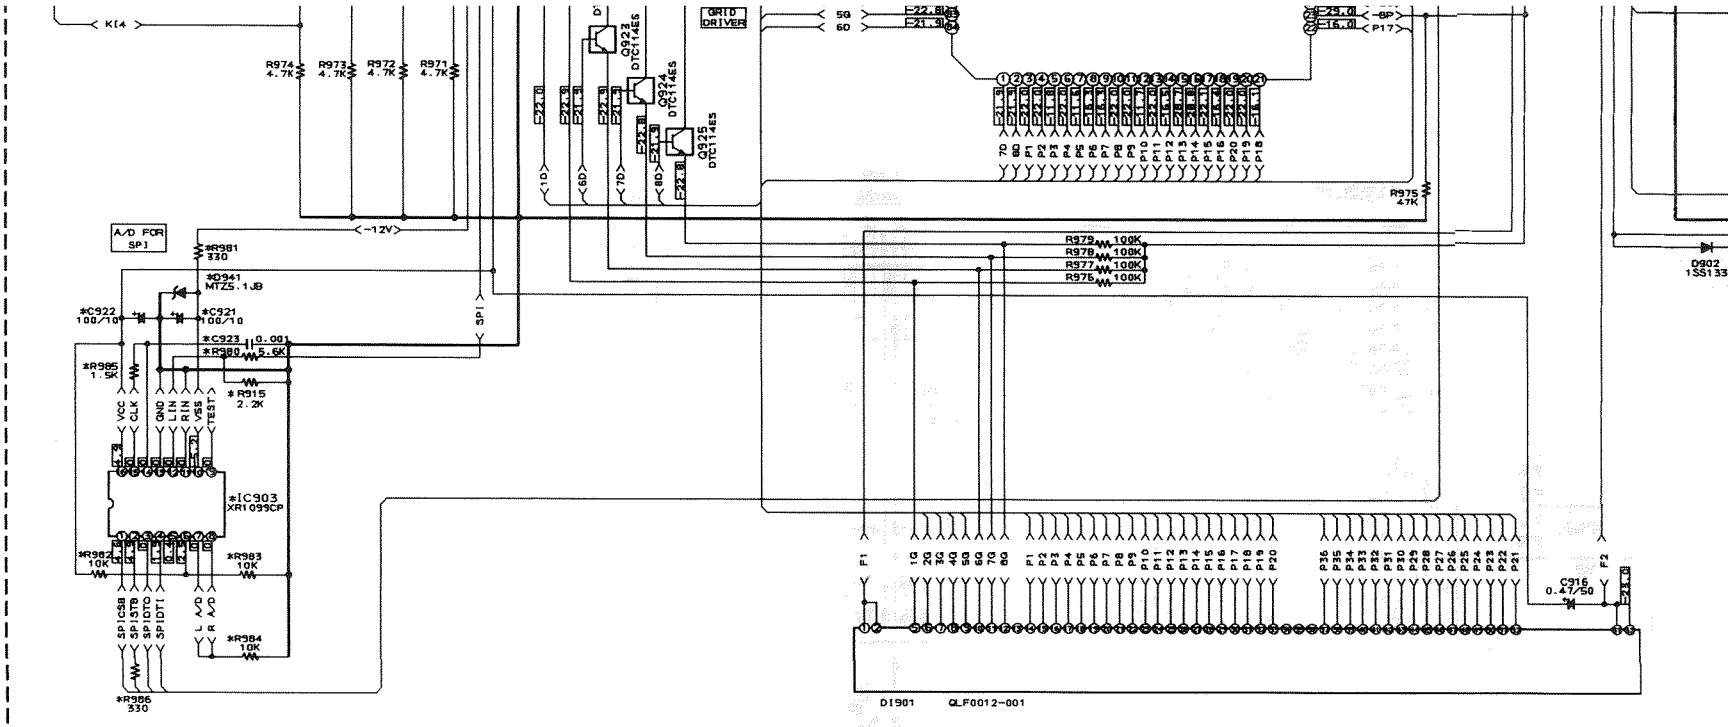

* MARK LIST

	D701T				D851TR	D761T
	U, UT, UP, US, UB	A	EF, EN, G, BS	VX	EF, EN, G	J, C
B401	USED	USED	NONE	NONE	NONE	NONE
B426	USED	USED	USED	USED	NONE	USED
B428	NONE	USED	USED	USED	USED	USED
B429	NONE	USED	USED	USED	USED	USED
C921~923	USED	NONE	NONE	NONE	NONE	USED
CN402	NONE	NONE	NONE	NONE	USED	NONE
D931	USED	NONE	NONE	USED	NONE	NONE
D932	NONE	NONE	NONE	USED	NONE	USED
D933	USED	USED	NONE	NONE	NONE	USED
D935	USED	NONE	NONE	NONE	NONE	USED
D936	NONE	NONE	NONE	NONE	USED	NONE
D941	USED	NONE	NONE	NONE	NONE	USED
IC903	USED	NONE	NONE	NONE	NONE	USED
R980~986	USED	NONE	NONE	NONE	NONE	USED
R991	NONE	NONE	NONE	NONE	USED	NONE
R993	USED	NONE	NONE	NONE	NONE	NONE
R994	USED	NONE	NONE	NONE	NONE	NONE
R940~943	NONE	NONE	NONE	NONE	USED	NONE
S927~930	NONE	NONE	NONE	NONE	USED	NONE
R915	USED	NONE	NONE	NONE	NONE	USED
B431, 411	NONE	NONE	NONE	NONE	NONE	USED

FL Display/System Contorol Section

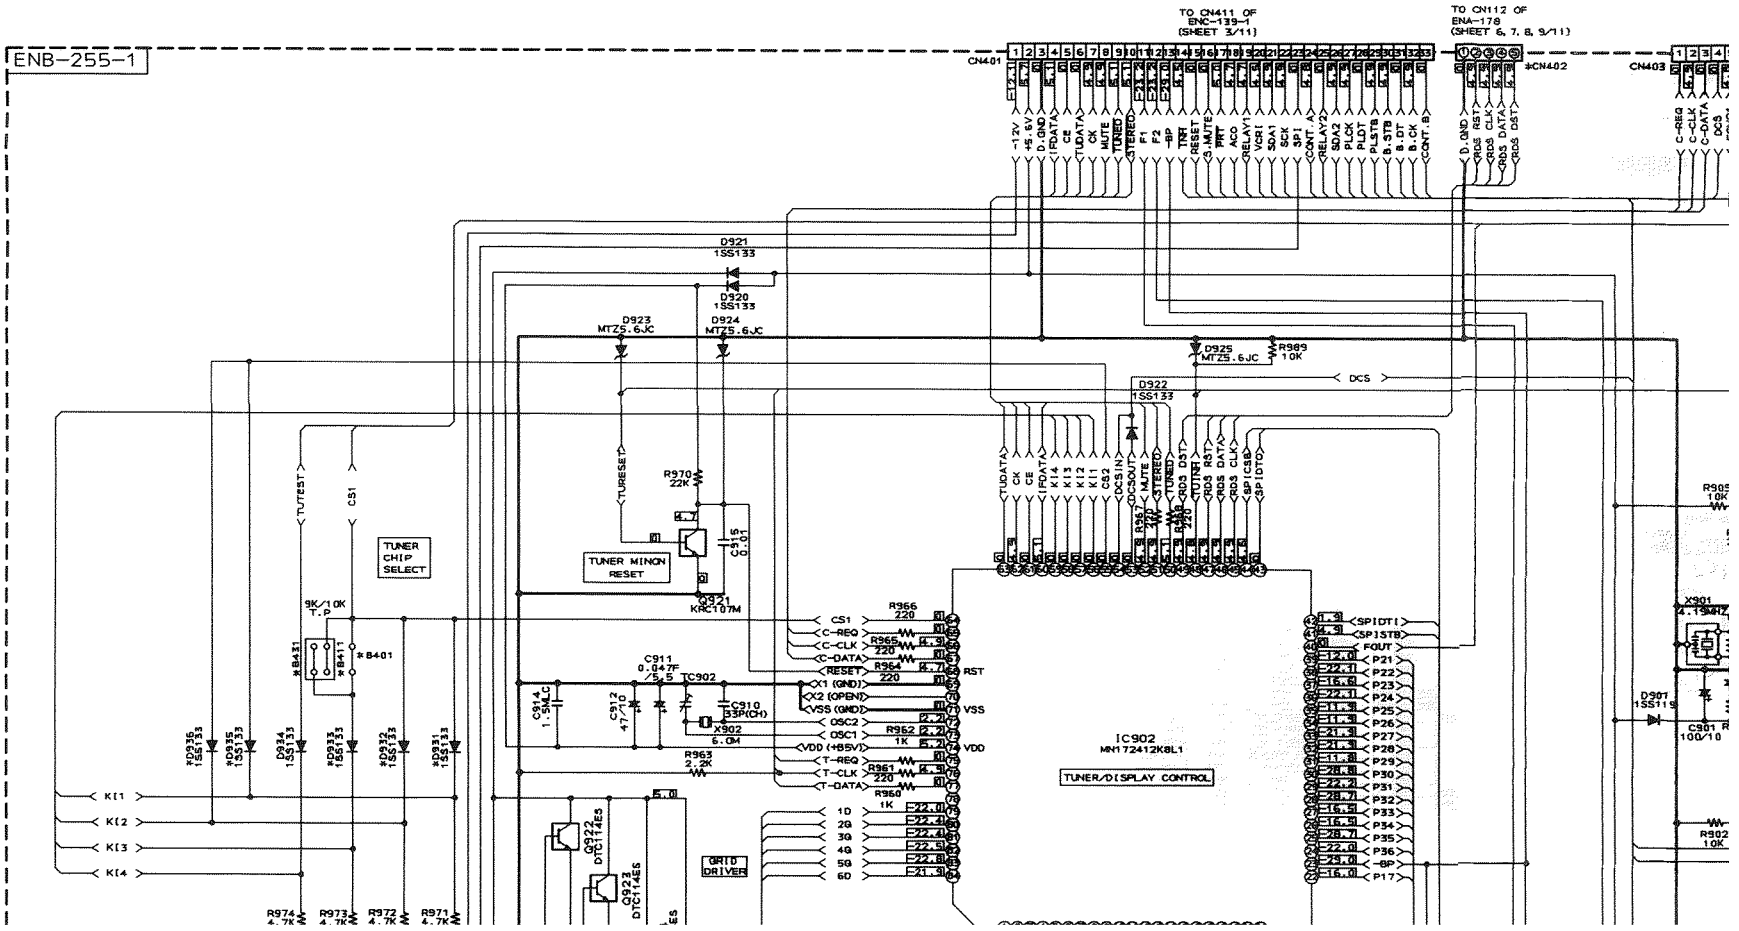

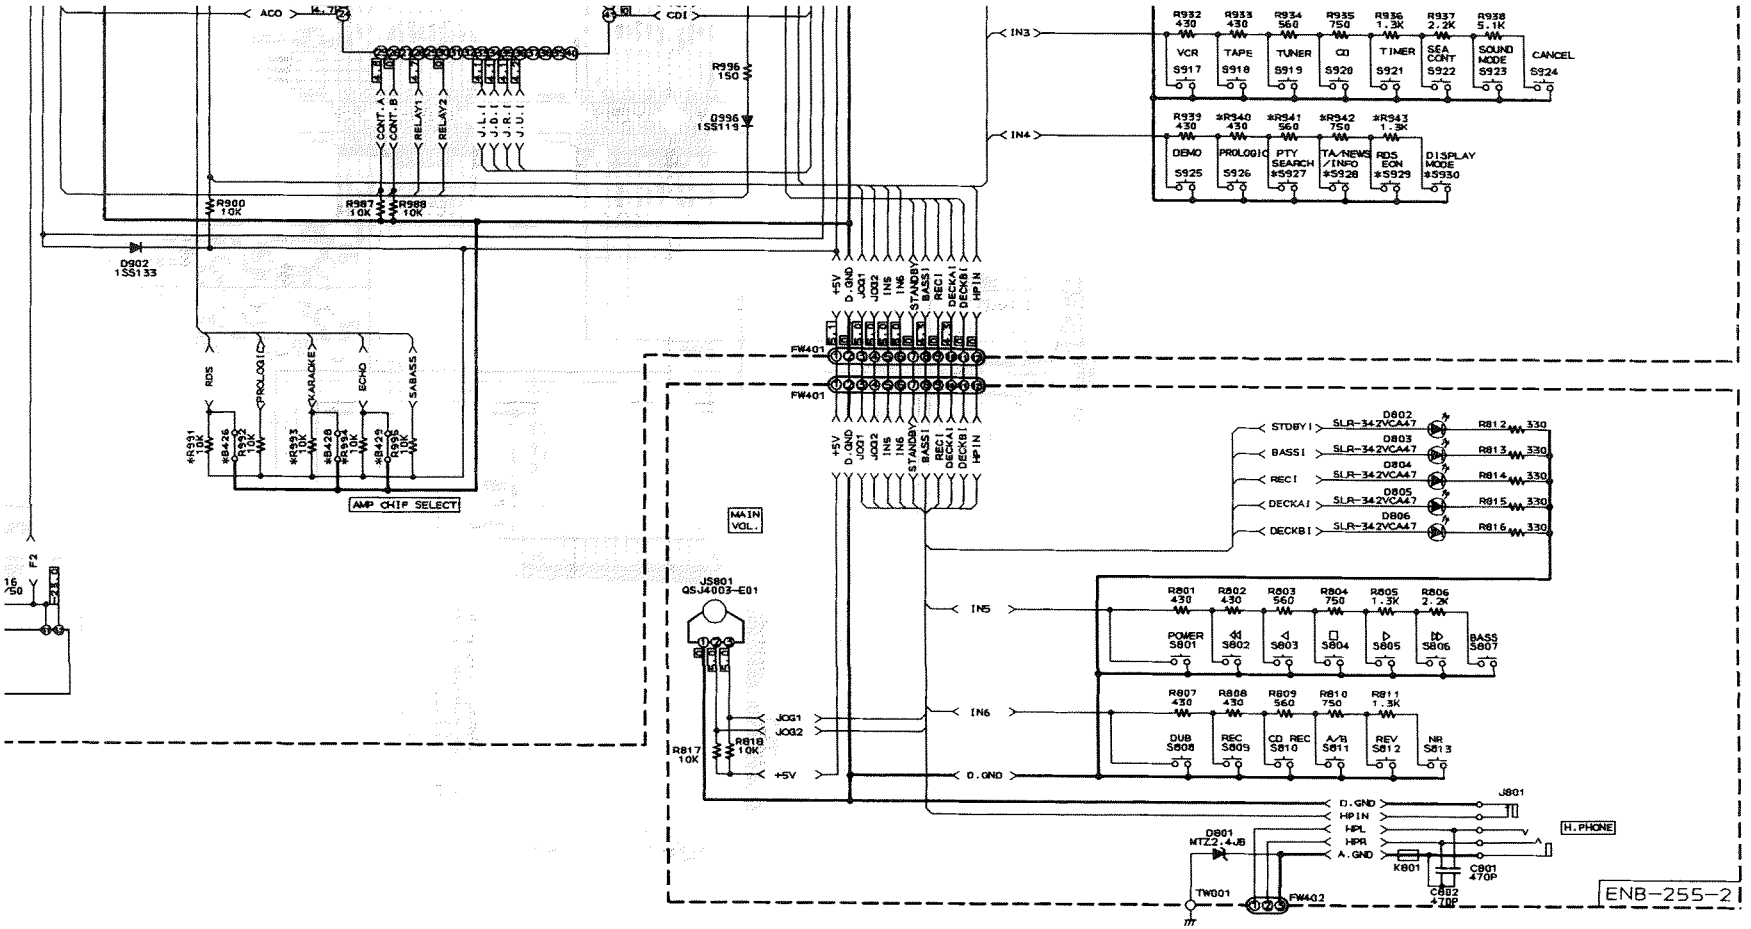
ACO
CDI
R996 150
D996 1SS119
CONT.A
CONT.B
RELAY1
RELAY2
J.L.I
J.D.I
J.R.I
J.D.I
R900 10K
R987 10K
R988 10K
D902 1SS133
RDS
PROLOGIC
KARAOKE
ECHO
SABASS
*R931 10K
*R932 10K
*R933 10K
*R934 10K
*R935 10K
*R936 10K
*B426
*B427
*B428
*B429
AMP CHIP SELECT
IN3
IN4
R932 430
R933 430
R934 560
R935 750
R936 1.3K
R937 2.2K
R938 5.1K
VCR S917
TAPE S918
TUNER S919
CD S920
TIMER S921
SEA CONT S922
SOUND MODE S923
CANCEL S924
R939 430
*R940 430
*R941 560
*R942 750
*R943 1.3K
DEMO S925
PROLOGIC S926
PTY SEARCH *S927
TA/NEWS /INFO *S928
RDS EON *S929
DISPLAY MODE *S930
+5V
D.GND
JOG1
JOG2
INS
IN6
STANDBY
BASS1
REC1
DECKA1
DECKB1
HPIN
FW401
FW401
MAIN VOL.
J5801 QSJ4003-E01
JOG1
JOG2
R818 10K
R817 10K
+5V
STDBY1
BASS1
REC1
DECKA1
DECKB1
D802 SLR-342VCA47
D803 SLR-342VCA47
D804 SLR-342VCA47
D805 SLR-342VCA47
D806 SLR-342VCA47
R812 330
R813 330
R814 330
R815 330
R816 330
IN5
R801 430
R802 430
R803 560
R804 750
R805 1.3K
R806 2.2K
POWER S801
S802
S803
S804
S805
S806
BASS S807
IN6
R807 430
R808 430
R809 560
R810 750
R811 1.3K
DUB S808
REC S809
CD REC S810
A/B S811
REV S812
NR S813
D.GND
J801
HPIN
HPL
HPR
A.GND
H.PHONE
D801 MTZ2.4JB
K801
C801 470P
C802 470P
TW001
FW402
ENB-255-2

F G H I J

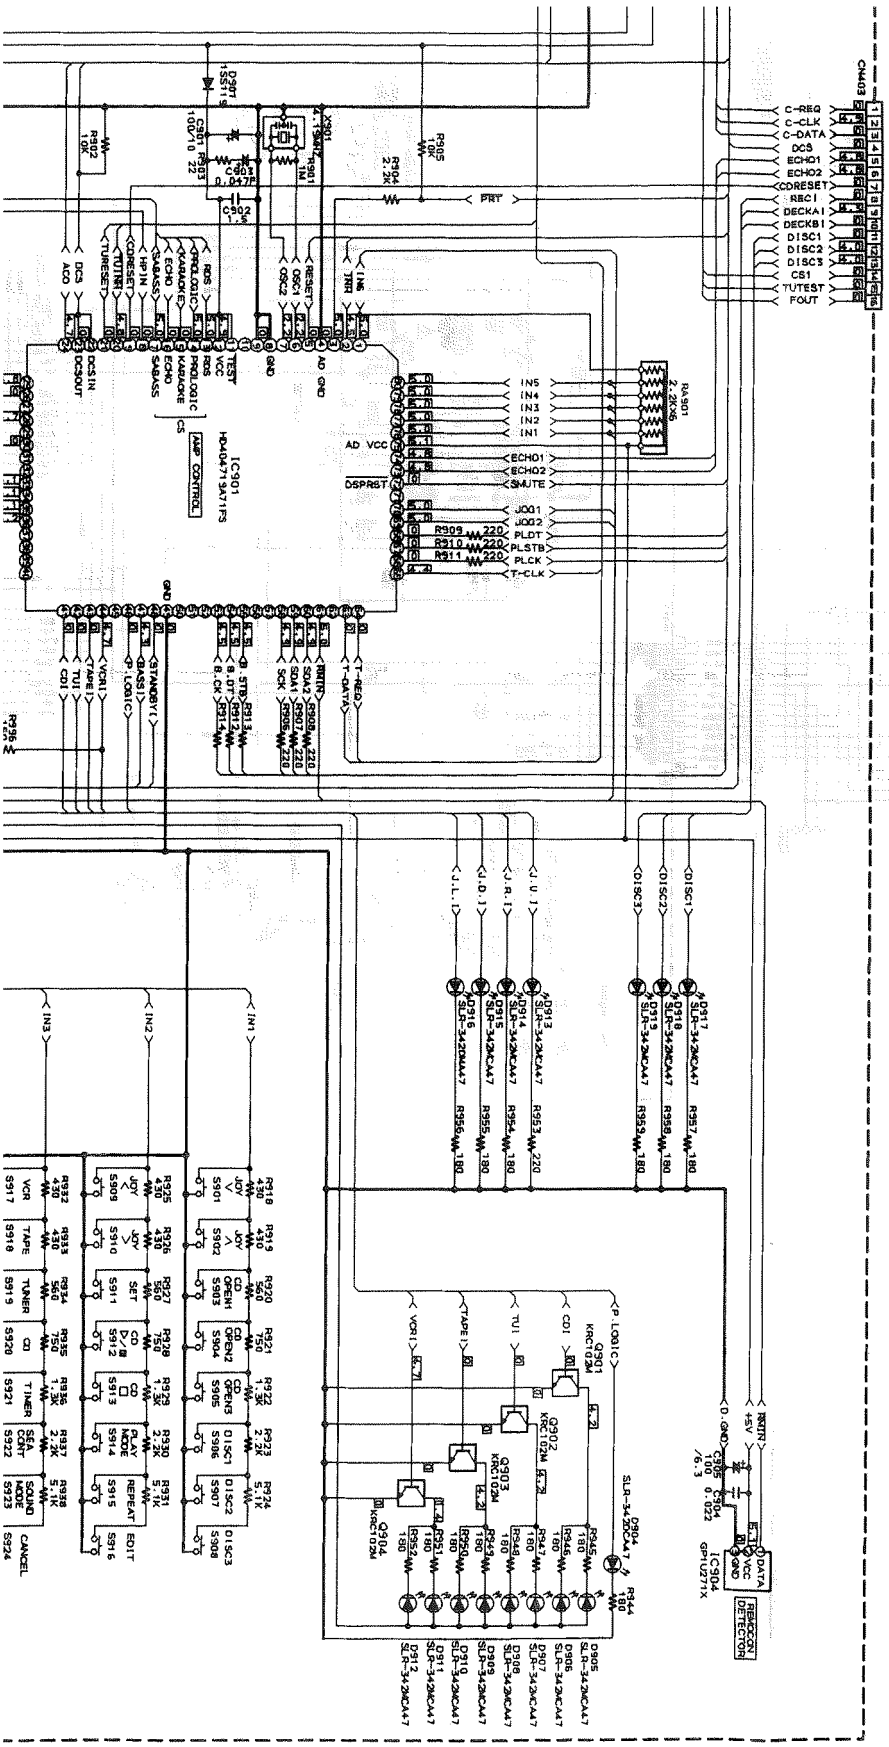

P2-51-a P2-51-b

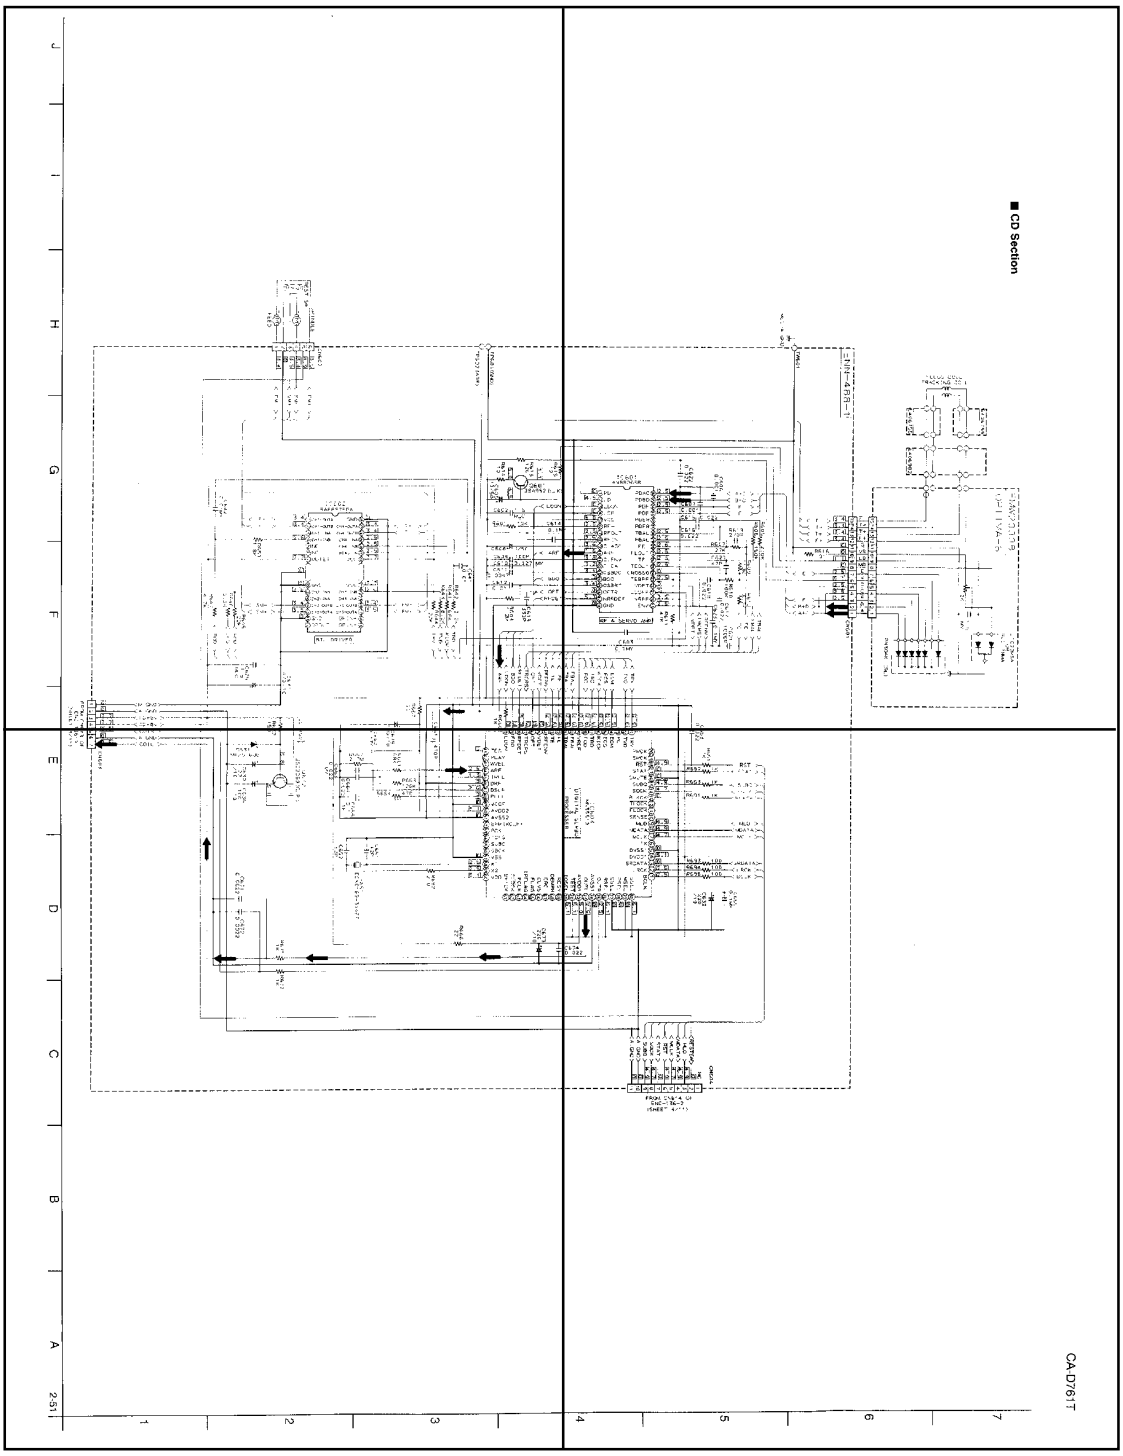

P2-51-c P2-51-d

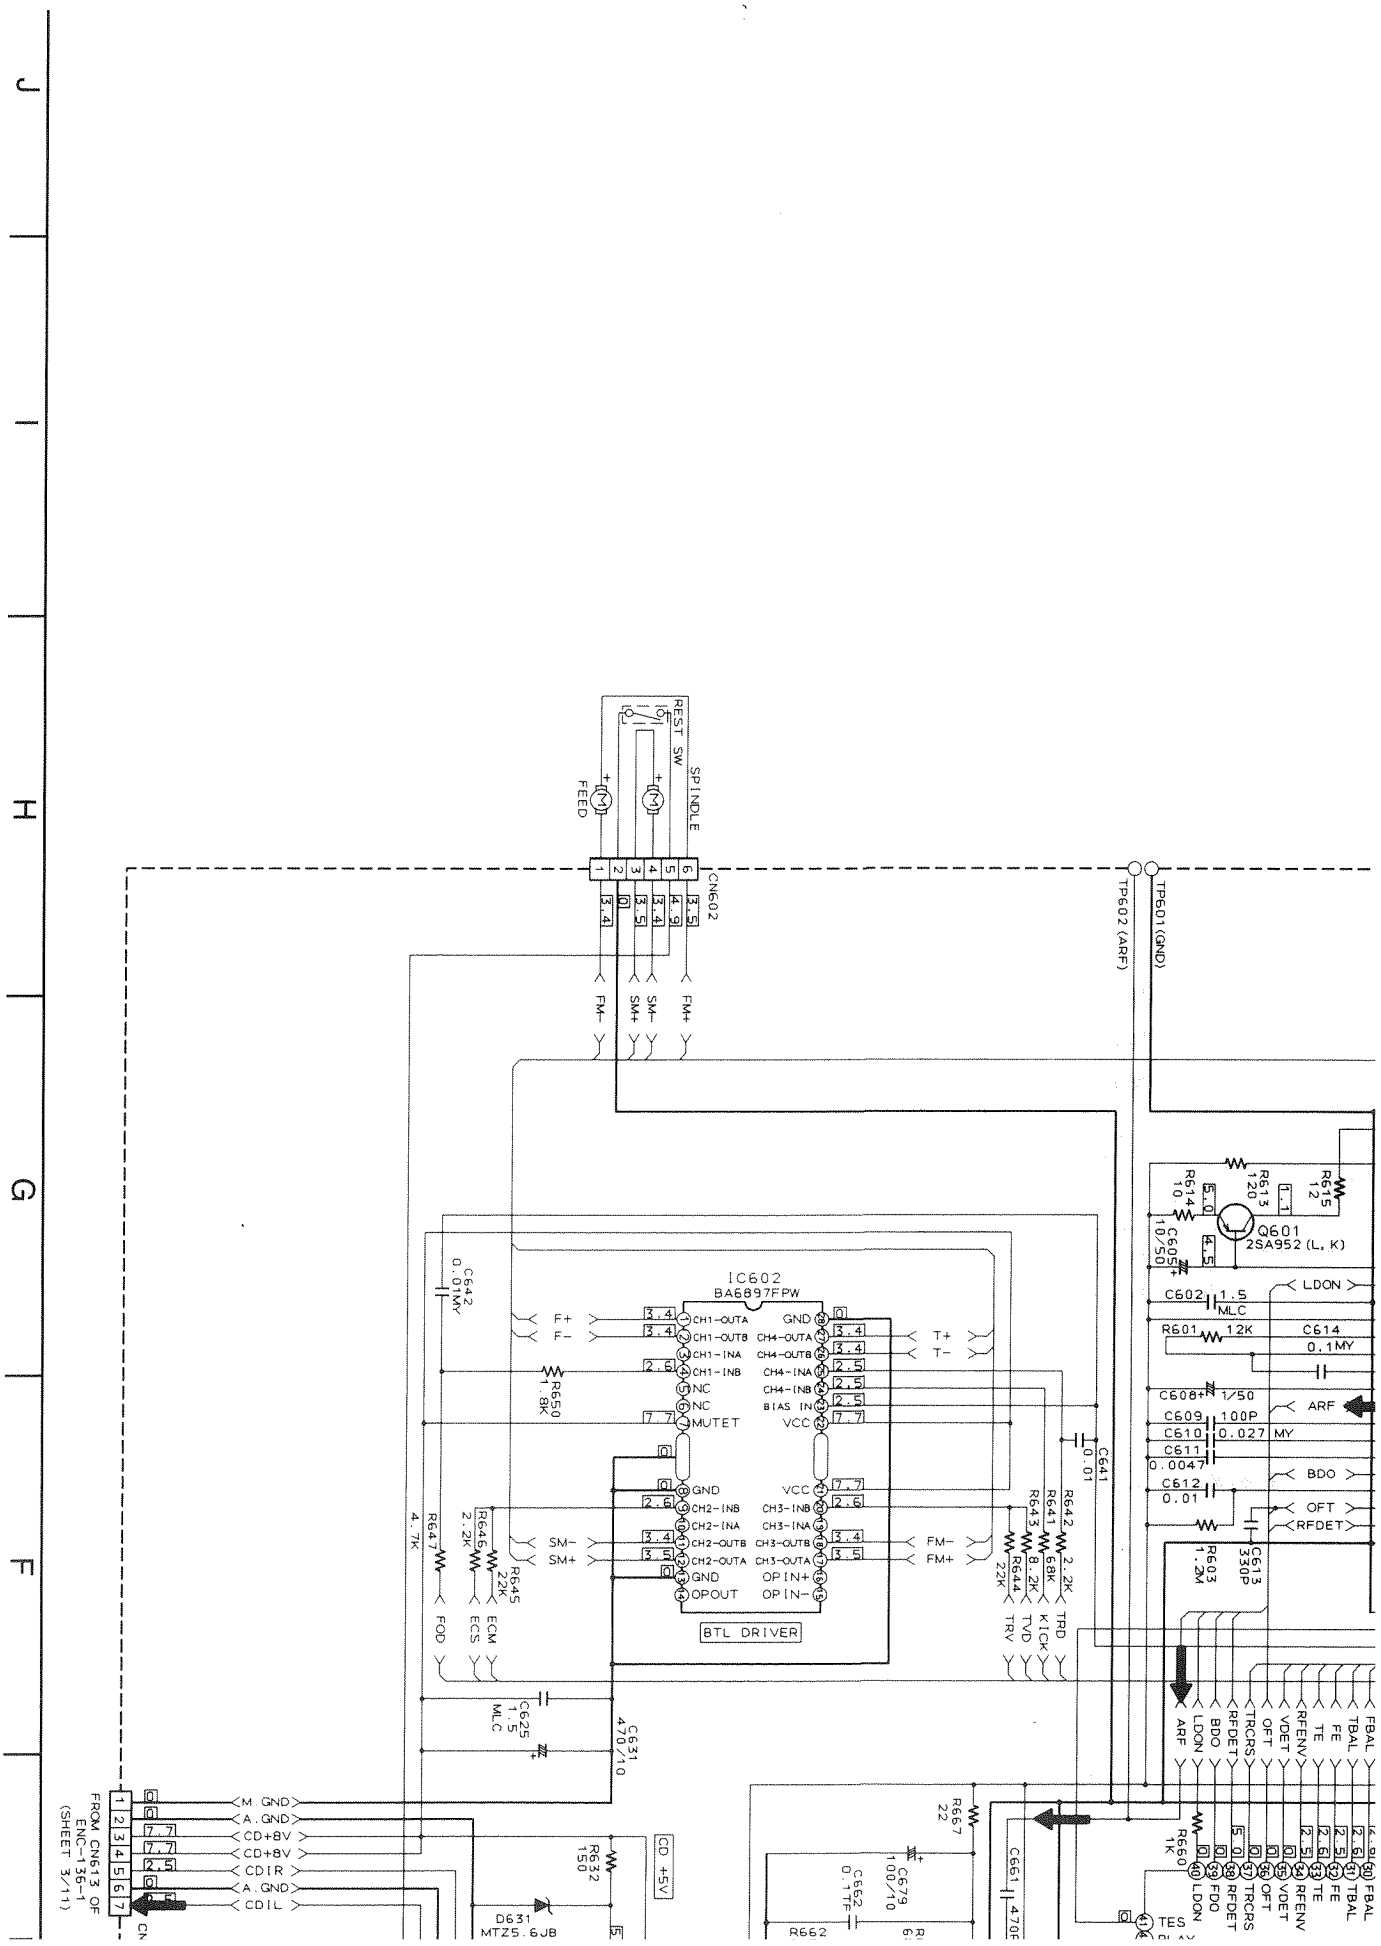
IC602
BA6897FPW
BTL DRIVER
CH1-OUTA
CH1-OUTB
CH1-INA
CH1-INB
NC
NC
MUTET
GND
CH2-INB
CH2-INA
CH2-OUTB
CH2-OUTA
GND
OPOUT
VCC
CH3-INB
CH3-INA
CH3-OUTB
CH3-OUTA
OPIN+
OPIN-
BIAS IN
CH4-OUTA
CH4-OUTB
CH4-INA
CH4-INB
VCC
CN602
SPINDLE
REST SW
FEED
FM+
SM-
SM+
FM+
TP602 (ARF)
TP601 (GND)
Q601
2SA952 (L, K)
R615
12
R613
120
R614
10
C605
10/50
C602
1.5
MLC
R601
12K
C614
0.1MY
C608
1/50
C609
100P
C610
0.027
MY
C611
0.0047
C612
0.01
R603
1.2M
C613
330P
LDON
ARF
BDO
OFT
RFDET
C642
0.01MY
R650
1.8K
C641
0.01
R647
4.7K
R645
2.2K
R642
2.2K
R641
6.8K
R643
8.2K
R644
22K
FOD
ECM
ECS
TRV
TVD
KICK
TRD
T+
T-
FM-
FM+
SM-
SM+
C625
1.5
MLC
C631
470/10
FROM CN613 OF ENC-1136-1 (SHEET 3/11)
M.GND
A.GND
CD+8V
CD+8V
CDIR
A.GND
CDIL
R632
150
CD +5V
D631
MTZ5.6JB
R667
22
C679
100/10
C662
0.1
R662
C661
470
R660
1K
TES
FBAL
TBAL
FE
TE
RFENV
VDET
OFT
TRCRS
RFDET
FDO
LDON

■ CD Section

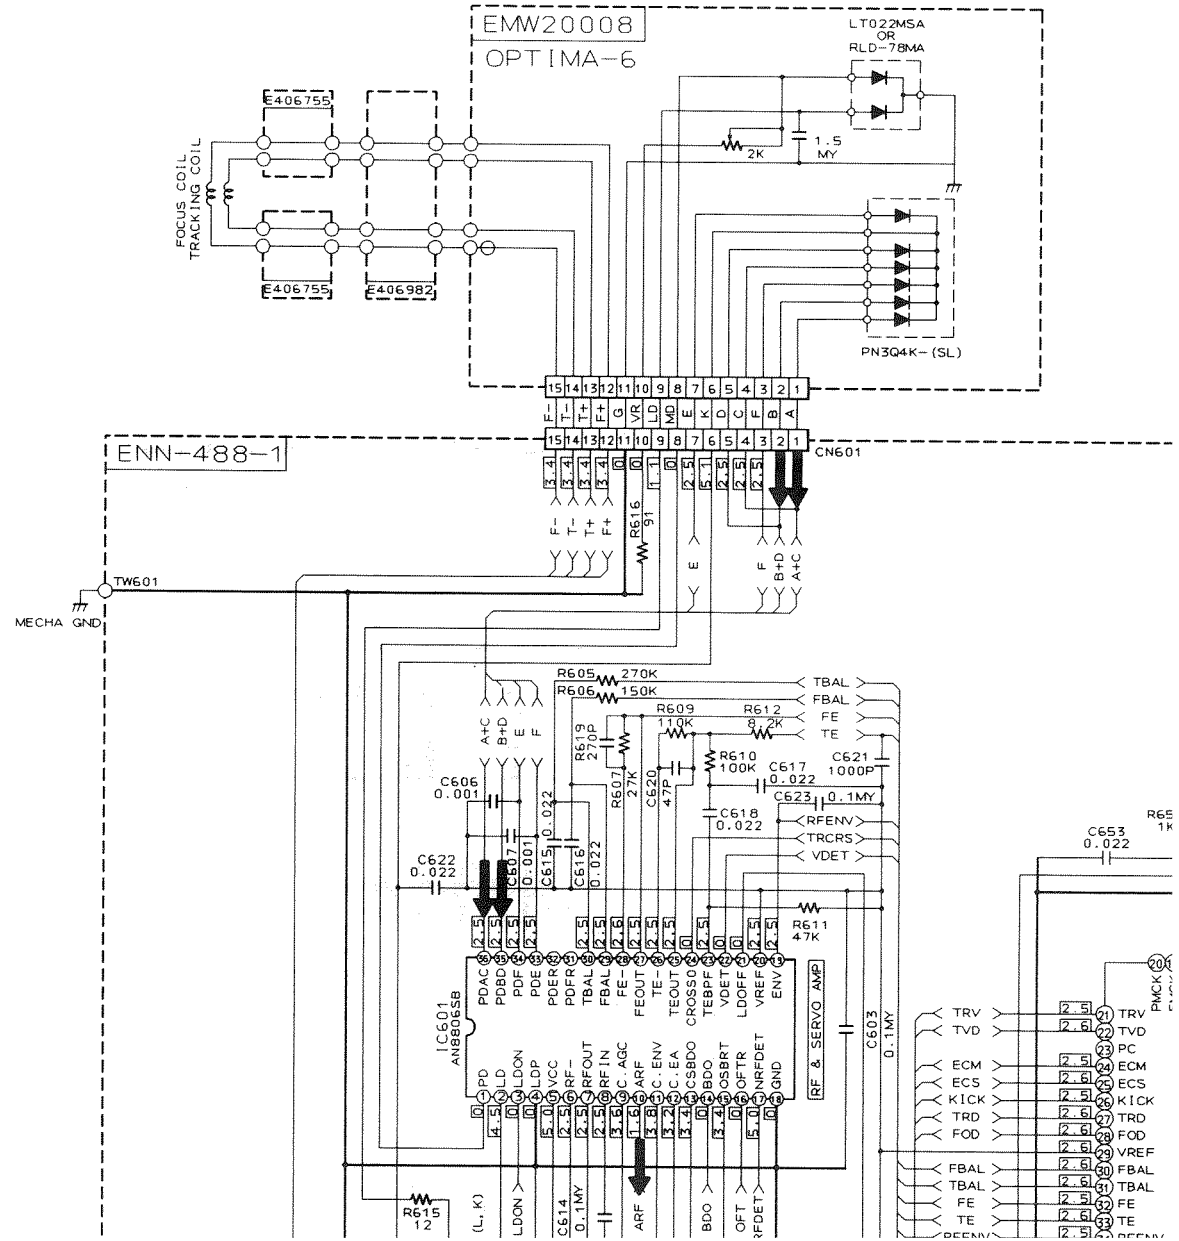
EMW20008
OPTIMA-6
LT022MSA
OR
RLD-78MA
PN3Q4K-(SL)
FOCUS COIL
TRACKING COIL
E406755
E406982
2K
1.5
MY
ENN-488-1
CN601
TW601
MECHA GND
R616
91
R605 270K
R606 150K
R609 110K
R612 8.2K
R610 100K
R607 27K
R619 270P
C620 47P
C606 0.001
C607 0.001
C615 0.022
C616 0.022
C617 0.022
C618 0.022
C621 1000P
C622 0.022
C623 0.1MY
C653 0.022
C603 0.1MY
R611 4.7K
R615 12
C614 0.1MY
IC601
AN8806SB
RF & SERVO AMP
TBAL
FBAL
FE
TE
RFENV
TRCRS
VDET
TRV
TVD
PC
ECM
ECS
KICK
TRD
FOD
VREF
LDON
ARF
BDO
OFT
RFDET

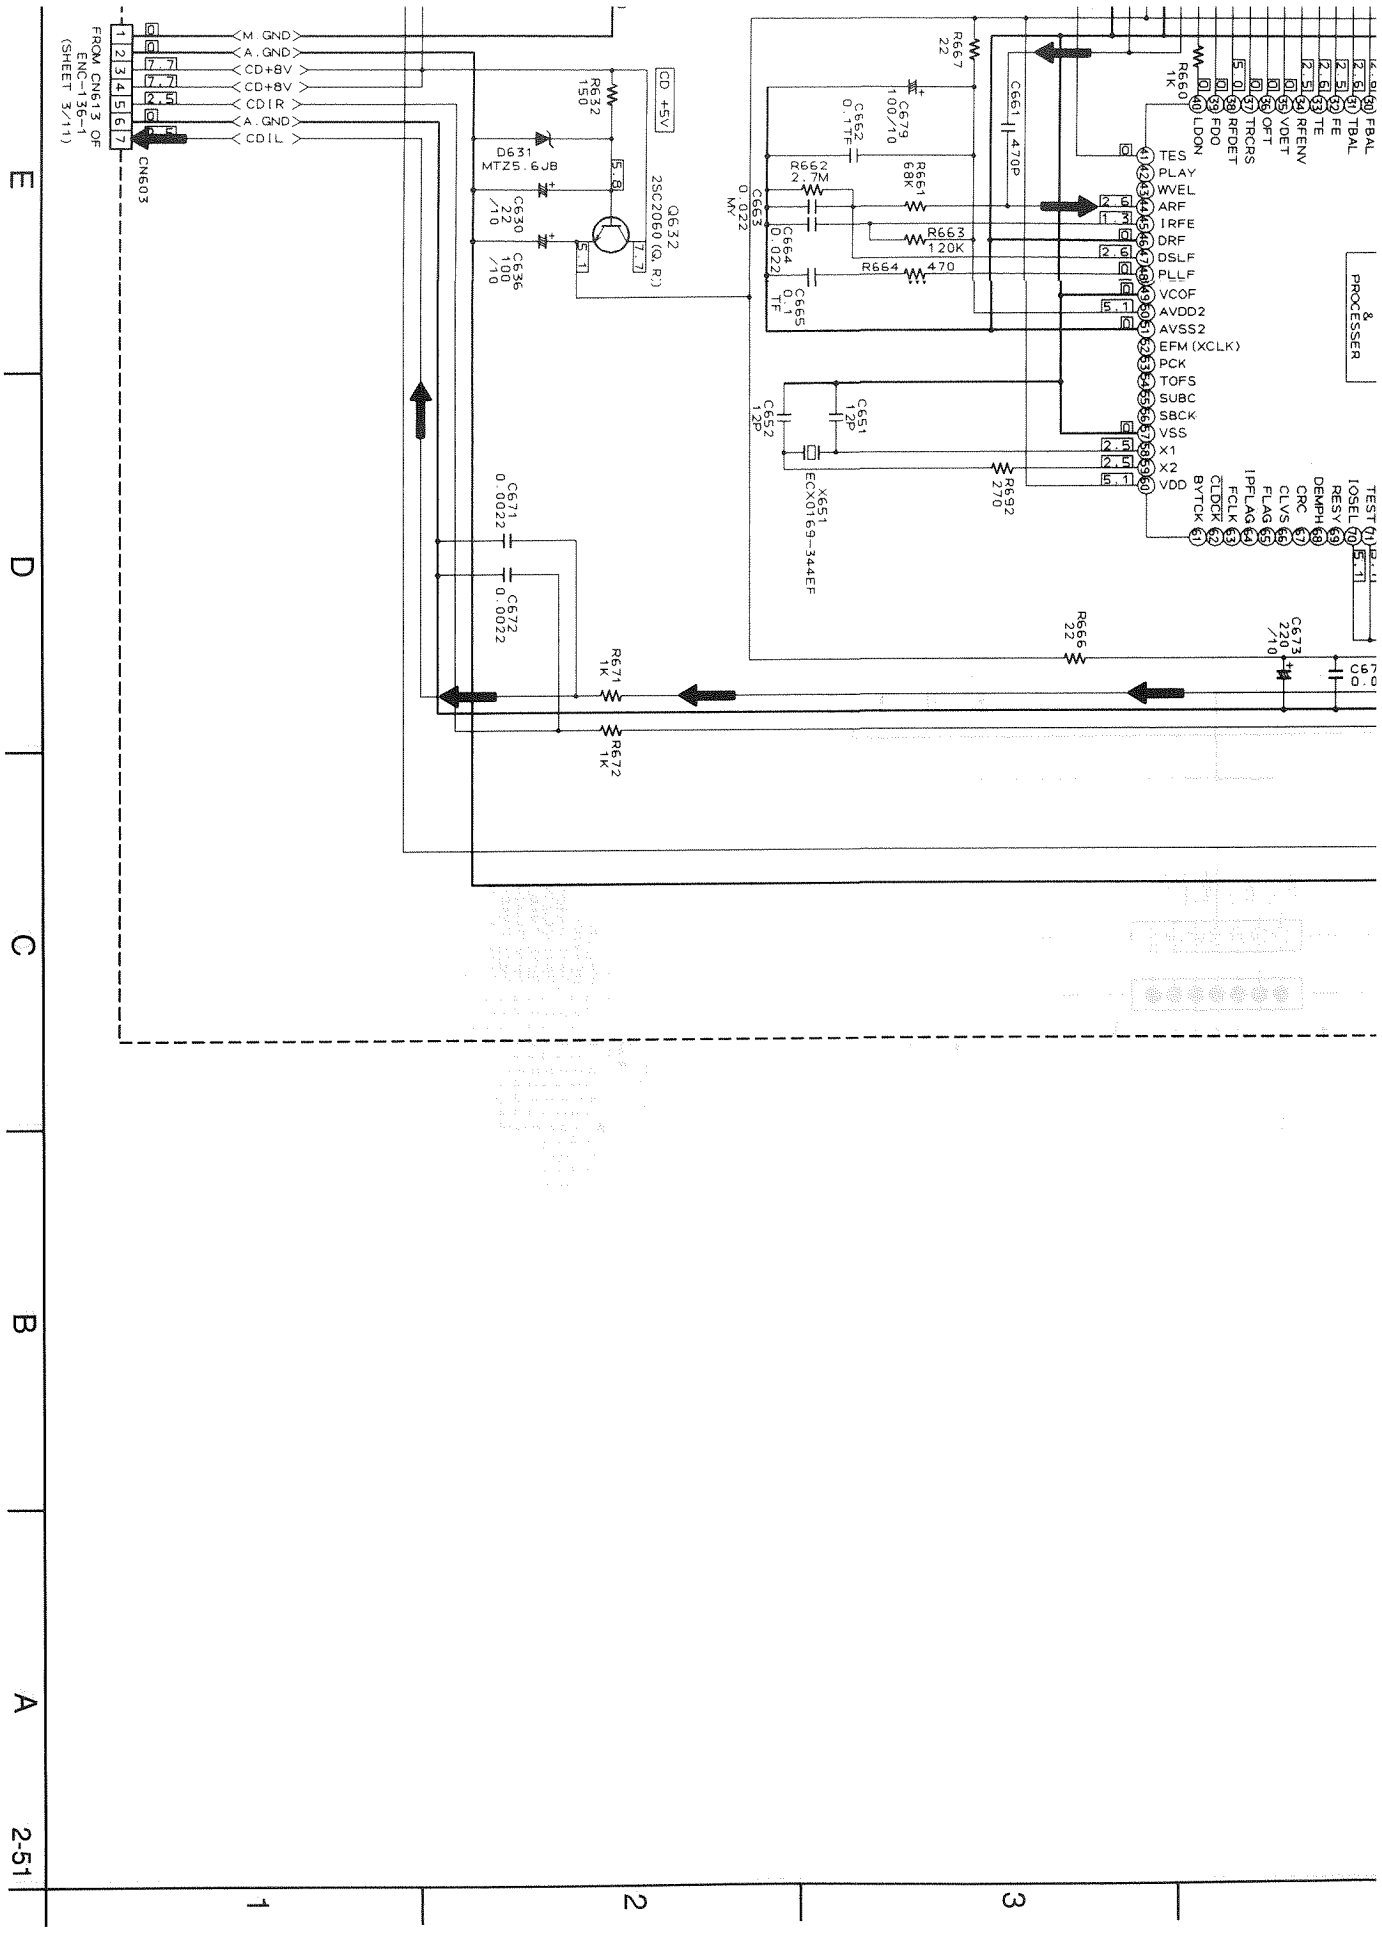
FROM CN613 OF ENC-136-1 (SHEET 3/11)
CN603
M.GND
A.GND
CD+8V
CD+8V
CDIR
A.GND
CDIL
CD +5V
R632 150
D631 MTZ5.6JB
Q632 2SC2060(Q,R)
C630 22 /10
C636 100 /10
R667 22
C679 100/10
C662 0.1TF
C661 470P
R660 1K
R662 2.7M
R661 68K
C663 0.022
C664 0.022
R663 120K
R664 470
C665 0.1 TF
TES
PLAY
WVEL
ARF
IRFE
DRF
DSLF
PLLF
VCOF
AVDD2
AVSS2
EFM(XCLK)
PCK
TOFS
SUBC
SBCK
VSS
X1
X2
VDD
C651 12P
C652 12P
X651 ECX0169-344EF
R692 270
C671 0.0022
C672 0.0022
R671 1K
R672 1K
R666 22
C673 220 /10
FBAL
TBAL
FE
TE
RFENV
VDET
OFT
TRCRS
RFDET
FDO
LDON
IOSEL
RESY
DEMPH
CRC
CLVS
FLAG
IPFLAG
FCLK
CLDCK
BYTCK
&
PROCESSER

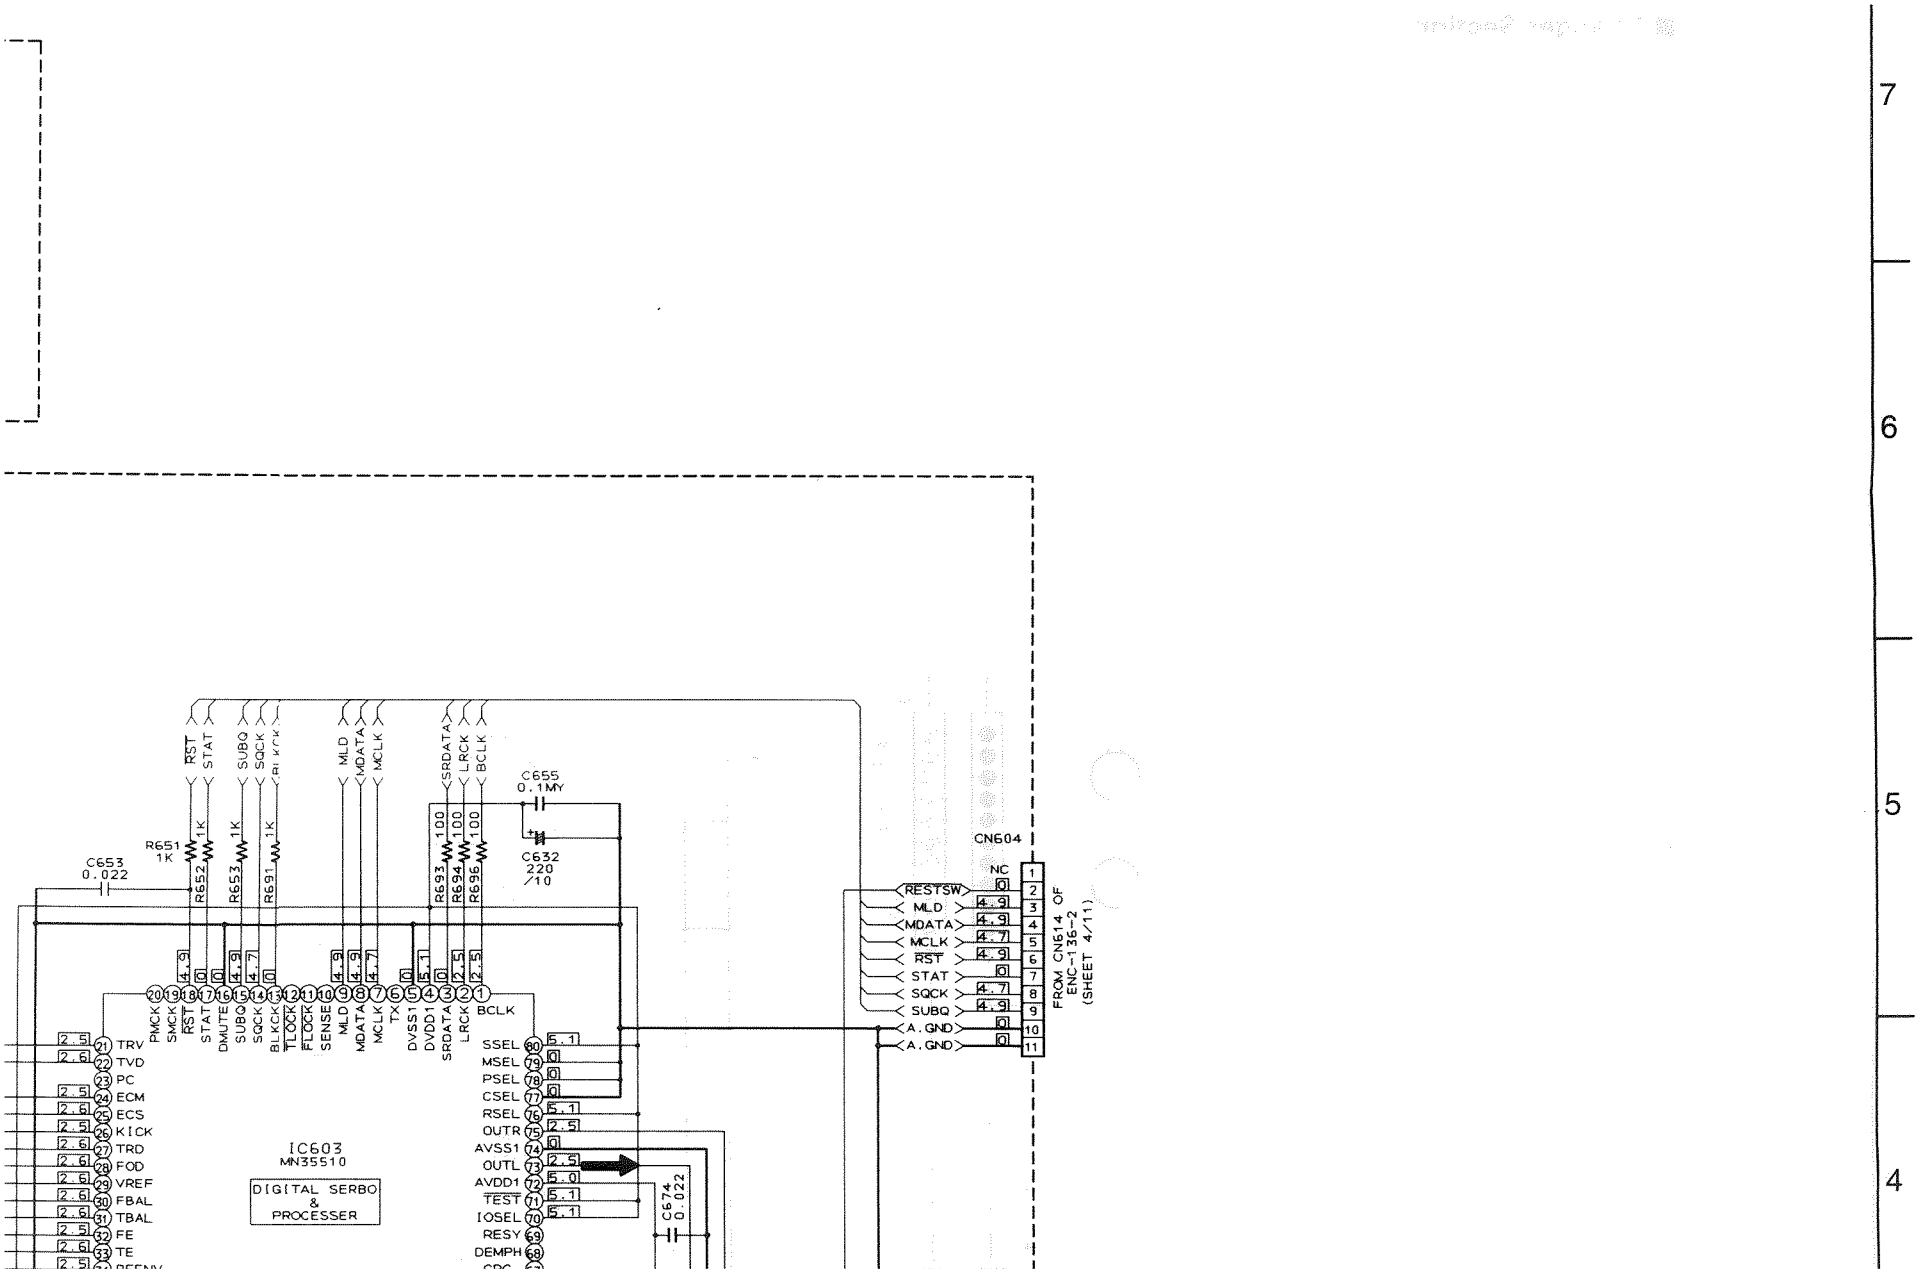
IC603
MN35510
DIGITAL SERBO
&
PROCESSER
C653
0.022
C655
0.1MY
C632
220
/10
C674
0.022
R651
1K
R652
1K
R653
1K
R691
1K
R693
100
R694
100
R695
100
CN604
NC
RESTSW
MLD
MDATA
MCLK
RST
STAT
SQCK
SUBQ
A.GND
A.GND
FROM CN614 OF
ENC-136-2
(SHEET 4/11)
TRV
TVD
PC
ECM
ECS
KICK
TRD
FOD
VREF
FBAL
TBAL
FE
TE
PMCK
SMCK
RST
STAT
DMUTE
SUBQ
SQCK
BLKCK
TLOCK
FLOCK
SENSE
MLD
MDATA
MCLK
TX
DVSS1
DVDD1
SRDATA
LRCK
BCLK
SSEL
MSEL
PSEL
CSEL
RSEL
OUTR
AVSS1
OUTL
AVDD1
TEST
IOSEL
RESY
DEMPH

P2-52-a P2-52-b

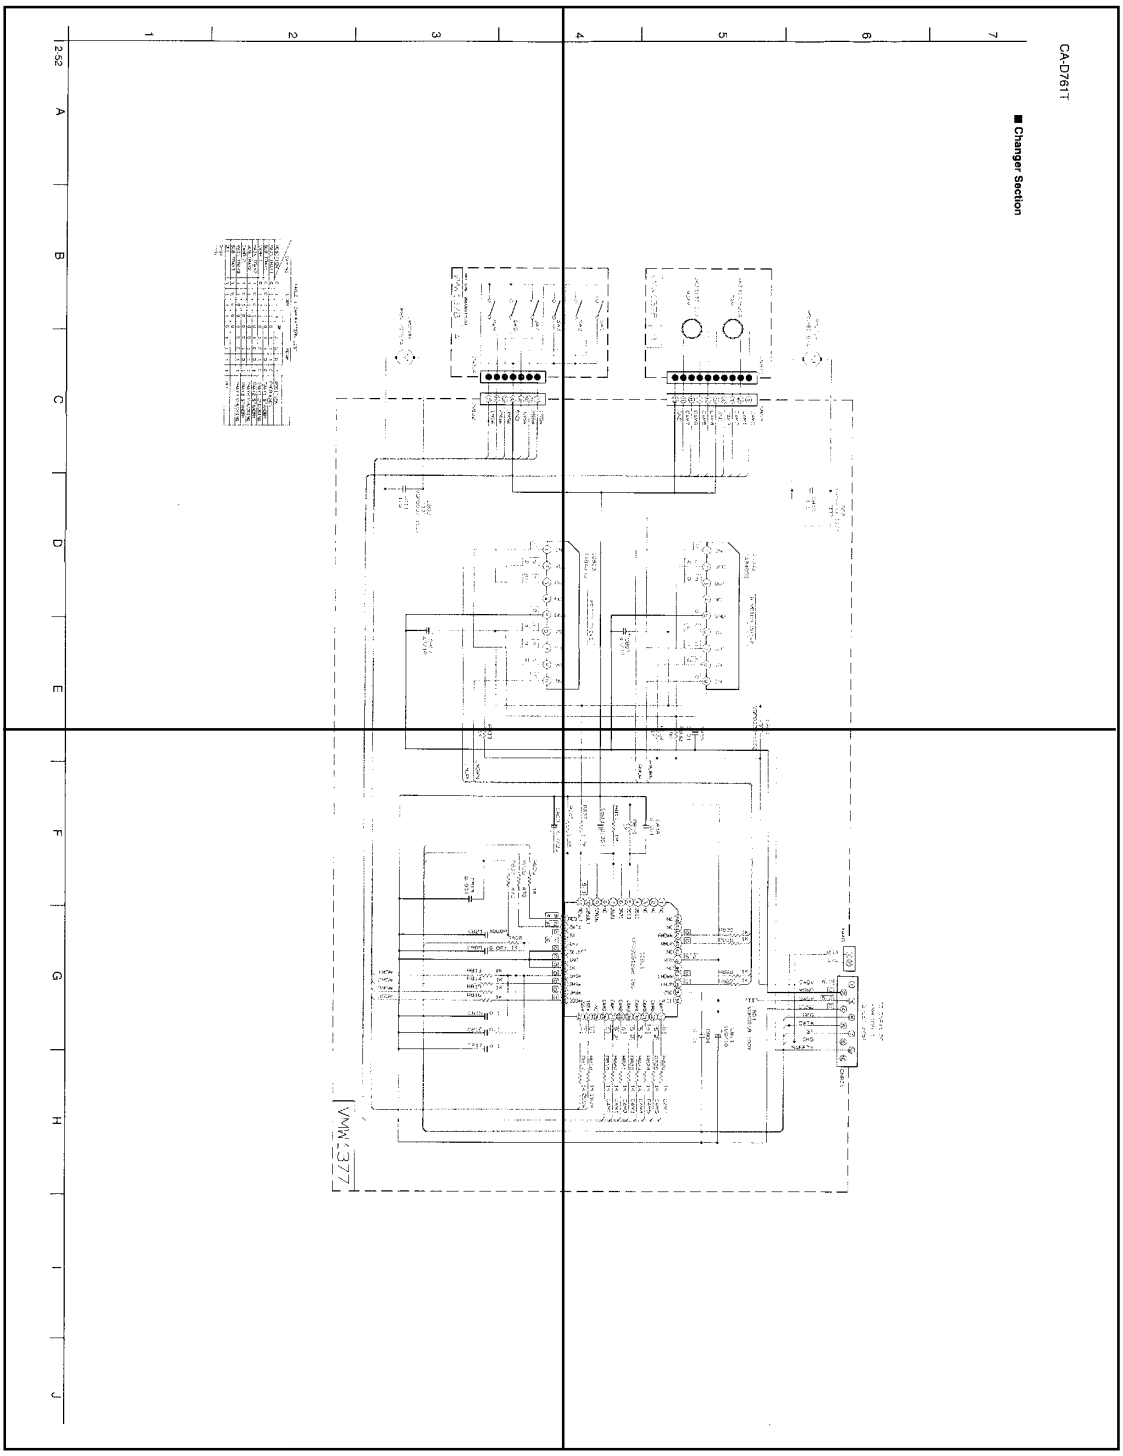

P2-52-c P2-52-d

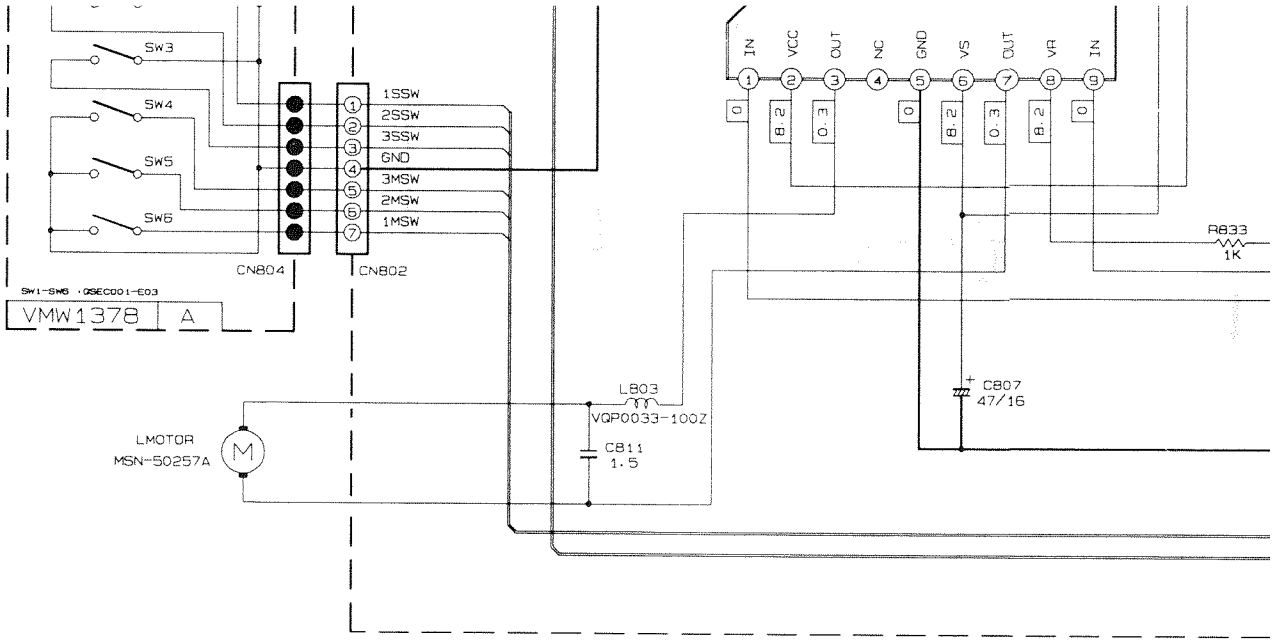

TABLE 1 CAM PATTERN LIST

CAM NO / POSITION	LCAM 0	1	2	3	CM	RCAM 4	5	6	7	POSITION
MAIN TRAY1	0	1	1	1	0	1	1	1	0	EMERGENCY
SUB TRAY1	0	0	1	1	0	1	1	0	0	TRAY1 STANDBY
CAMR 1	0	1	0	1	0	1	0	1	0	TRAY1 CHECKING
MAIN TRAY2	1	0	0	1	0	1	0	0	1	TRAY2 STANDBY
SUB TRAY2	1	1	1	0	0	0	1	1	1	TRAY2 CHECKING
CAMR 2	1	0	1	0	0	0	1	0	1	TRAY3 STANDBY
MAIN TRAY3	1	1	0	0	0	0	0	1	1	TRAY3 CHECKING
SUB TRAY3	1	0	0	0	0					
OFF	1	1	1	1	0	1	1	1	1	OFF

0=0V
1=5V

■ Changer Section

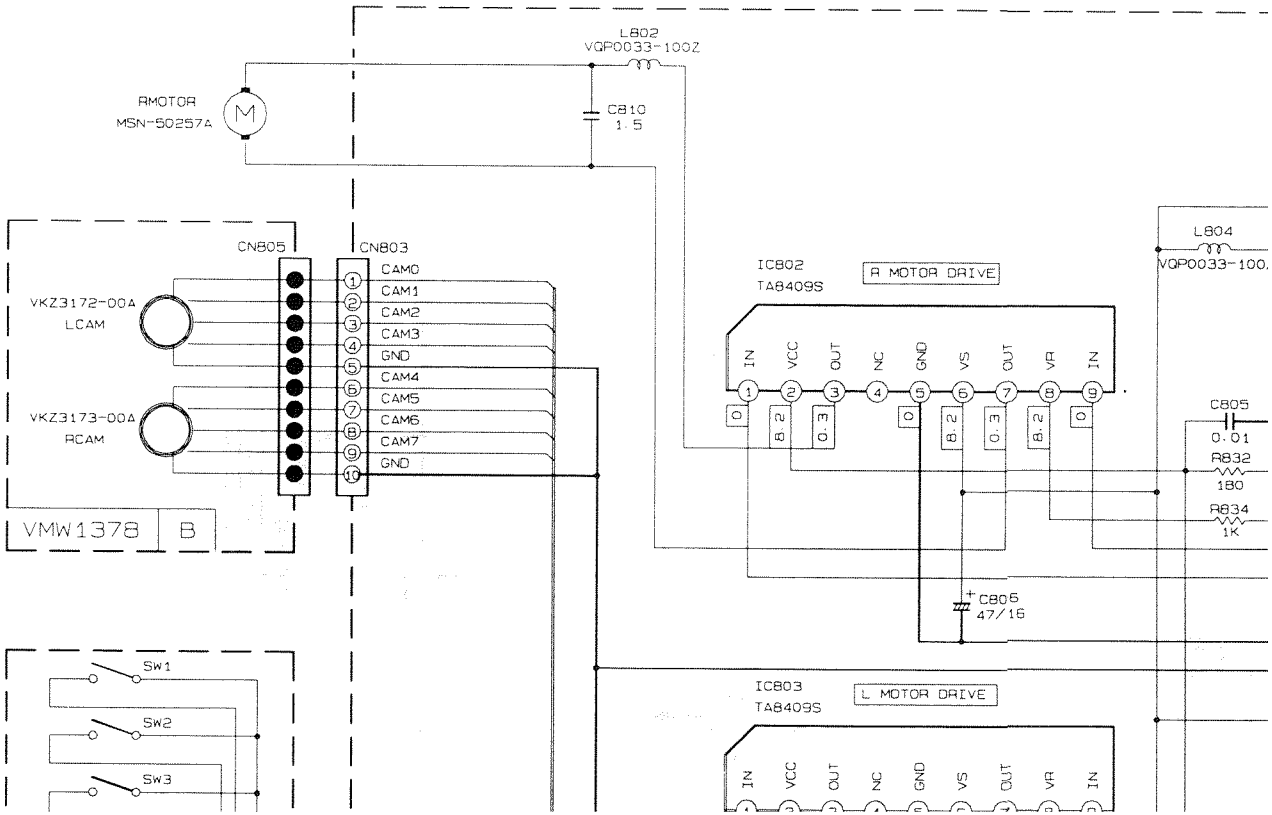

F
G
H
I
J
VMW1377
R833
1K
LMDWN
LMUP
C802
4.7/25
R840
5.6K
R805
1K
R806
470
R807
470
C813
0.001
C821
1000P
R808
1K
C809
0.001
1MSW
2MSW
3MSW
3SSW
R813
1K
R814
1K
R815
1K
R816
1K
C815
0.1
C816
0.1
C817
0.1

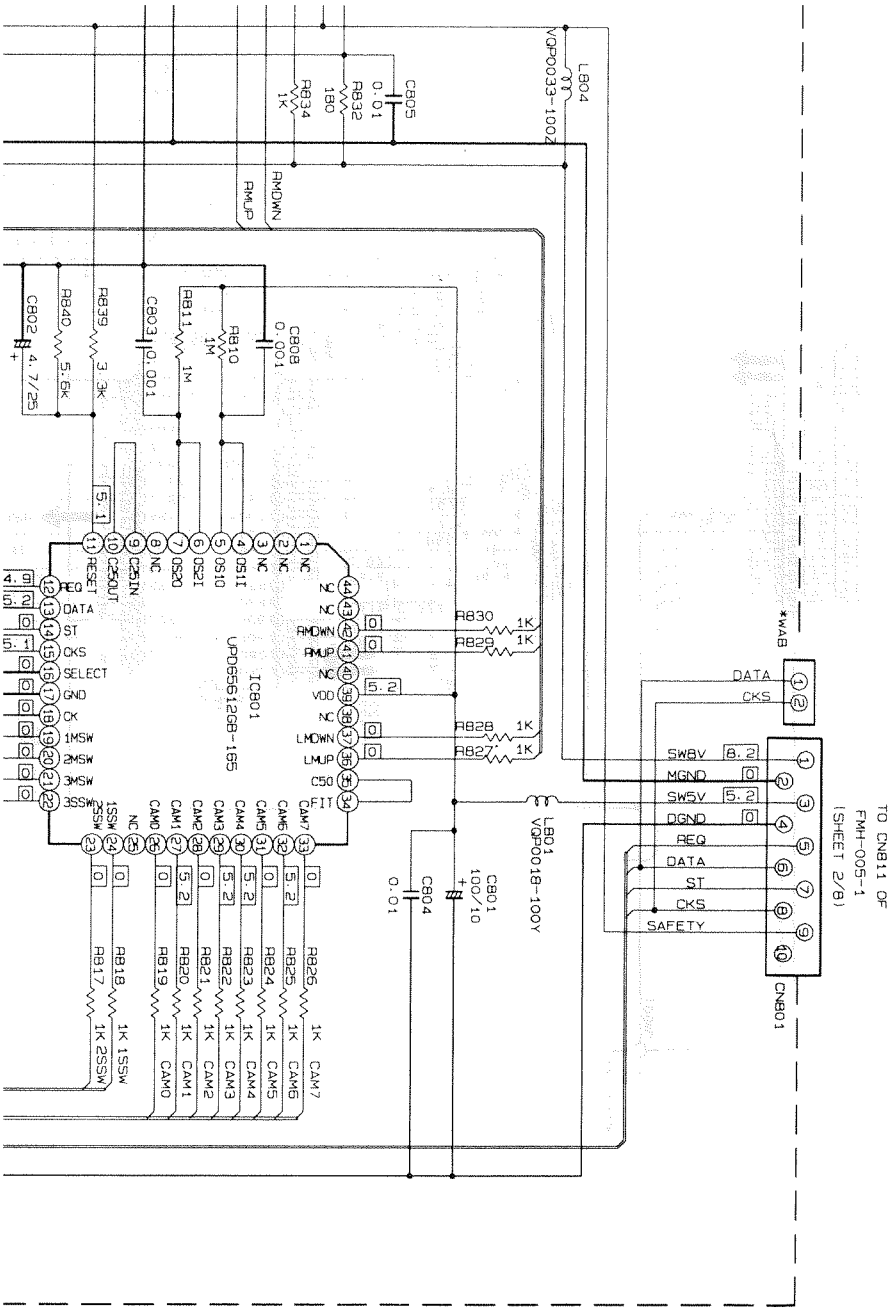
L804
VQP0033-100Z
C805
0.01
R832
180
R834
1K
AMUP
AMDWN
C802
4.7/25
R840
5.6K
R839
3.3K
C803
0.001
R811
1M
R810
1M
C808
0.001
IC801
UPD65612GB-165
NC
AMDWN
AMUP
VDD
LMDWN
LMUP
C50
CFIT
RESET
C250UT
C25IN
OS20
OS2I
OS1I
OS10
REQ
DATA
ST
CKS
SELECT
GND
CK
1MSW
2MSW
3MSW
3SSW
CAM0
CAM1
CAM2
CAM3
CAM4
CAM5
CAM6
CAM7
R830
R829
R828
R827
1K
5.2
C804
0.01
C801
100/10
L801
VQP0018-100Y
*WAB
DATA
CKS
SW8V
MGND
SW5V
DGND
REQ
DATA
ST
CKS
SAFETY
8.2
CNB01
TO CNB11 OF
FMH-005-1
(SHEET 2/8)

Printed Circuit Boards

MAIN AMP P.C.BORD(ENH-308)

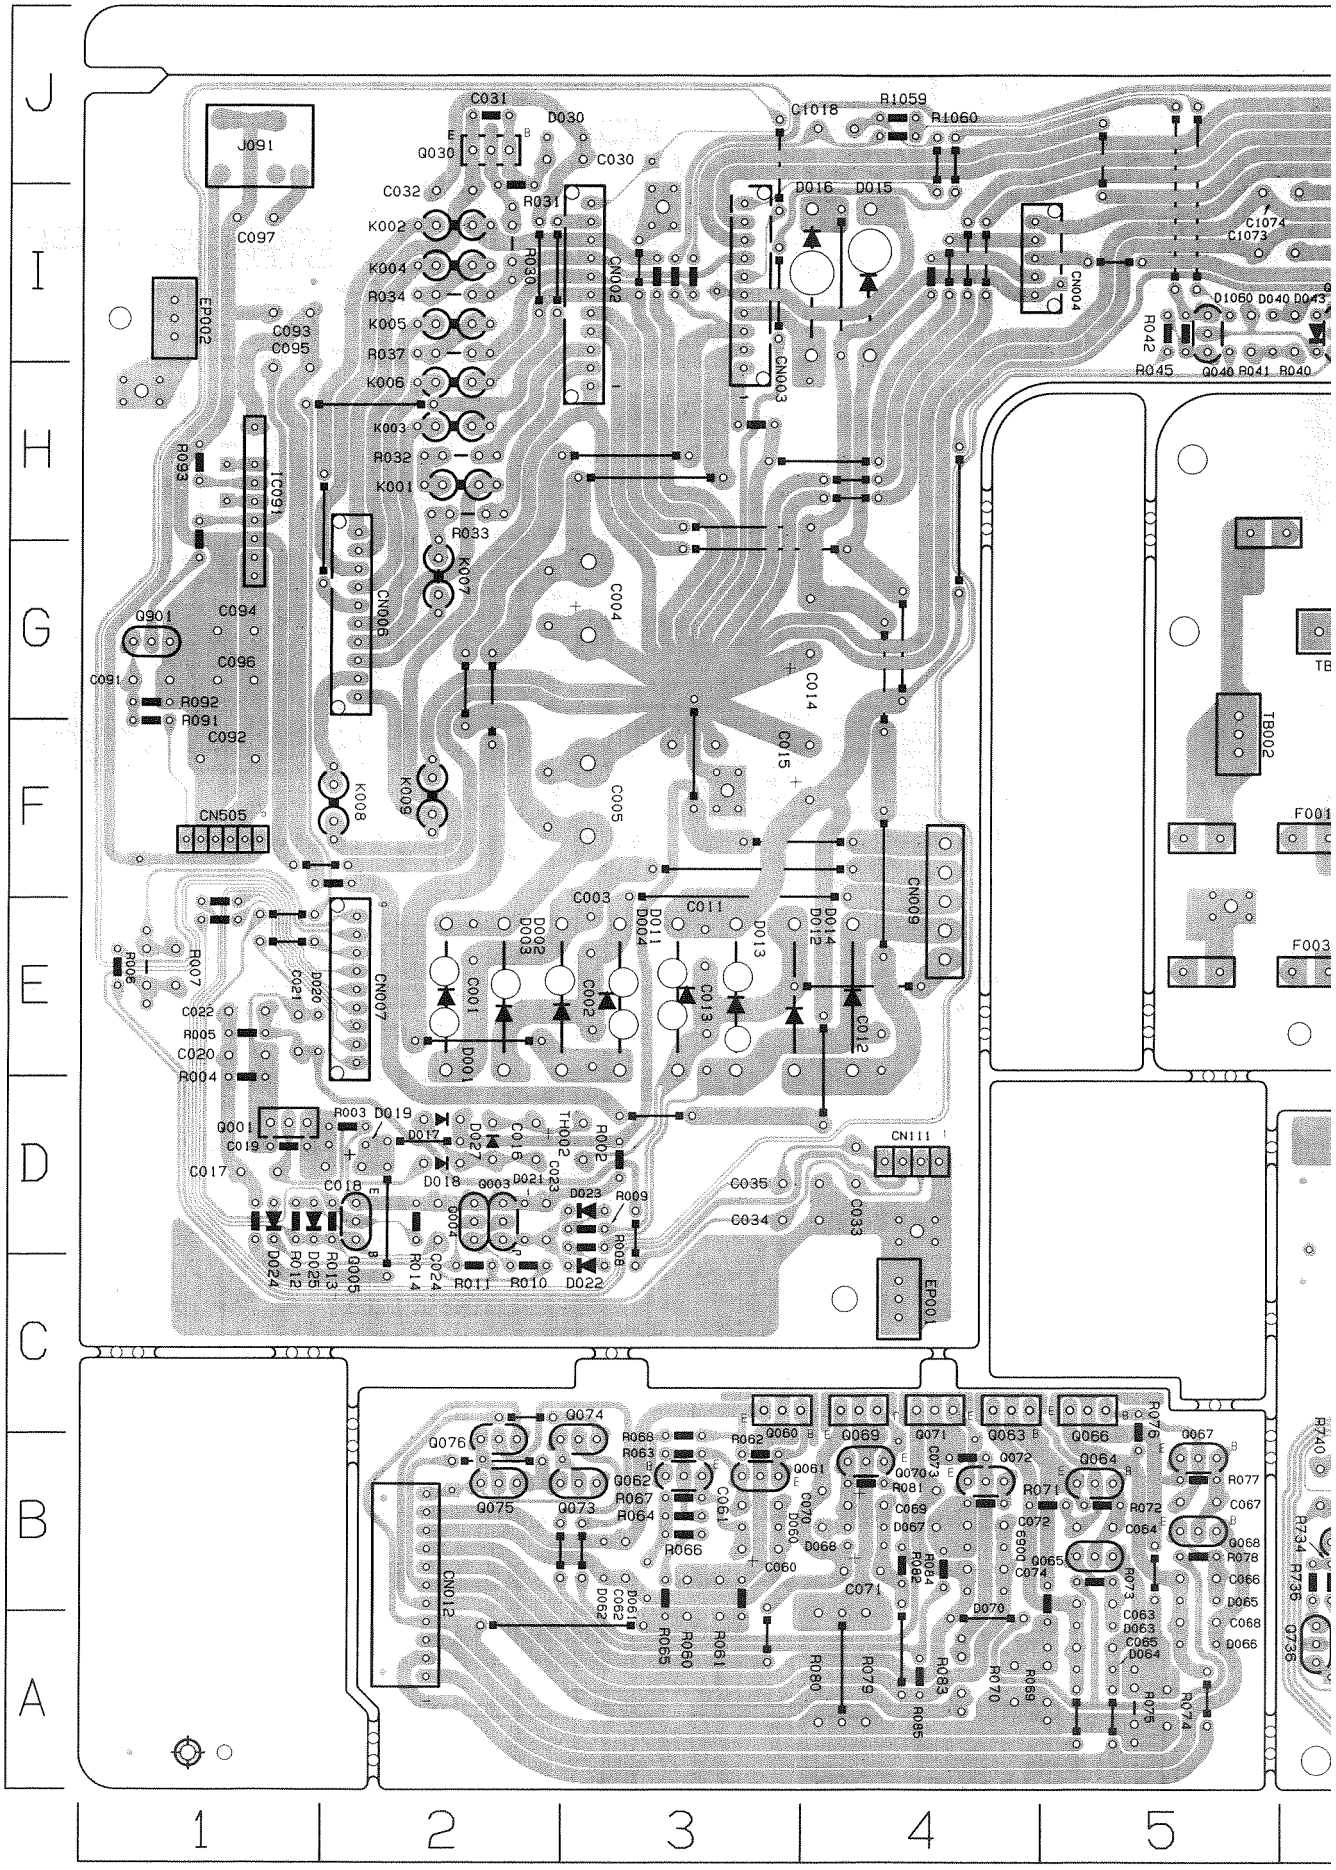

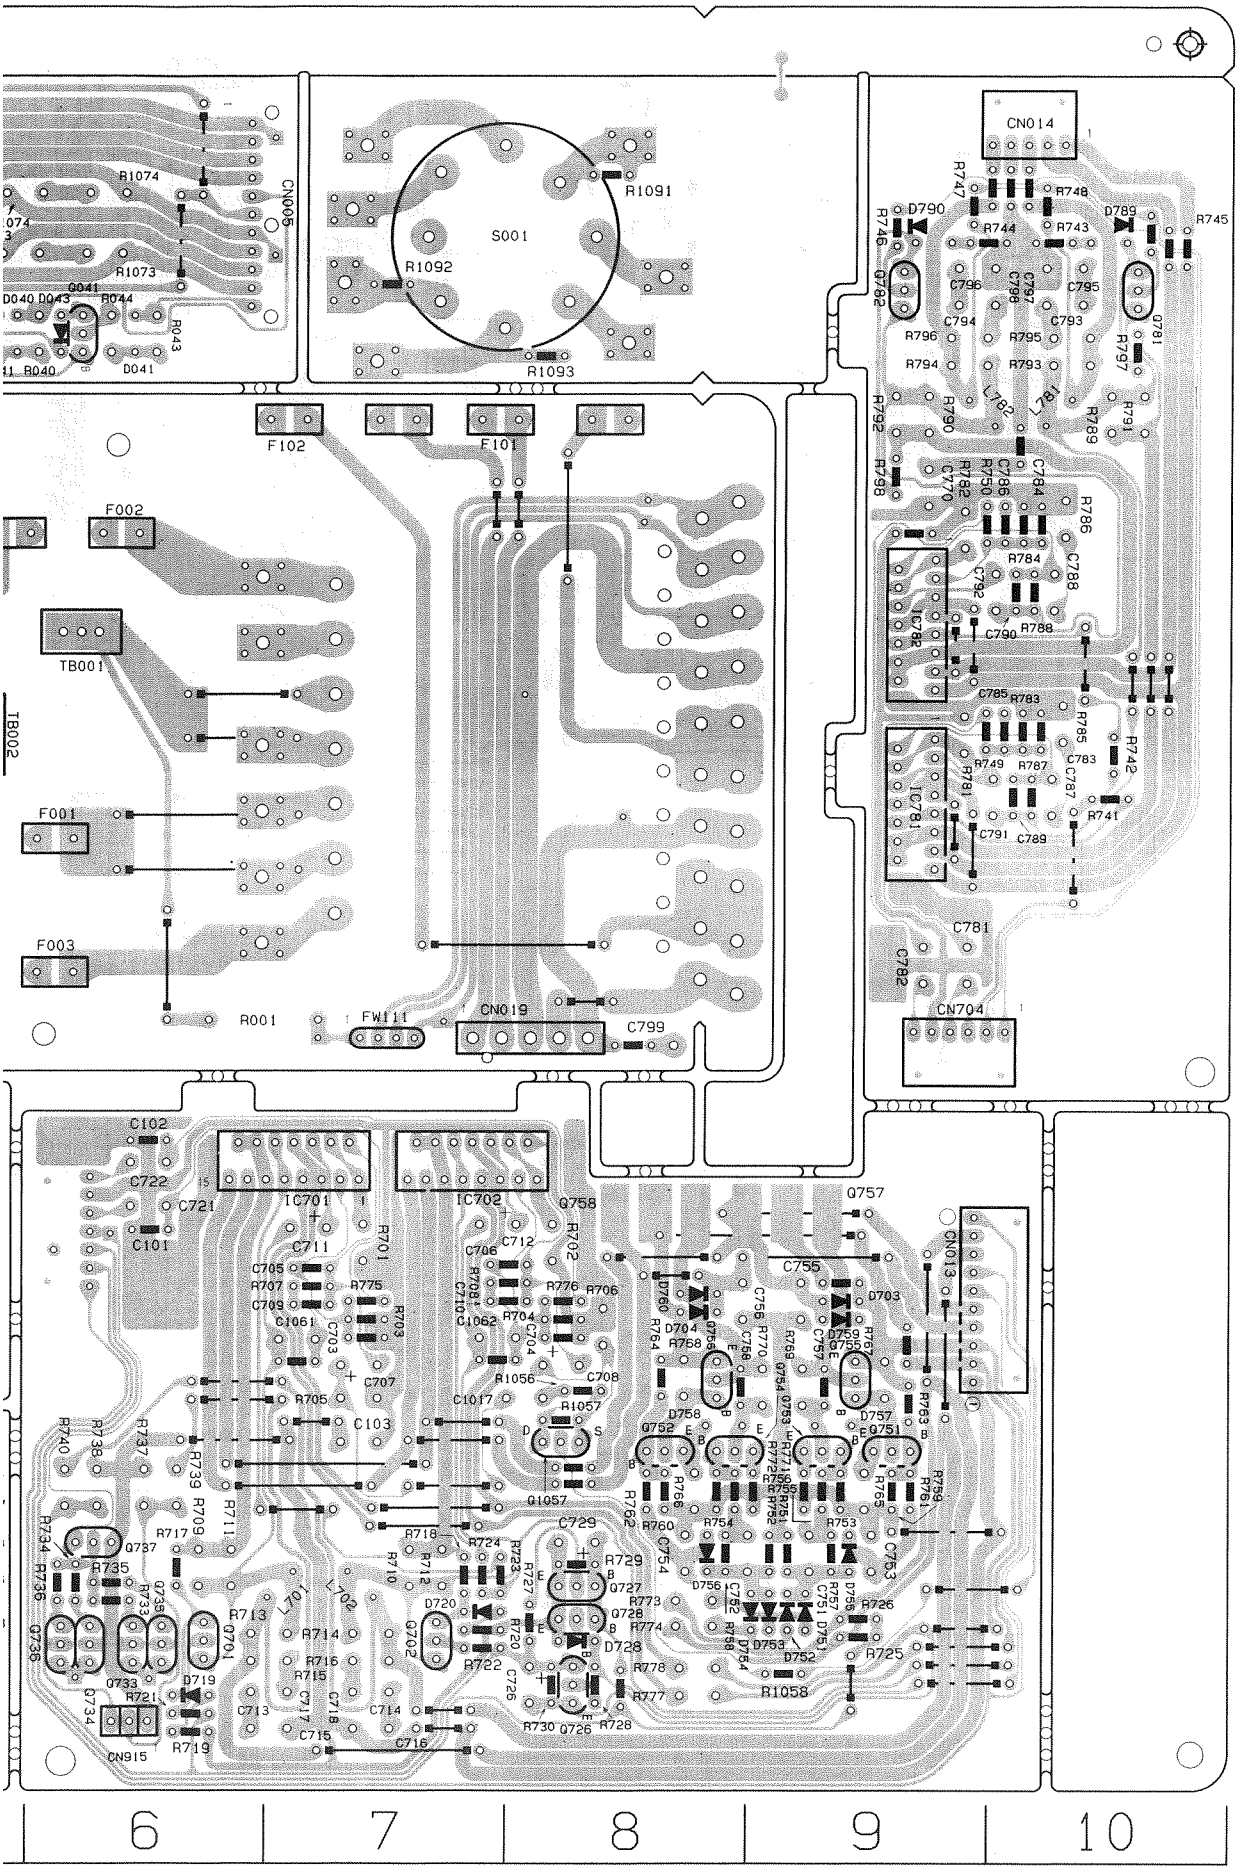
CN014
S001
R1091
R1092
R1093
R1074
R1073
CN005
F102
F101
F002
TB001
TB002
F001
F003
R001
FW111
CN019
C799
CN704
C781
C782
IC781
IC701
IC702
Q757
Q758
CN013
C102
C722
C721
C101
C711
C712
C755
D703
D704
D760
C756
C758
C770
R770
R764
R768
R759
R763
R755
R752
R754
R760
R762
R766
R756
R753
C754
C753
R726
R725
R1058
C729
R729
Q727
Q728
Q726
R730
R728
R778
R777
R773
R774
R722
R720
R727
R723
R724
R718
R712
R710
R714
R716
R715
R713
R717
R735
R736
R734
R737
R738
R739
R740
R709
R711
R705
R703
R775
R776
R706
R704
C1061
C1062
C1017
R1056
R1057
C708
C707
C705
C709
C710
R707
R708
C706
R701
R702
C703
C704
C103
C729
Q1057
D720
Q702
Q701
D719
R721
C726
C727
C728
C713
C714
C715
C716
C717
C718
CN915
R719
Q733
Q734
Q735
Q736
Q737
D790
D789
R747
R748
R744
R743
R745
R746
Q782
Q781
C796
C797
C798
C795
C794
C793
R796
R795
R794
R793
R797
R792
R790
R791
R789
C784
C786
R750
R782
C770
R798
R786
C788
R784
C792
C790
R788
C785
R783
R785
R742
R749
R787
C783
C787
R741
C791
C789
R761
R757
R758
R751
R772
R771
R775
R769
R765
R767
R1057
R1058
D752
D753
D754
D756
D757
D758
C752
C751
C757
C759
C760
C761
C762
C763
C764
C765
C766
C767
C768
C769
C771
C772
C773
C774
C775
C776
C777
C778
C779
C780
R780
R779
R781
R783
R784
R785
R786
R787
R788
R789
R790
R791
R792
R793
R794
R795
R796
R797
R798
R799
R800
R801
R802
R803
R804
R805
R806
R807
R808
R809
R810
R811
R812
R813
R814
R815
R816
R817
R818
R819
R820
R821
R822

INPUT P.C.BORD(ENC-139)

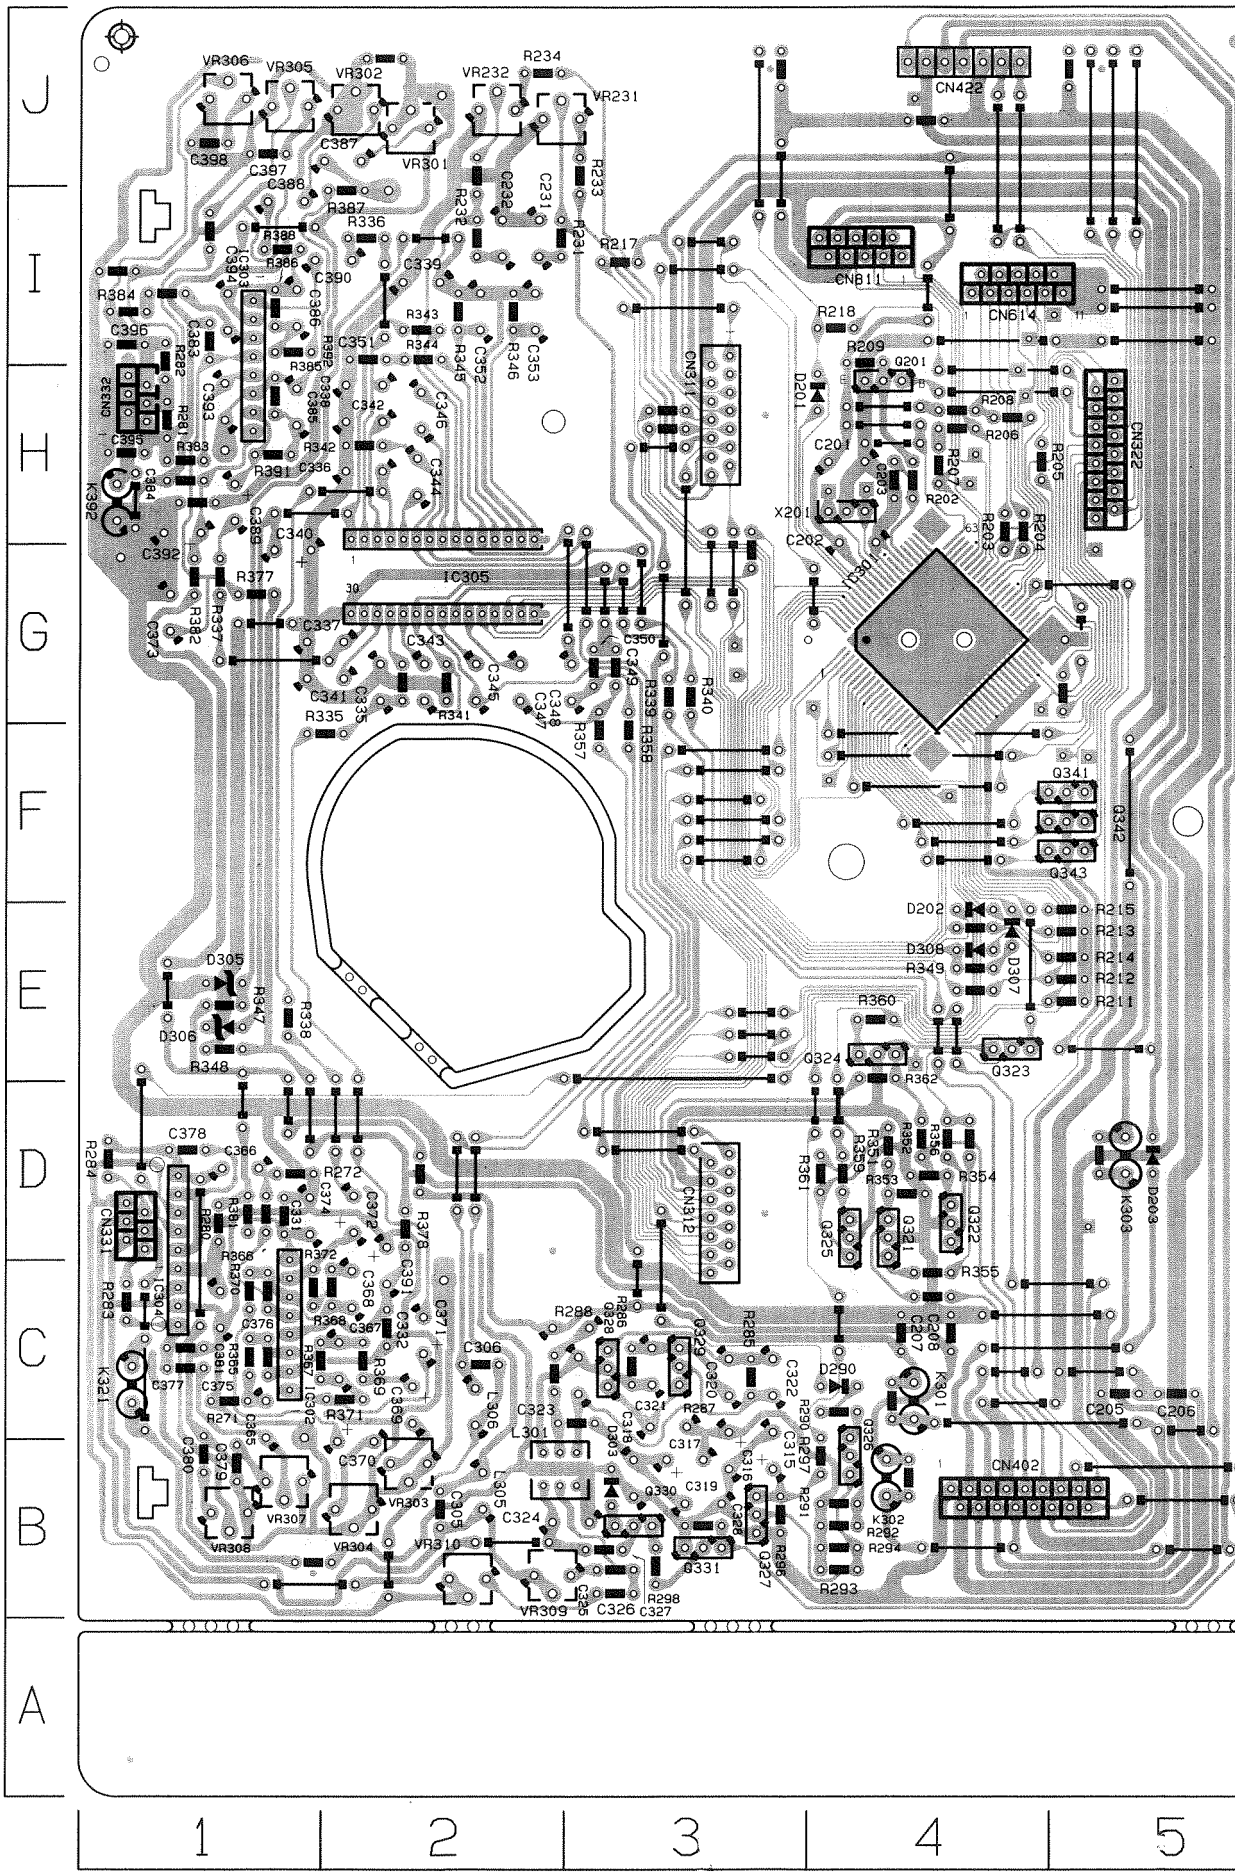

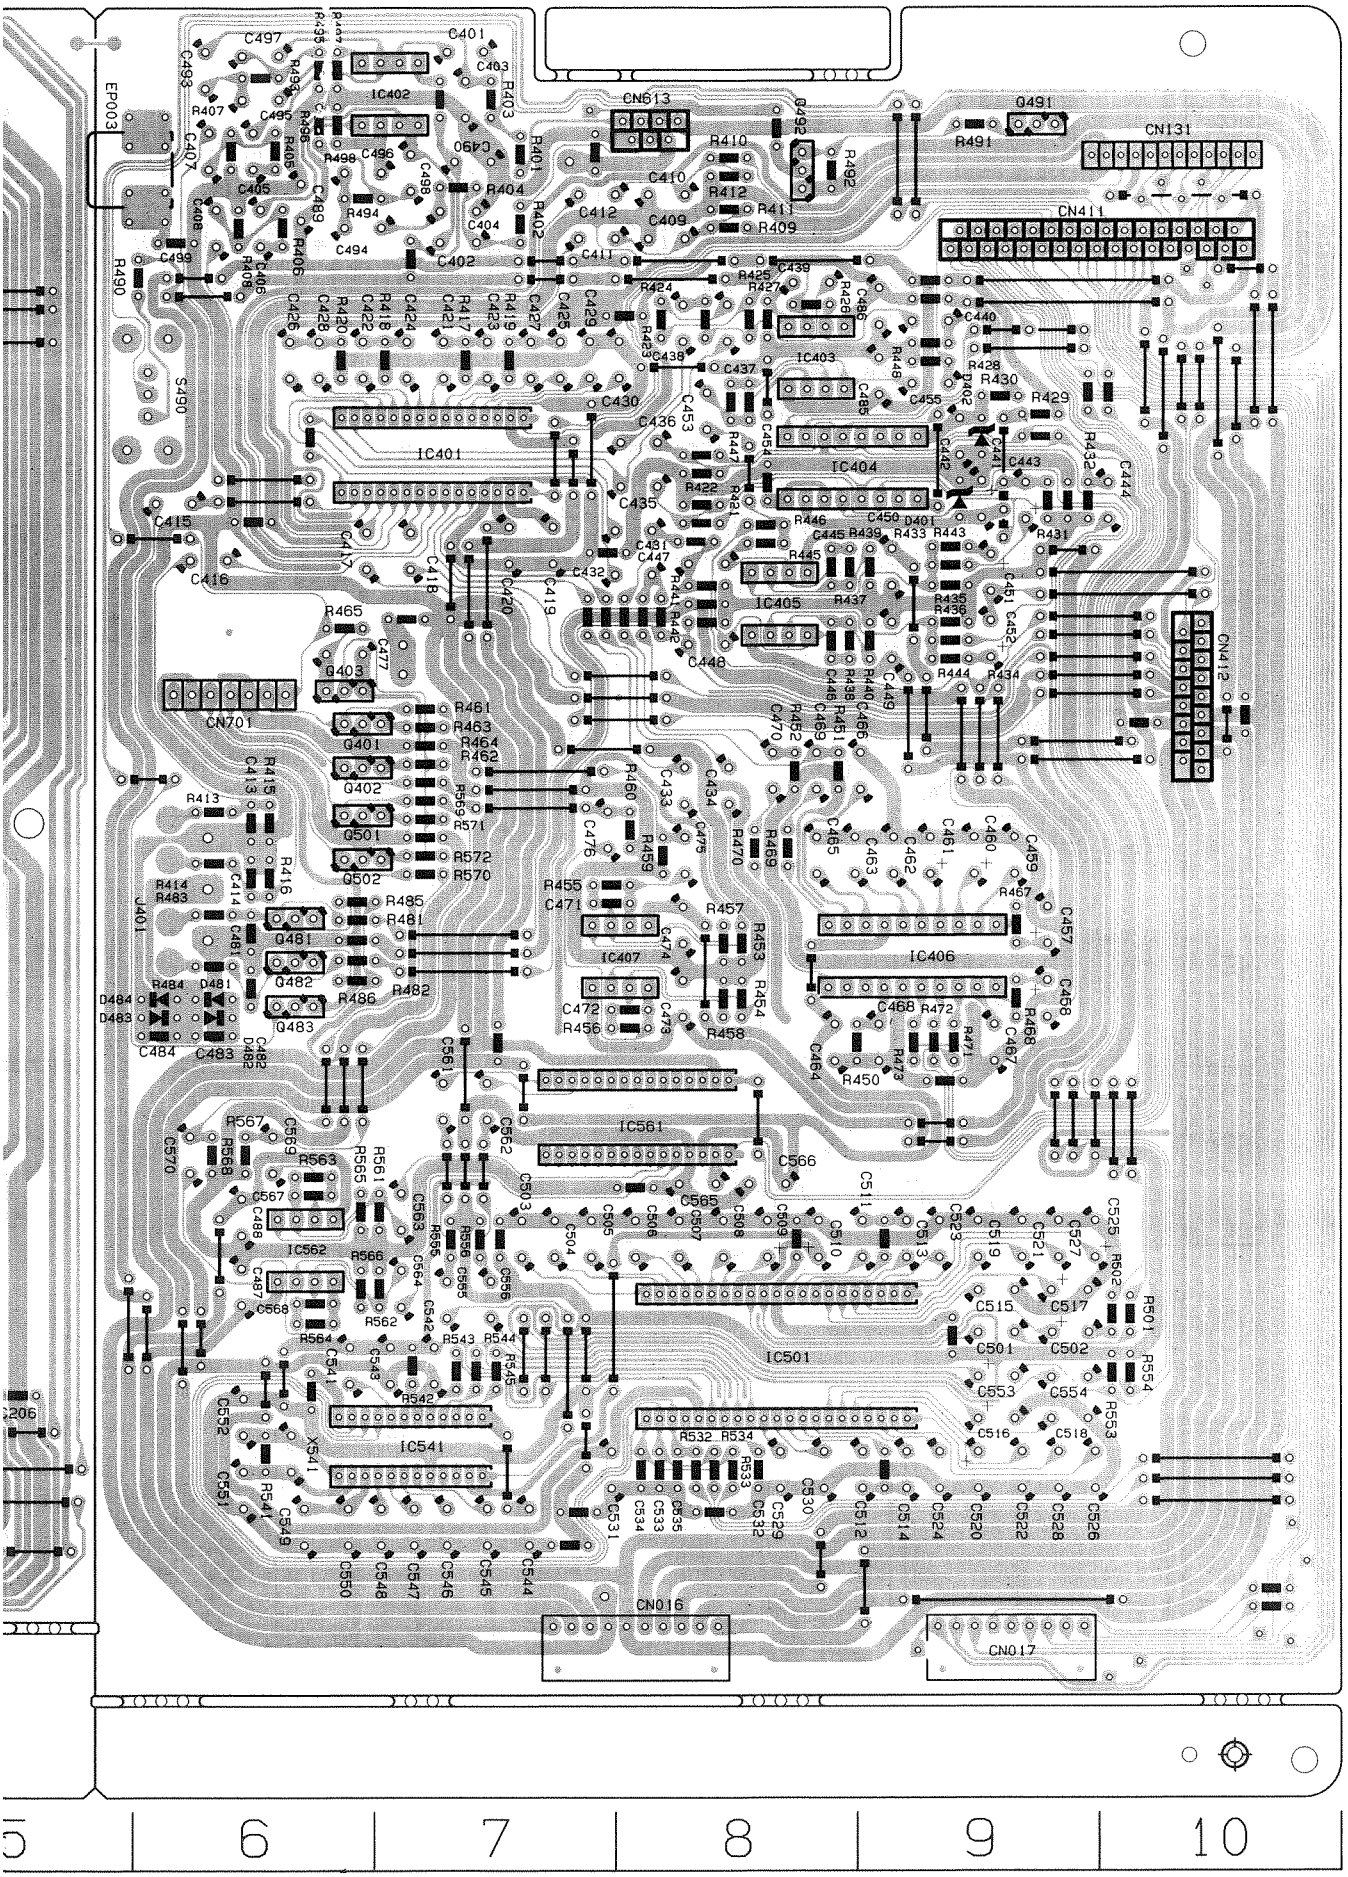
IC401
IC402
IC403
IC404
IC405
IC406
IC407
IC501
IC541
IC561
IC562
CN131
CN411
CN412
CN613
CN701
CN016
CN017
EP003
S490
J401
Q401
Q402
Q403
Q481
Q482
Q483
Q491
Q501
Q502
D401
D481
D482
D483
D484
X541
5
6
7
8
9
10

FRONT P.C.BORD(ENB-255)

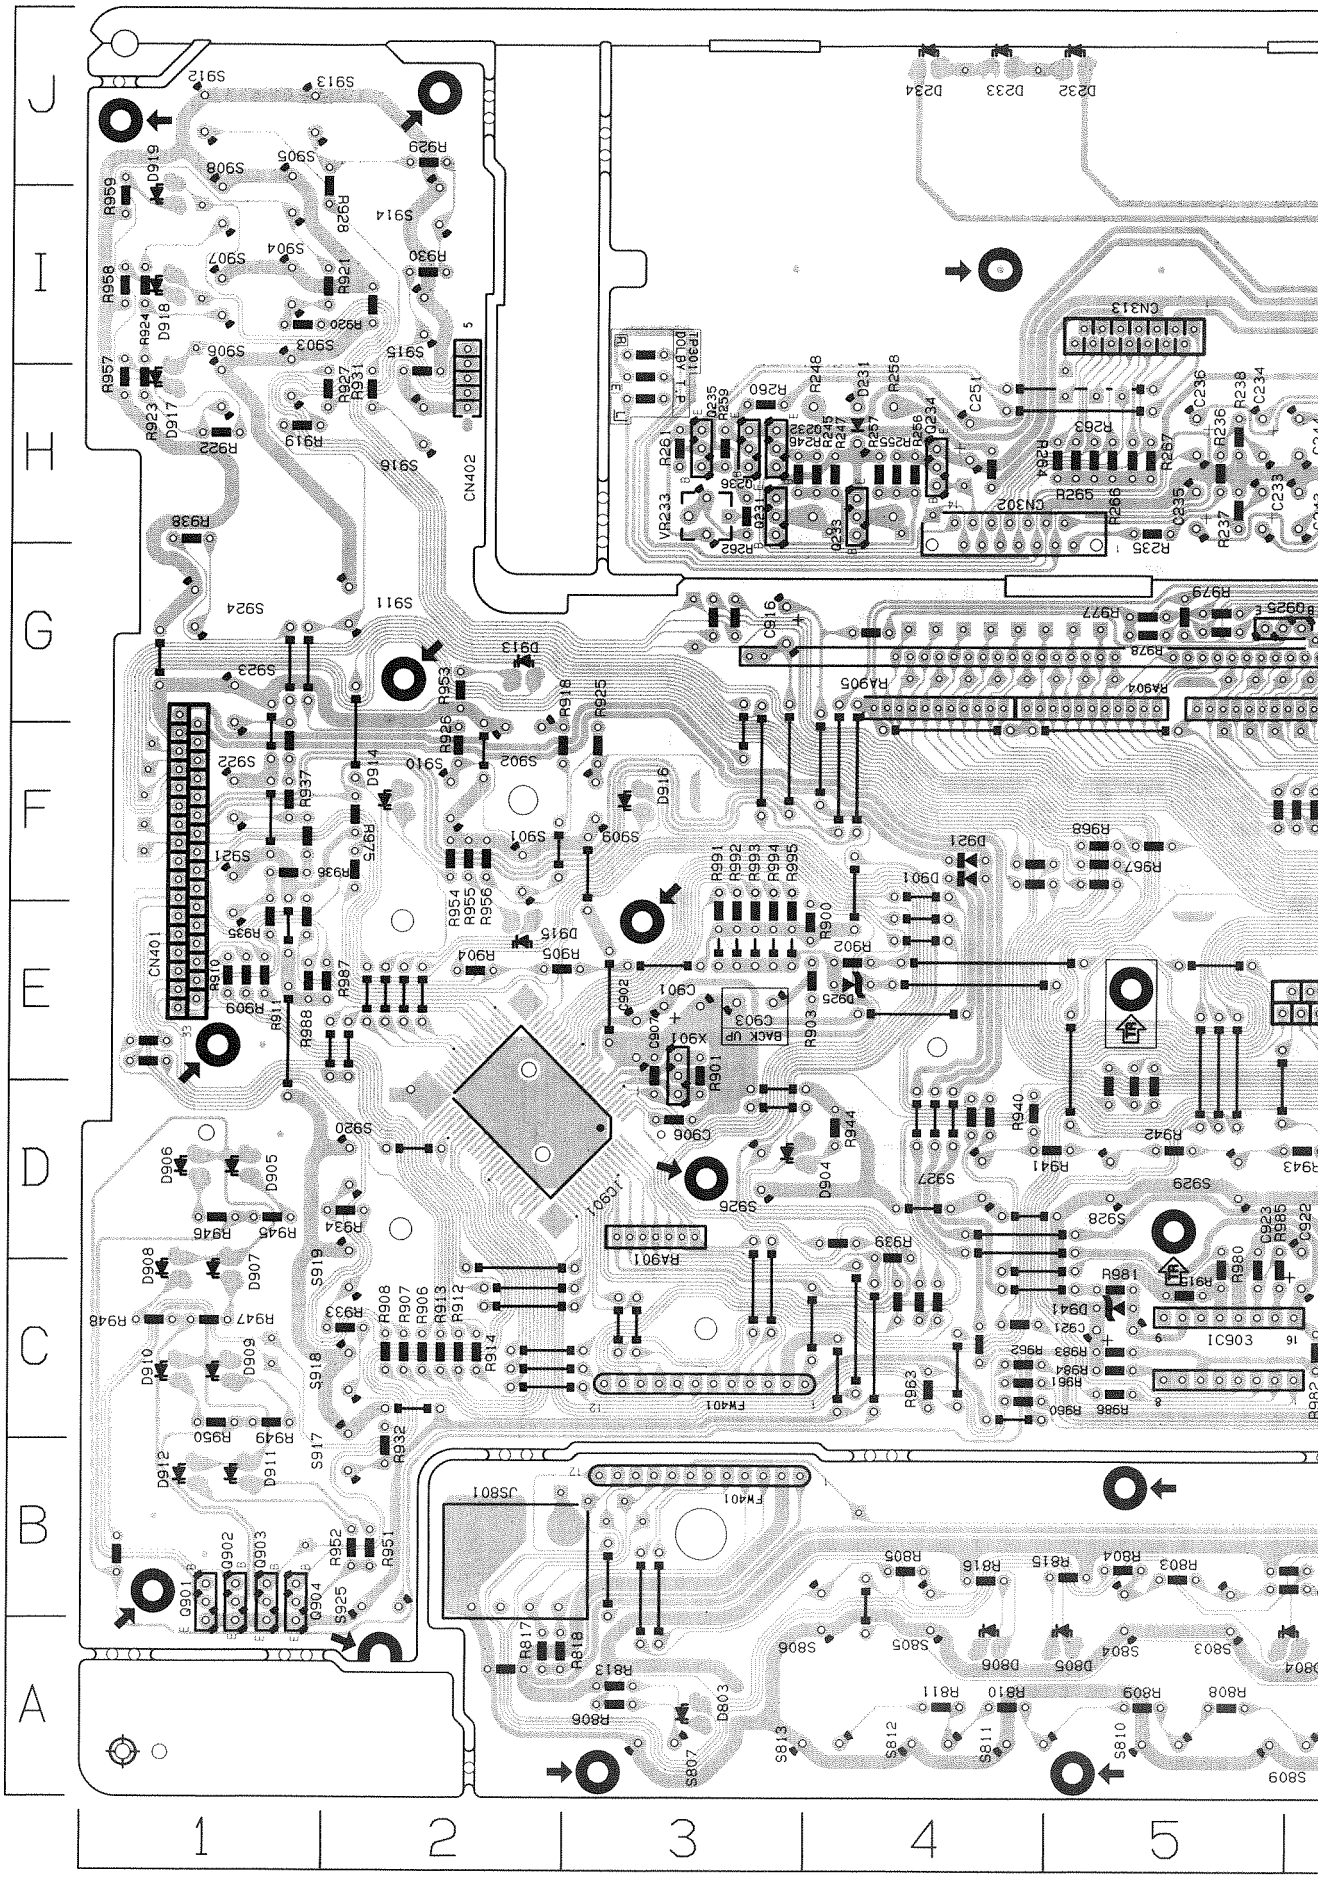

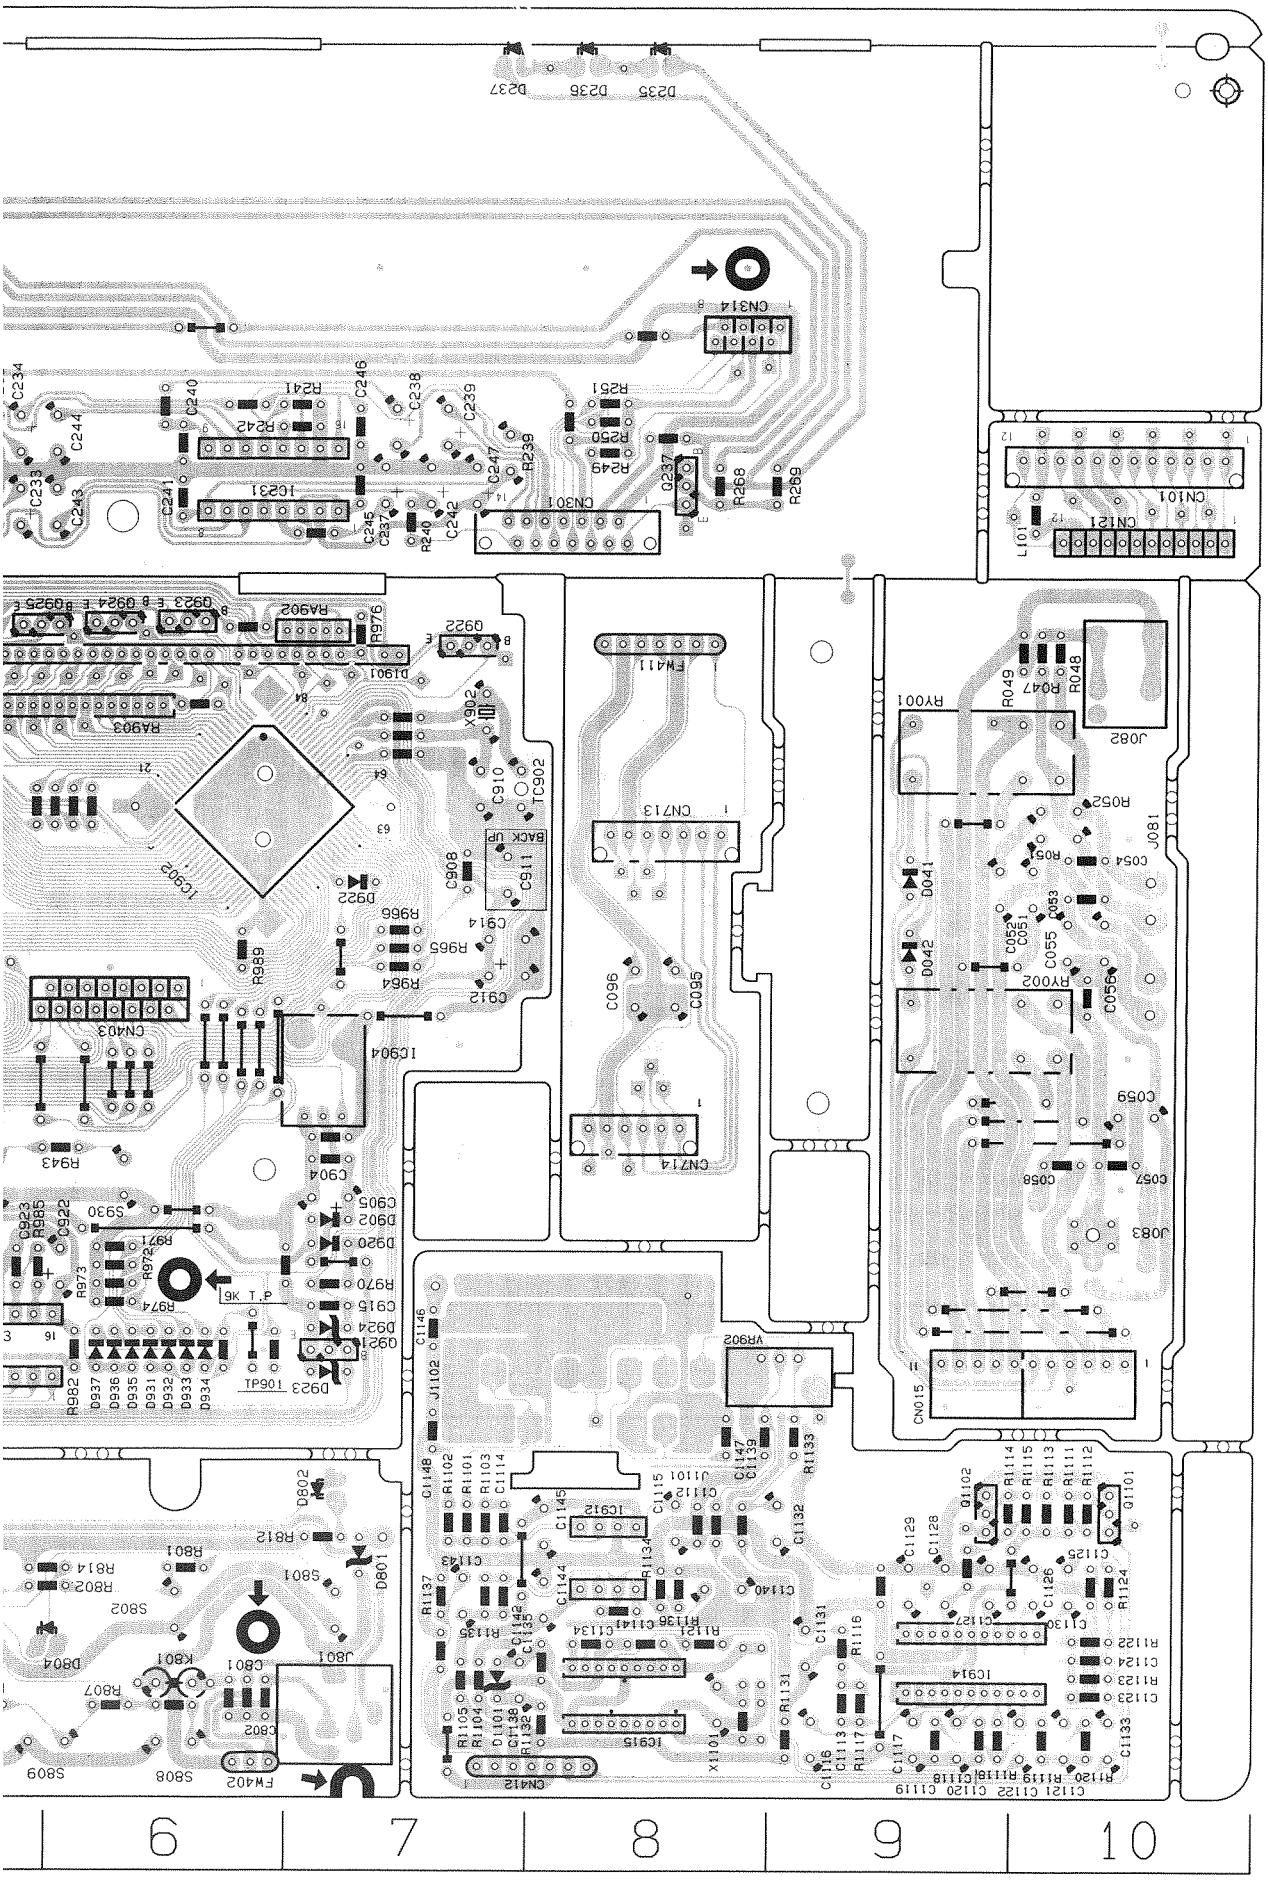
6
7
8
9
10

TUNER P.C.BORD(ENA-178)

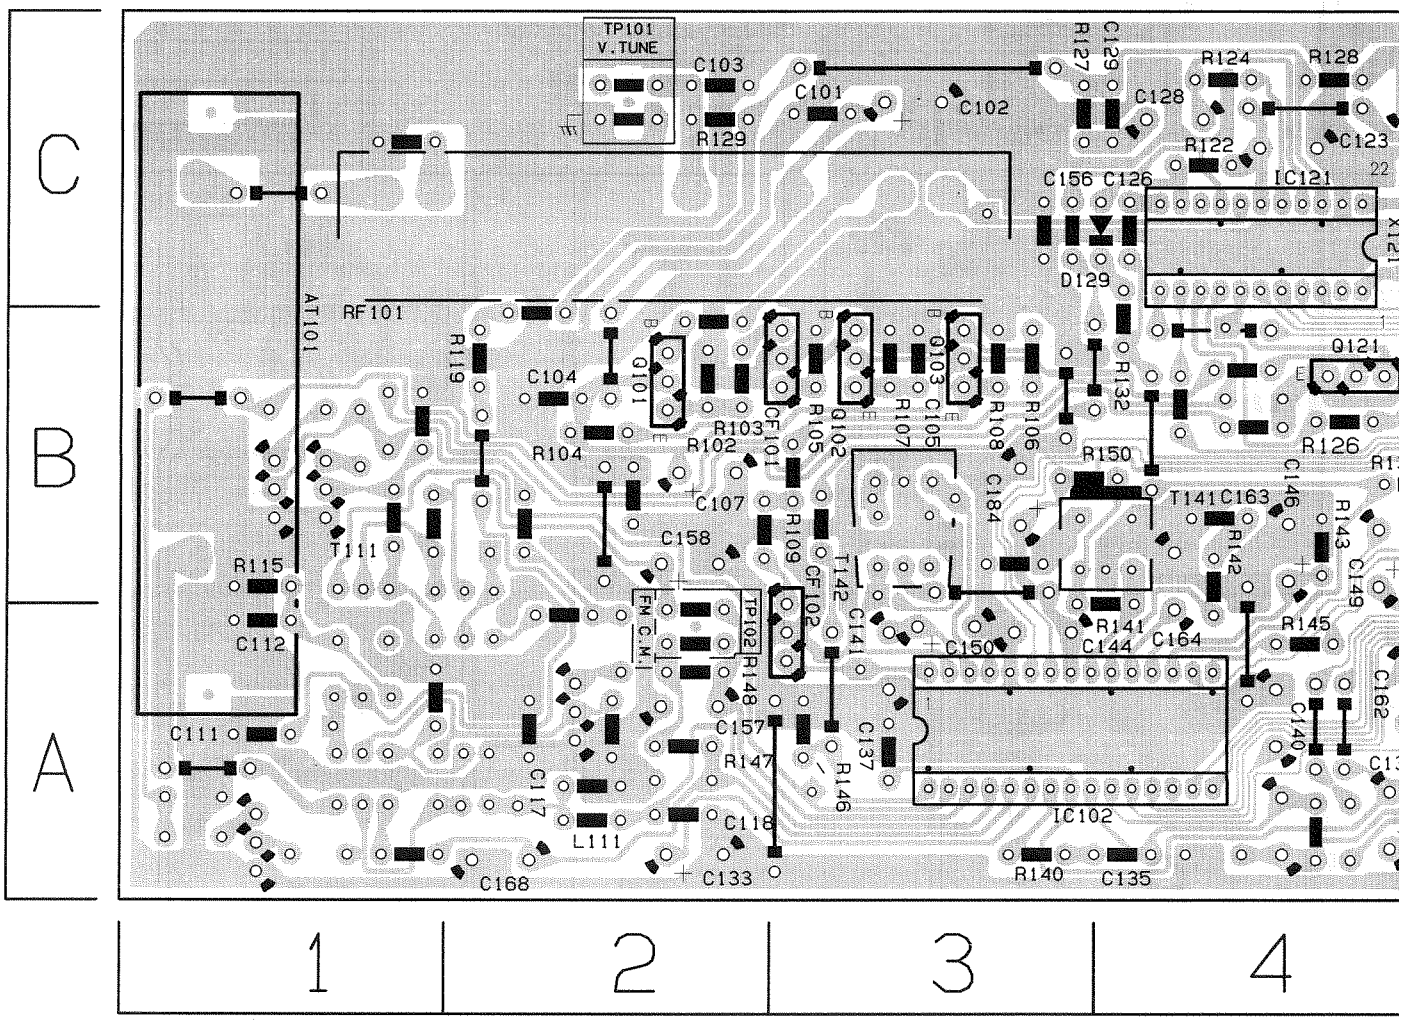

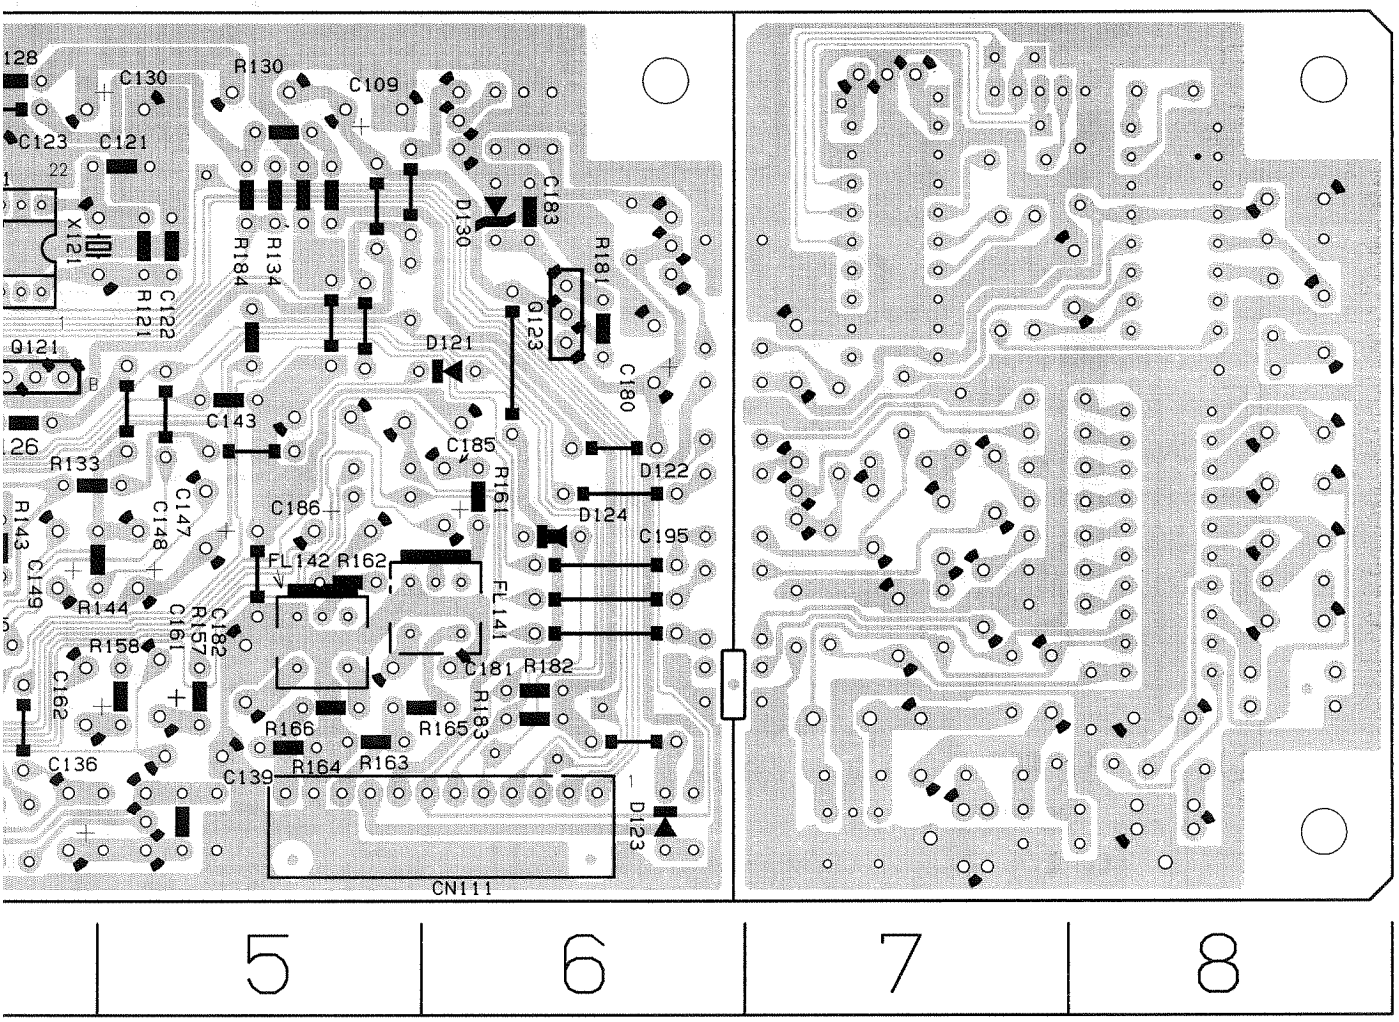
128
C130
R130
C109
C123
C121
22
X121
R184
R134
D130
C183
R181
Q123
R121
C122
Q121
B
D121
C180
C143
C185
R161
D122
26
R133
C147
C148
C186
D124
C195
R143
C149
FL142
R162
FL141
R144
C161
R157
C182
C181
R182
R158
C162
R183
R166
R165
R164
R163
C136
C139
D123
CN111
5
6
7
8

CD P.C.BORD(ENN-488)

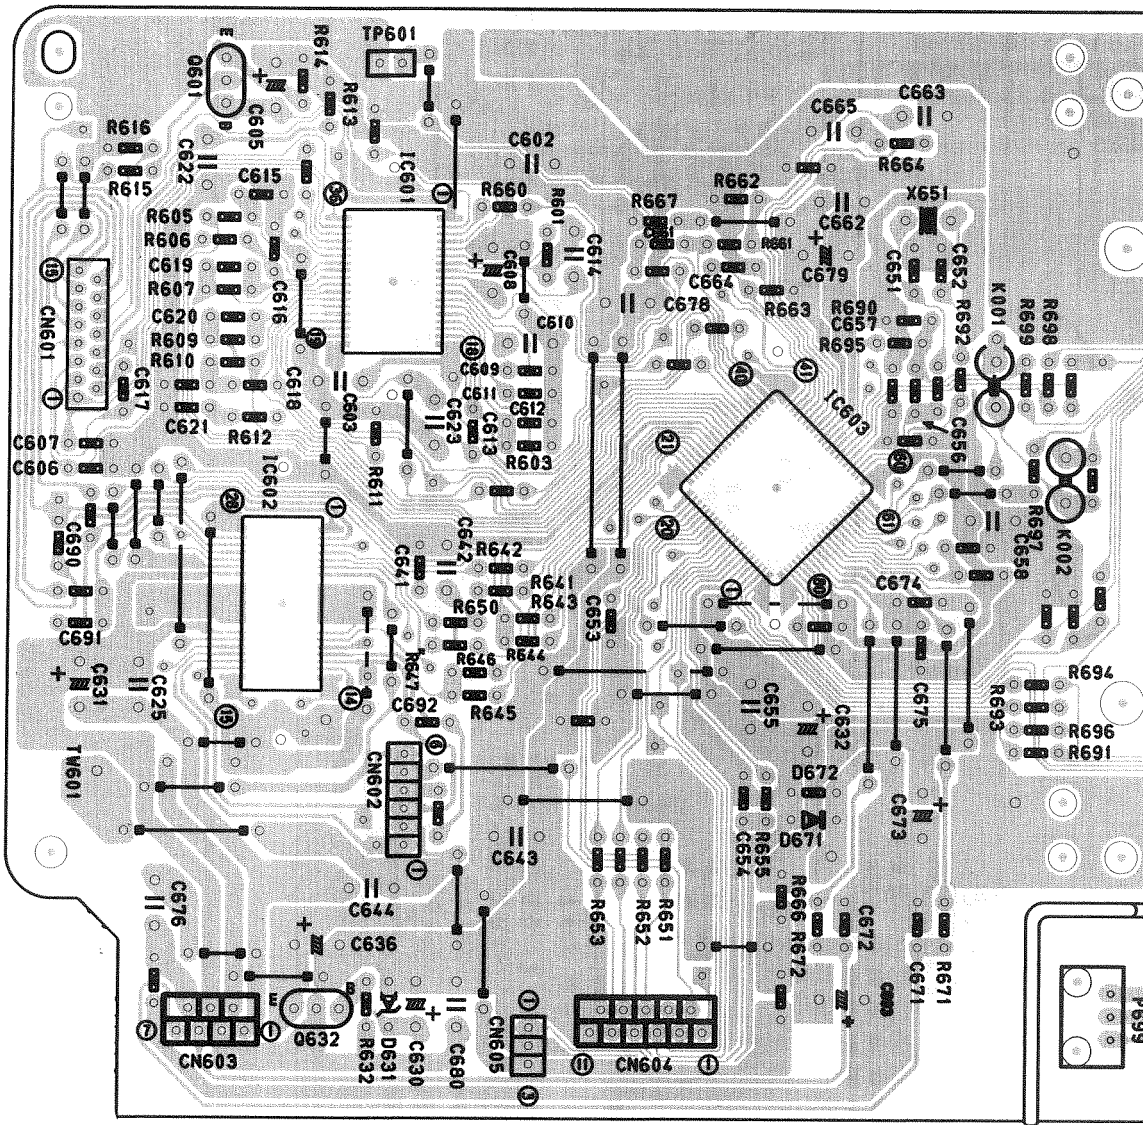

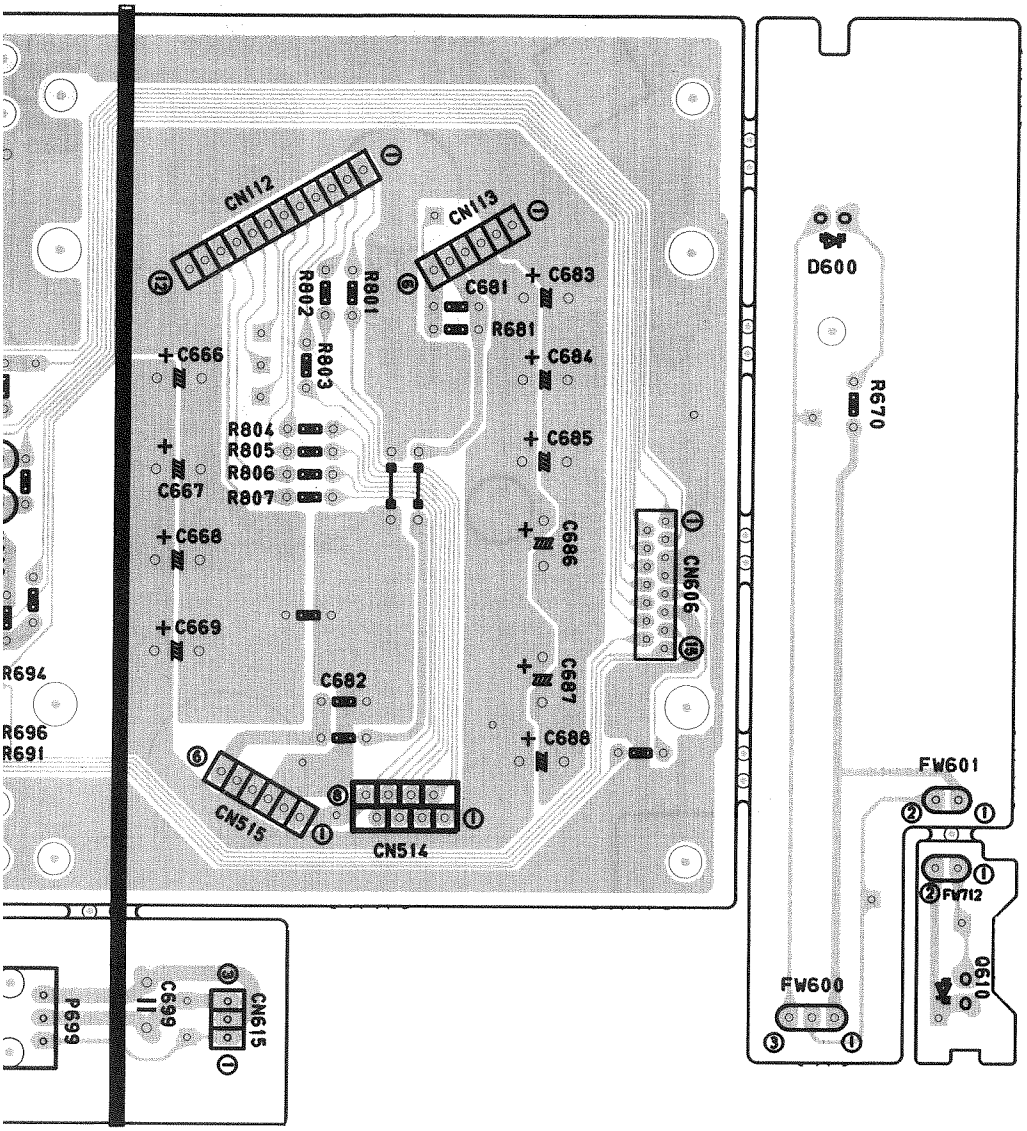
CN112
CN113
R801
R802
R803
C681
C683
R681
C684
C666
R804
R805
R806
R807
C685
C667
C686
C668
C669
C682
C687
C688
CN606
CN515
CN514
R694
R696
R691
P699
C699
CN615
D600
R670
FW601
FW712
FW600
Q610

CD CANGER CONTROL P.C.BORD

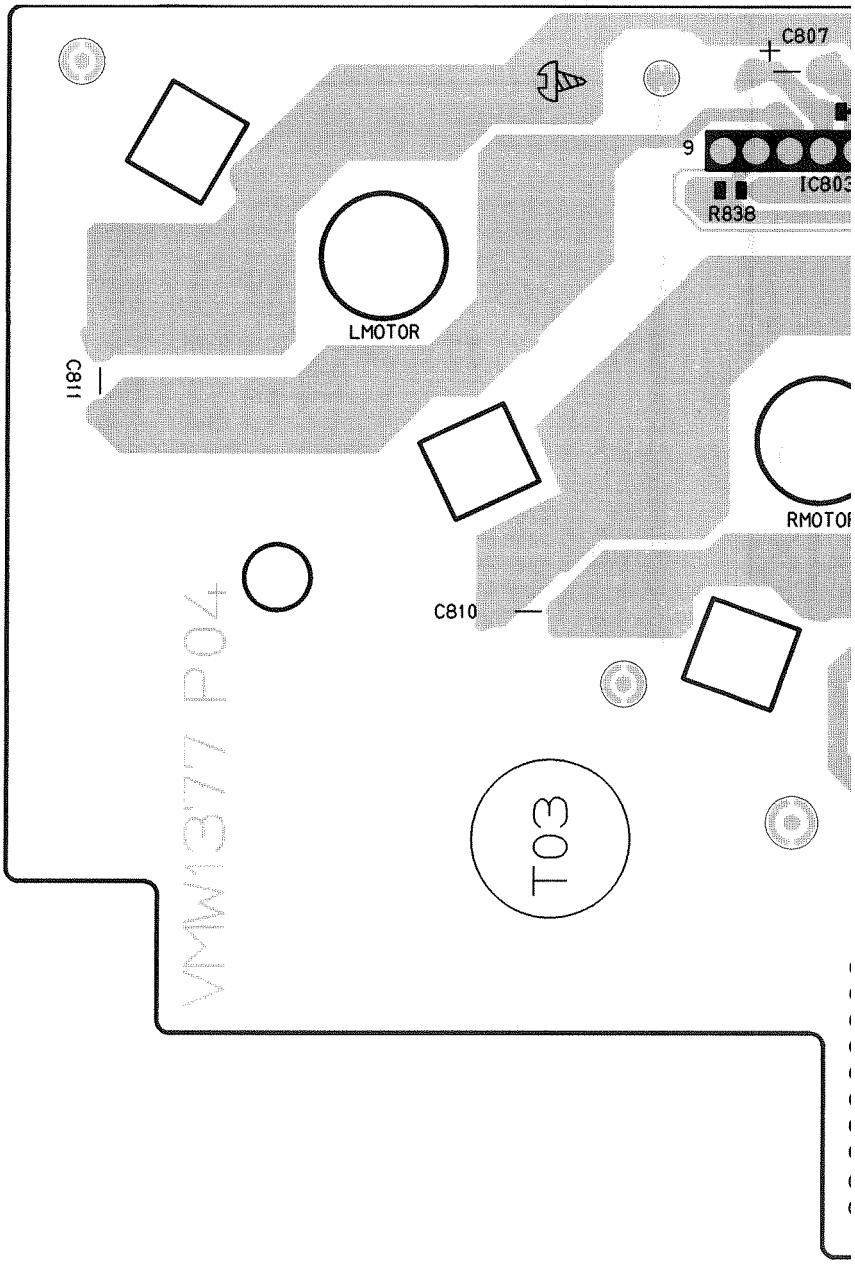

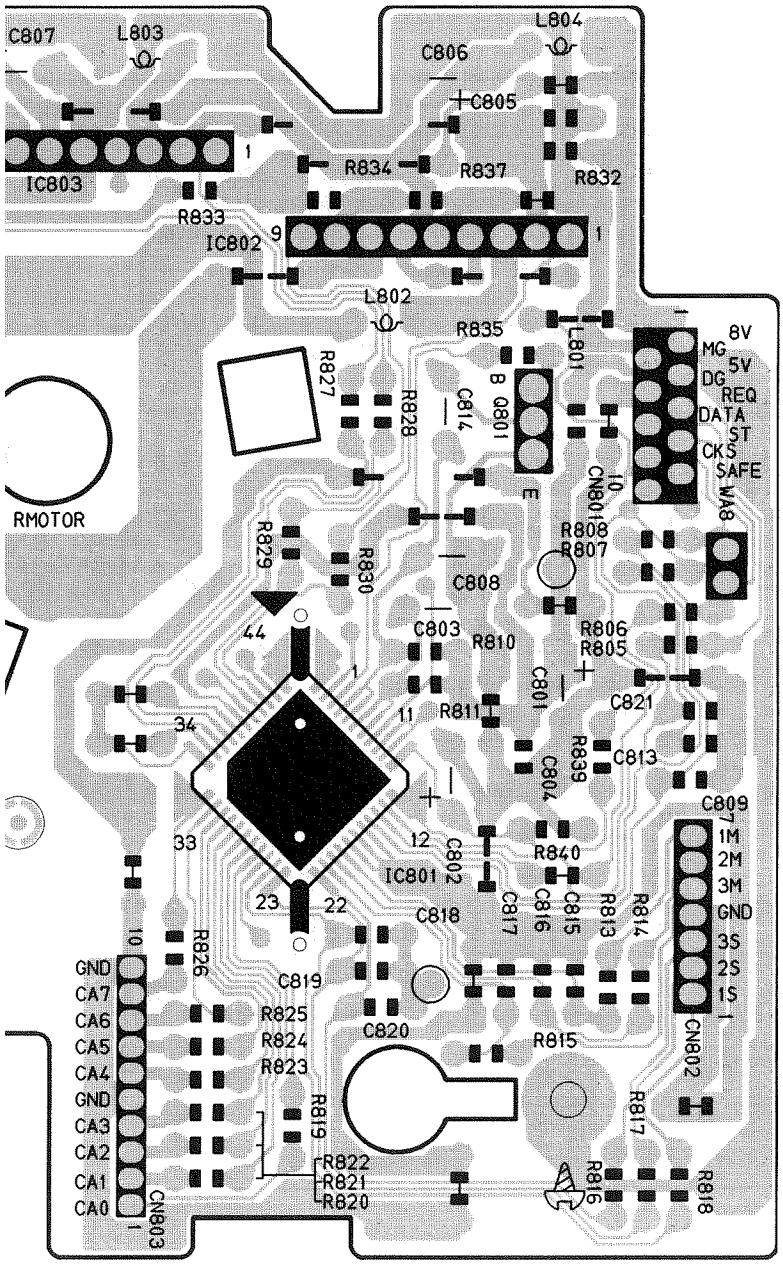
C807
L803
C806
L804
C805
IC803
R834
R837
R832
R833
IC802
L802
R835
L801
8V
MG
5V
DG
REQ
DATA
ST
CKS
SAFE
WA8
R827
R828
C814
B Q801
E
CN8018
RMOTOR
R829
R830
R808
R807
C808
C803
R810
R806
R805
C801
C821
R811
C813
R839
C804
C809
1M
2M
3M
GND
3S
2S
1S
CN802
C802
IC801
R840
C818
C817
C816
C815
R813
R814
R826
C819
C820
R825
R824
R823
R815
R817
R819
R822
R821
R820
R816
R818
GND
CA7
CA6
CA5
CA4
GND
CA3
CA2
CA1
CA0
CN803

PARTS LIST

* All printed circuit boards and its assemblies are not available as service parts.

The Marks for Designated Areas
J ---- the U.S.A.
C ---- Canada
No marks indicates all areas.

- Contents -

General Exploded View and Parts List ---------- 3-2
Changer Mechanism Ass'y and Parts List---------- 3-5
■ Grease Point ---------- 3-5
CD Mechanism Ass'y and Parts List ---------- 3-7
■ Grease Point ---------- 3-7
Chassette Mechanism Ass'y and Parts List ---------- 3-8
■ Grease Point ---------- 3-8
Electrical Parts List ---------- 3-10
(ENH-308M) ---------- 3-10
(ENB-255M) ---------- 3-13
(ENC-139) ---------- 3-16
(ENN-488M) ---------- 3-20
(ENA-178AM) ---------- 3-21
(Changer Control P.C.Board) ---------- 3-22
Accessories List ---------- 3-23
Packing Materials and Part Numbers ---------- Back Page

General Exploded View and Parts List

Block No. M1MM

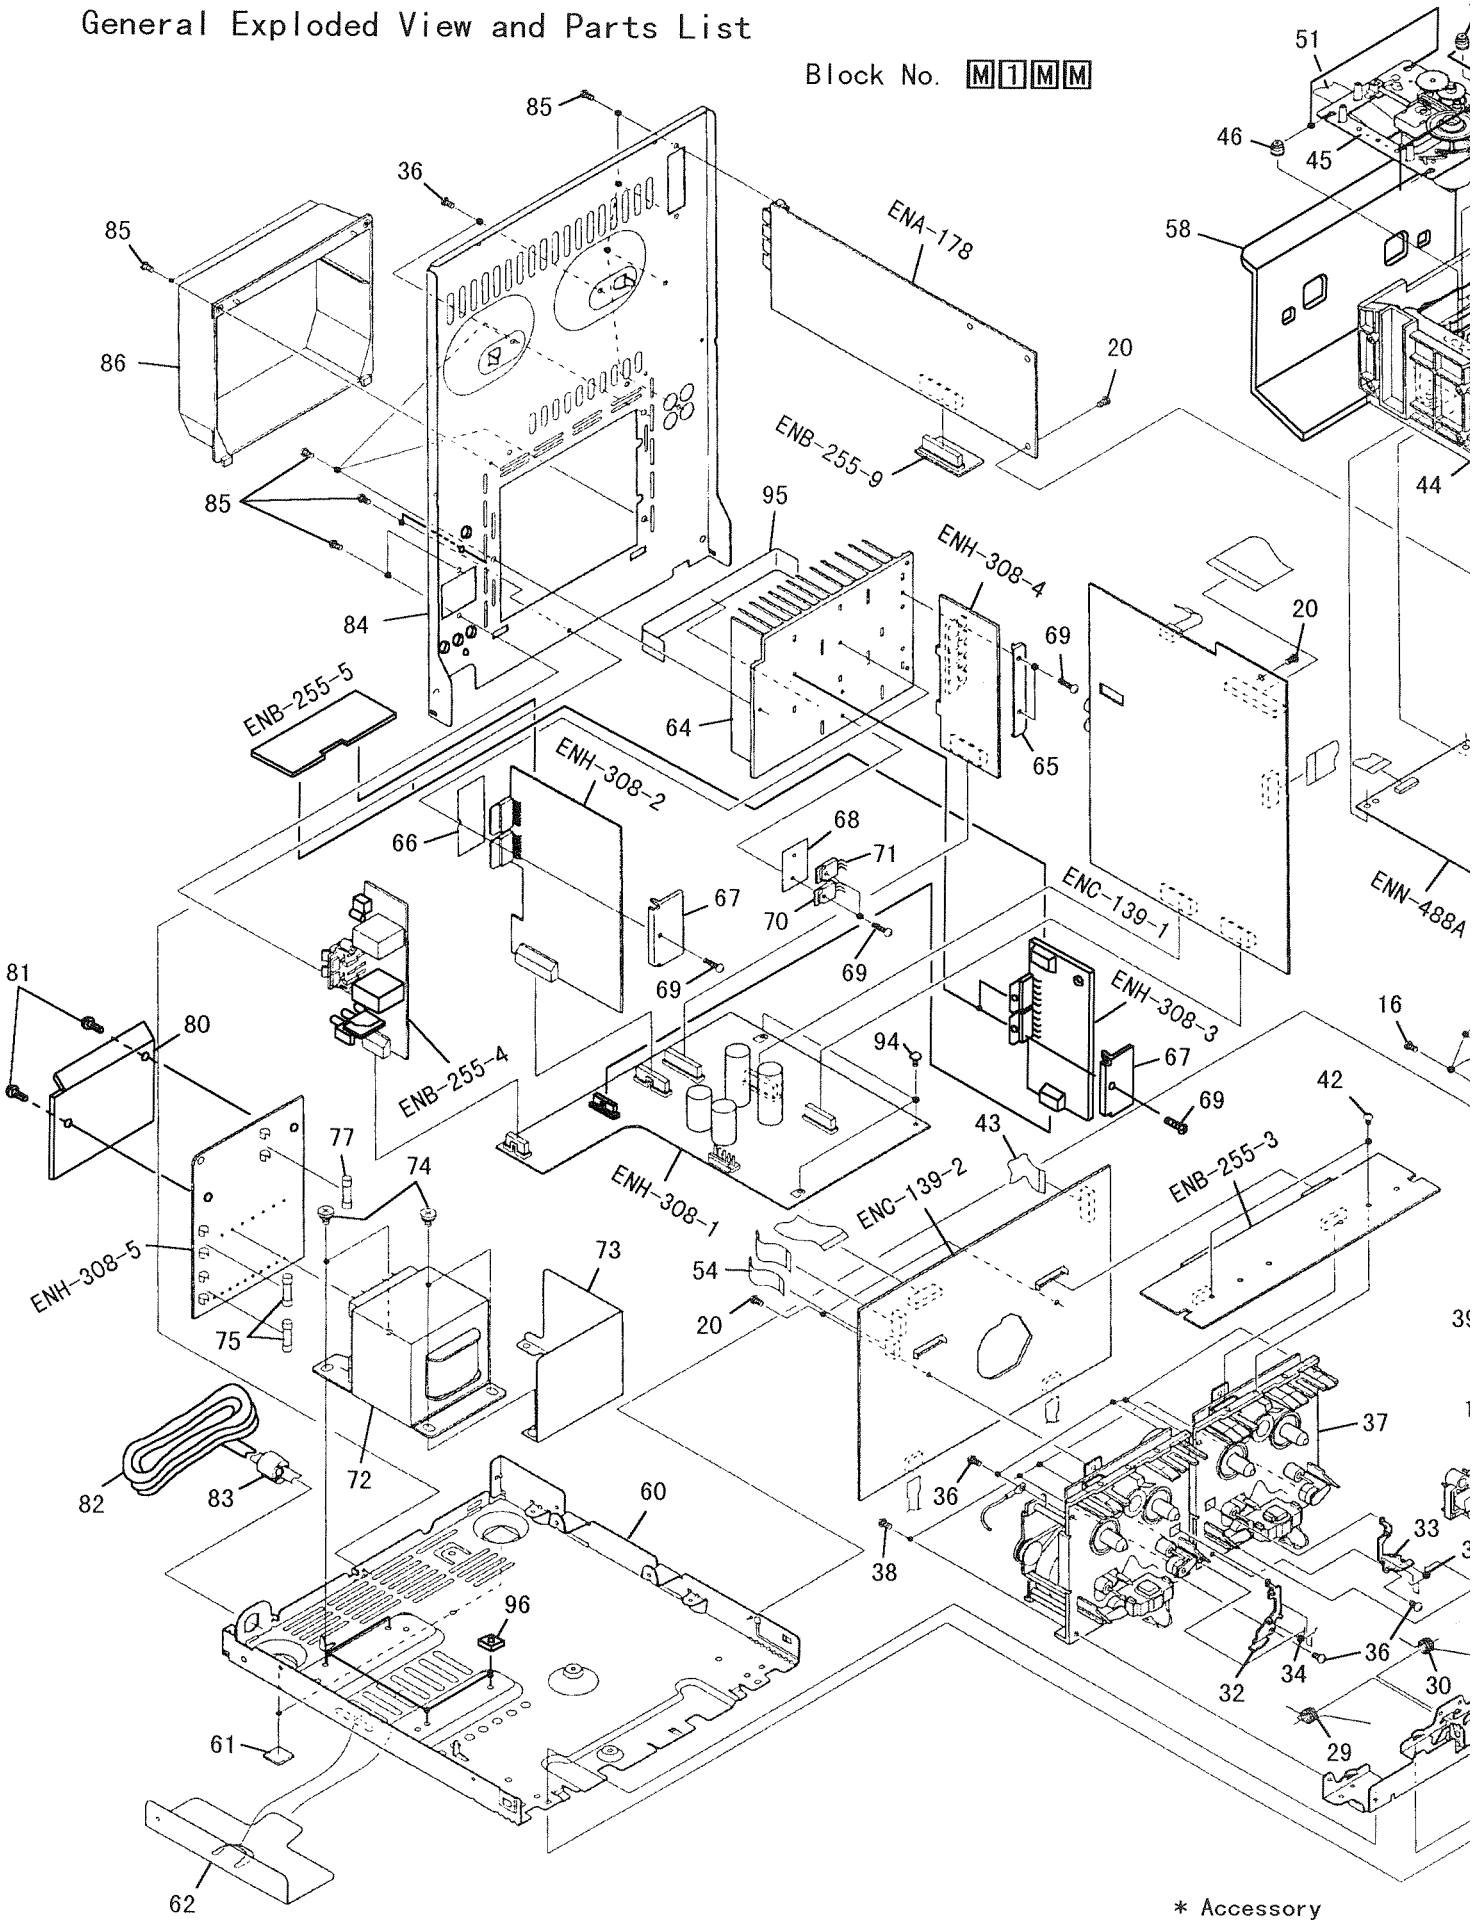

* Accessory

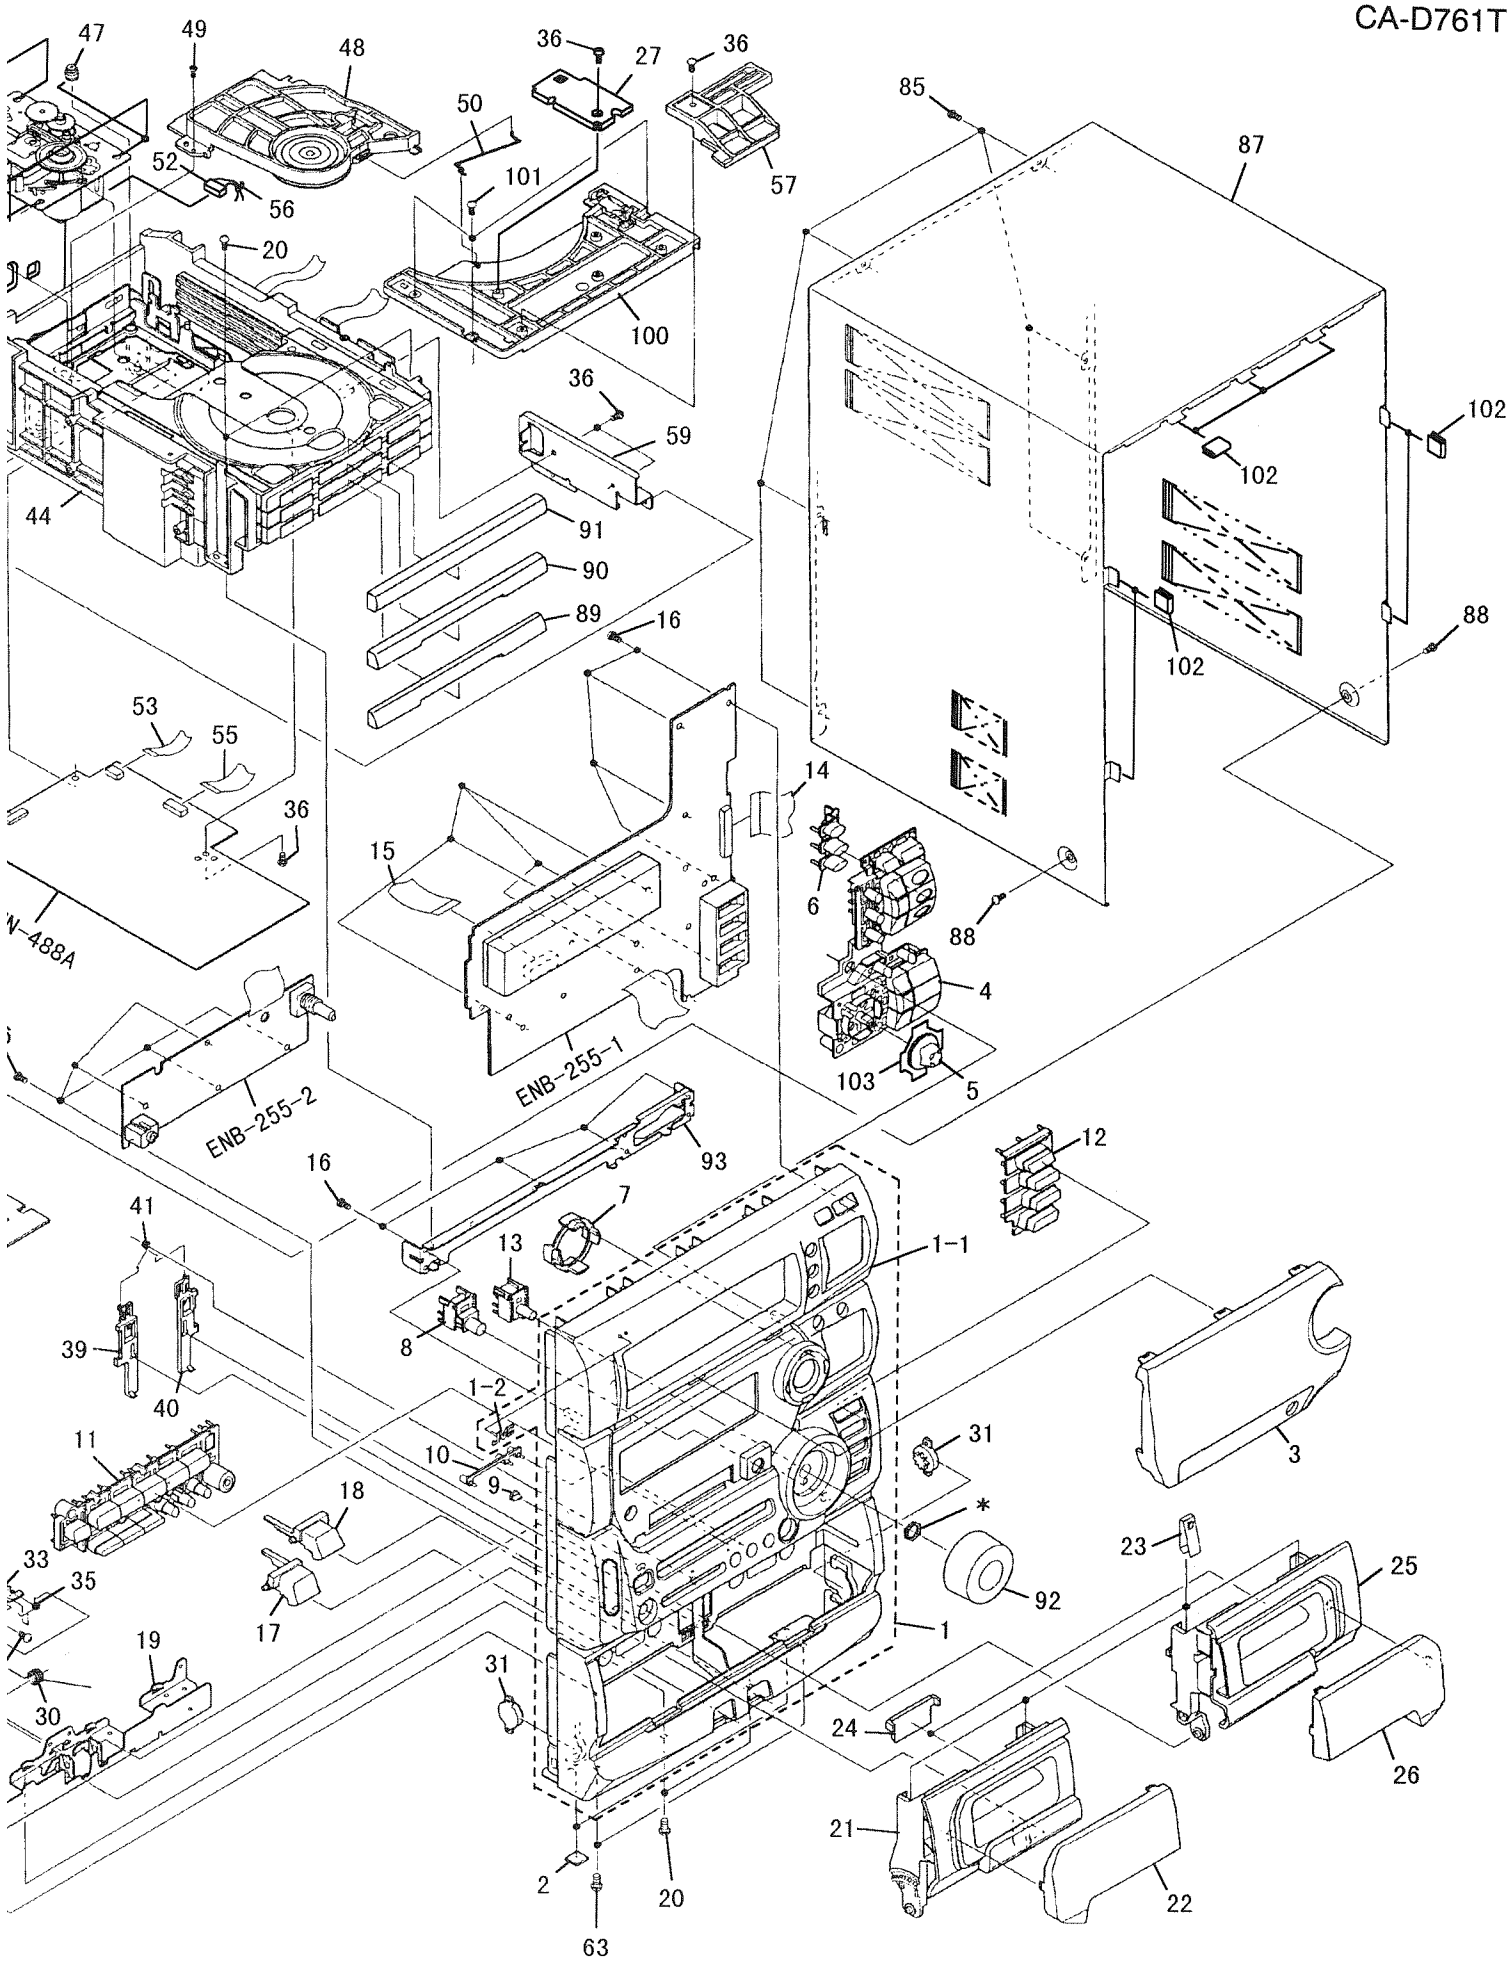
47
49
48
36
27
36
85
87
50
101
52
56
57
20
100
36
59
102
102
44
91
90
89
16
102
88
53
55
36
14
15
6
88
N-488A
4
ENB-255-1
103
5
ENB-255-2
93
16
12
7
41
13
1-1
8
39
40
1-2
11
10
9
31
*
3
18
92
33
35
17
23
25
19
1
30
31
24
26
21
22
2
20
63

■ Parts List

Block No. M1MM

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	EFP-CAD761TJ(S)	FRONT PANEL ASSY	1		
	1-1	E103259-017SM	FRONT PANEL	1		
	1-2	E406971-221	JVC MARK	1		
	2	E75896-001	SPACER	2		
	3	E209142-018SM	WINDOW SCREEN	1		
	4	E209144-003SM	PUSH BUTTON	1	SOUND	
	5	E310199-001SM	SELECT KNOB	1		
	6	E310192-001SM	PUSH BUTTON	1	DISC	
	7	E310189-003SM	INDICATOR LENS	1	JOY	
	8	E310194-001SM	PUSH BUTTON	1	SURR. ON/OFF	
	9	E409555-001SM	INDICATOR LENS	1	STANDBY	
	10	E310191-001SM	INDICATOR LENS	1	REC. A/B	
	11	E209146-005SM	PUSH BUTTON ASSY	1		
	12	E209149-001SM	PUSH BUTTON	1	SOURCE	
	13	E310190-002SM	PUSH BUTTON	1	DEMO	
	14	VWF1233-20TTB	FLAT WIRE	1		
	15	VWF1216-13TTB	FLAT WIRE ASSY	1		
	16	SDSF2608Z	SCREW	18		
	17	E310196-003SM	EJECT BUTTON	1		
	18	E310197-003SM	EJECT BUTTON	1		
	19	E208588-002SM	HOLDER BRACKET	1		
	20	SBSG3008Z	TAPPING SCREW	8		
	21	E103261-006SM	CASSETTE HOLDER	1		
	22	E209151-001SM	CASSETTE LENS	1		
	23	E406713-001	CASSETE SPRING	4		
	24	E310204-001SM	INDICATOR LENS	2		
	25	E103263-004SM	CASSETTE HOLDER	1		
	26	E209152-001SM	CASSETTE LENS	1		
	27	FMKL4008-001	LOD STOPPER	1		J
	29	LE40300-001A	HOLDER SPRING	1		
	30	LE40286-001A	HOLDER SPRING	1		
	31	VYH7779-00D	DAMPER	2		
	32	E309477-222	EJECT STOPPER	1		
	33	E309478-222	EJECT STOPPER	1		
	34	E407801-002	SPRING	1		
	35	E407802-002	SPRING	1		
	36	SBSF3008Z	TAPPING SCREW	12		
		SBSF3008Z	TAPPING SCREW	13		J
	37	----------	CASSETTE MECHANISM ASSY	1	See page 3-8	
	38	SBST3006Z	TAPPING SCREW	4		
	39	E309479-001SS	EJECT LEVER	1		
	40	E309480-001SS	EJECT LEVER	1		
	41	E408742-001SS	SPRING	1		
	42	SBST2604Z	SCREW	2		
	43	VWF1217-10TTB	FLAT WIRE	1		
	44	----------	CHANGER MECHANISM ASSY	1	See page 3-5	
	45	----------	CD MECHANISM ASS'Y	1	See page 3-7	
	46	FMYH4003-001	INSULATOR	2		
	47	FMYH4003-002	INSULATOR	2		
	48	VKS3703-00FMM	CLAMPER	1		
	49	SPST2606Z	TAPPING SCREW	1		
	50	VKW5187-001	ROD	1		
	51	QUQ110-1509AJ	FLAT WIRE	1		
	52	VDM1001-M001A	SOCKET WIRE ASSY	1		

■ Parts List

Block No. M1MM

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Area
	53	VWF1207-07TTB	FLAT WIRE	1		
	54	VWF1210-27TTB	FLAT WIRE ASSY	1		
	55	VWF1211-22TTB	FLAT WIRE ASSY	1		
	56	VYSA1R2-033	SPACER	1		
	57	E309662-001	DISK STOPPER	1		
	58	LE30474-001A	PROTECTOR COVER	1		
	59	E310198-001SM	P.W.BOARD BRACKET	1		
	60	E102616-230SM	CHASSIS BASE	1		
	61	E75896-006	FELT SPACER	2		
	62	E310075-001	PROTECTOR COVER	1		
	63	SBST3008Z	TAPPING SCREW	2		
	64	E309789-004SM	HEAT SINK	1		
	65	E406969-002SM	SIDE BRACKET	1		
	66	FMPK4003-001	MICA SHEET	2		
	67	FMKL4007-001	HEAT SINK BRACKET	2		
	68	FMPK4004-001	MICA SHEET	1		
	69	SBSG3014CC	SCREW	6		
	70	2SC4467/OPY/-F1	SI.TRANSISTOR	1	Q757	
	71	2SA1694/OPY/-F1	SI.TRANSISTOR	1	Q758	
⚠	72	QQT0157-001	POWER TRANSFORMER	1		
	73	LE30469-001A	SHIELD PLATE	1		
	74	E65389-005	ASSY SCREW	4		
⚠	75	QMF0007-5R0J1	FUSE	2	F101,F102(T5.0A/250V)	
⚠	77	QMF0007-4R0J1	FUSE	1	F001(T4.0A/250V)	
	80	LE40252-201A	PROTECT SHEET	1		
	81	E310243-002	PLASTIC RIVET	2		
⚠	82	QMP1D00-200H	POWER CORD	1		
⚠	83	QHS3876-162	CORD STOPPER	1		
	84	E103265-028SM	REAR PANEL	1		J
		E103265-029SM	REAR PANEL	1		C
	85	E73273-003	SPECIAL SCREW	20		
	86	E207356-002SM	REAR COVER	1		
	87	E103267-004SM	METAL COVER	1		
	88	SDSG3006M	TAPPING SCREW	2		
	89	E209153-001SM	CD FITTING	1	DISC 1	
	90	E209155-001SM	CD FITTING	1	DISC 2	
	91	E209157-001SM	CD FITTING	1	DISC 3	
	92	E310080-226SM	VOLUME KNOB	1		
	93	E310195-001SM	STAY BRACKET	1		
	94	GBSG3008CC	TAPPING SCREW	3		
	95	EX0150010H09S11	FELT SPACER	1		
	96	E406309-002	SPACER	4		
	100	VKS2250-003	TOP BRACKET	1		
	101	SBSF2608Z	SCREW	3		
	102	LE30001-011A	SPACER	7		
	103	LE40283-001A	PROTECT SHEET	1		
	-	E307570-001	NUMBER LABEL	1		J

CD Changer Mechanism Ass'y and Parts List

Block No. M2MM

■ Grease Point

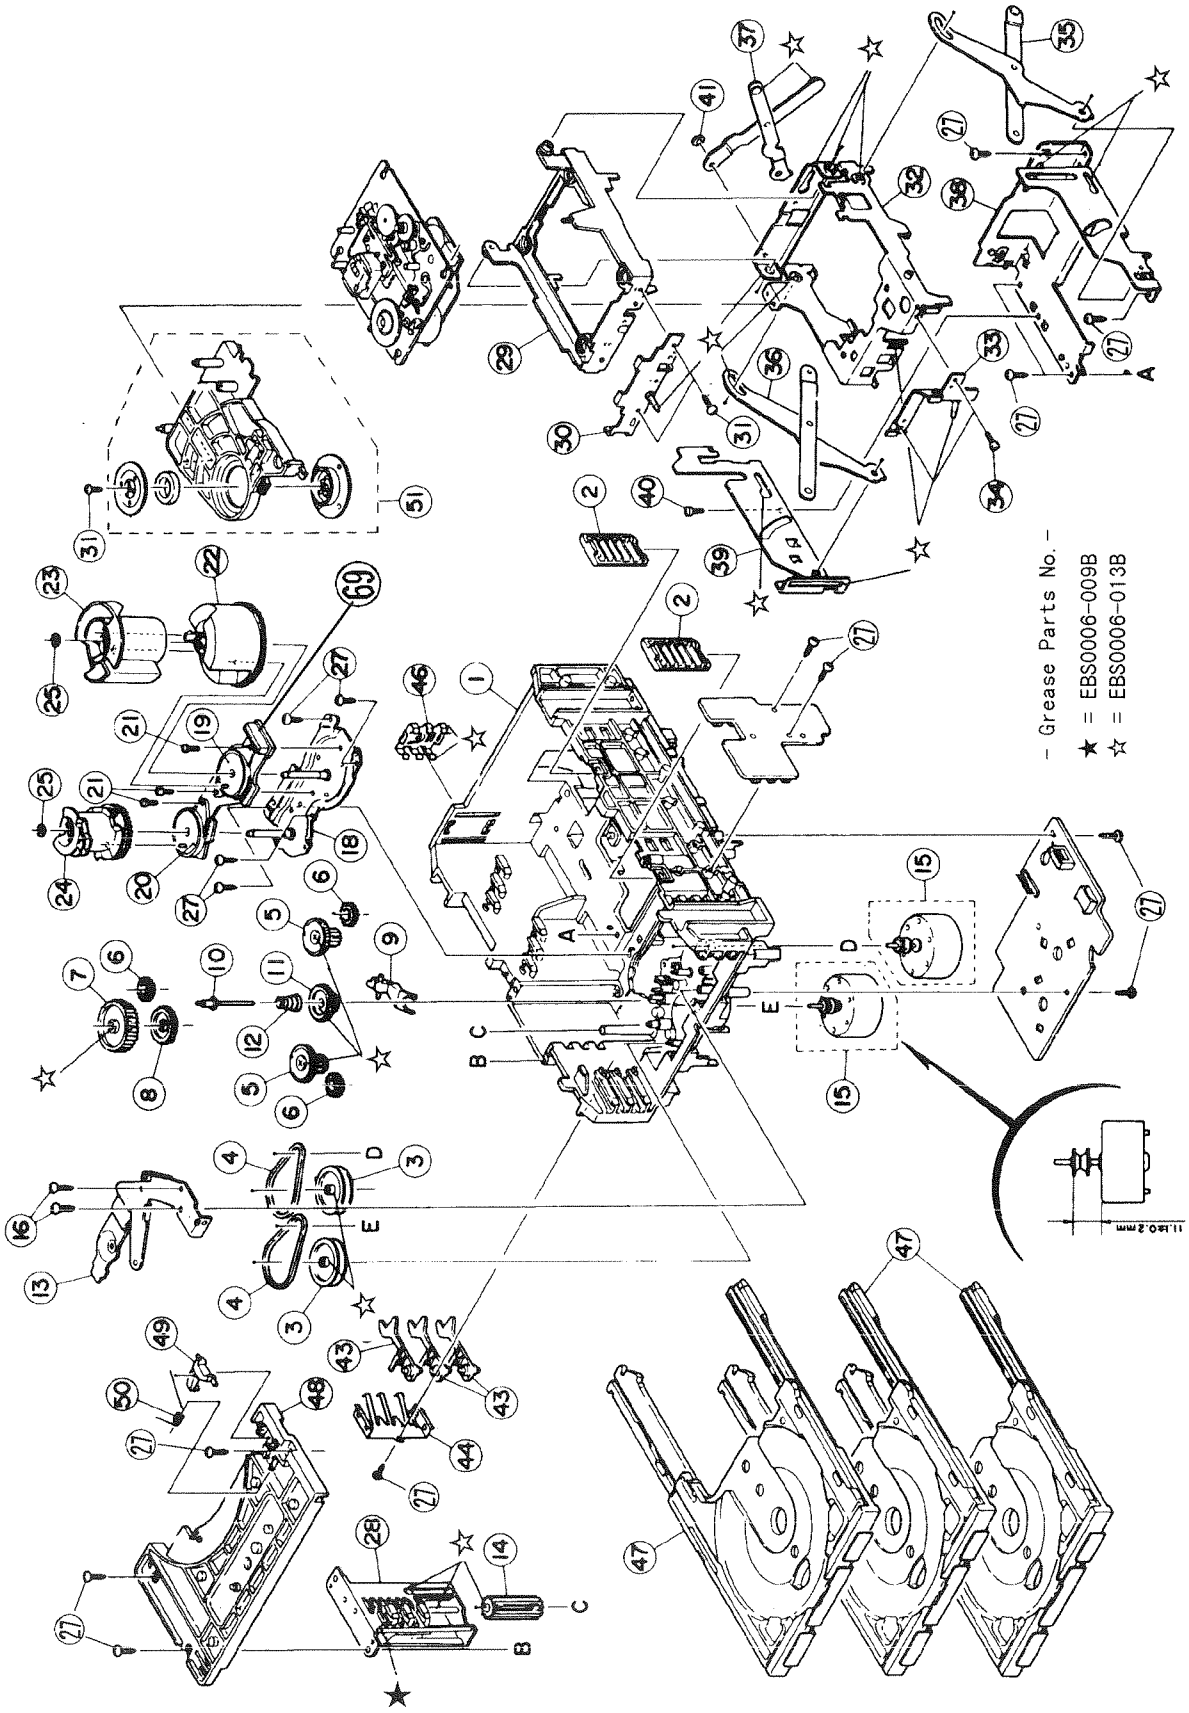

■ Parts List (Changer Mechanism Ass'y)

Block No. M2MM

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	VKS1144-003	CHASSIS BASE	1		
	2	VKS3698-003	TRAY GUIDE	2		
	3	VKS5532-003	PULLEY GEAR	2		
	4	VKB3000-164	DRIVE BELT	2		
	5	VKS5505-003	GEAR B	2		
	6	VKS5506-002	GEAR C	3		
	7	VKS5507-002	CROSS GEAR U	1		
	8	VKS5508-002	CROSS GEAR L	1		
	9	VKS5510-003	SELECT LEVER	1		
	10	VKH5769-001	GEAR STUD	1		
	11	VKS5511-002	SELECT GEAR	1		
	12	VKW5155-003	COMPRESS SPRING	1		
	13	VKM3846-001	GEAR BRACKET	1		
	14	VKS5509-002MM	CYLINDER GEAR	1		
	15	MSN5D257A-SA2	DC MOTOR ASSY	2		
	16	DPSP2616Z	SCREW	2		
	18	VKM3825-00A	GEAR BASE ASSY	1		
	19	VKZ3172-00A	CAM SWITCH ASSY	1		
	20	VKZ3173-00A	CAM SWITCH ASSY	1		
	21	SPST2606Z	TAPPING SCREW	3		
	22	VKS2263-002MM	DRIVING CAM	1		
	23	VKS2264-002MM	DRIVING CAM	1		
	24	VKS2265-002MM	CAM GEAR L	1		
	25	WDL316050	SLIT WASHER	2		
	27	SBSF2608Z	TAPPING SCREW	15		
	28	VKS3702-00FMM	DRIVE UNIT A	1		
	29	VKS2247-004	MECHA HOLDER	1		
	30	VKL7767-00B	MECHA BRACKET ASSY	1		
	31	SBSF2606Z	TAPPING SCREW	3		
	32	VKM3824-00A	MECHA HOLDER ASSY	1		
	33	VKL7802-00C	MECHA HOLDER ASSY	1		
	34	SDST2604Z	SCREW	2		
	35	VKL7810-00A	LIFTER	1		
	36	VKL7811-00A	LIFTER	1		
	37	VKL7812-00A	LIFTER	1		
	38	VKL2732-002	LIFTER BASE	1		
	39	VKM3823-001	LIFTER BRACKET	1		
	40	SDST2604Z	SCREW	1		
	41	WDL266035-2	SLIT WASHER	1		
	43	VKS5514-002MM	LOCK LEVER	3		
	44	VKY3133-002MM	RETURN SPRING	1		
	46	VKY3134-003	SPRING	1		
	47	VKS2252-00DMM	TRAY ASSY	3		
	48	VKS2250-003	TOP BRACKET	1		
	49	VKS5515-002	TRAY STOPPER	1		
	50	VKW5156-004	TORSION SPRING	1		
	51	VKS3703-00FMM	CLAMPER ASSY	1		
	69	VMC0325-010	CONNECTOR	1		

CD Mechanism Ass'y and Parts List

■ Grease Point

Block No. M3MM

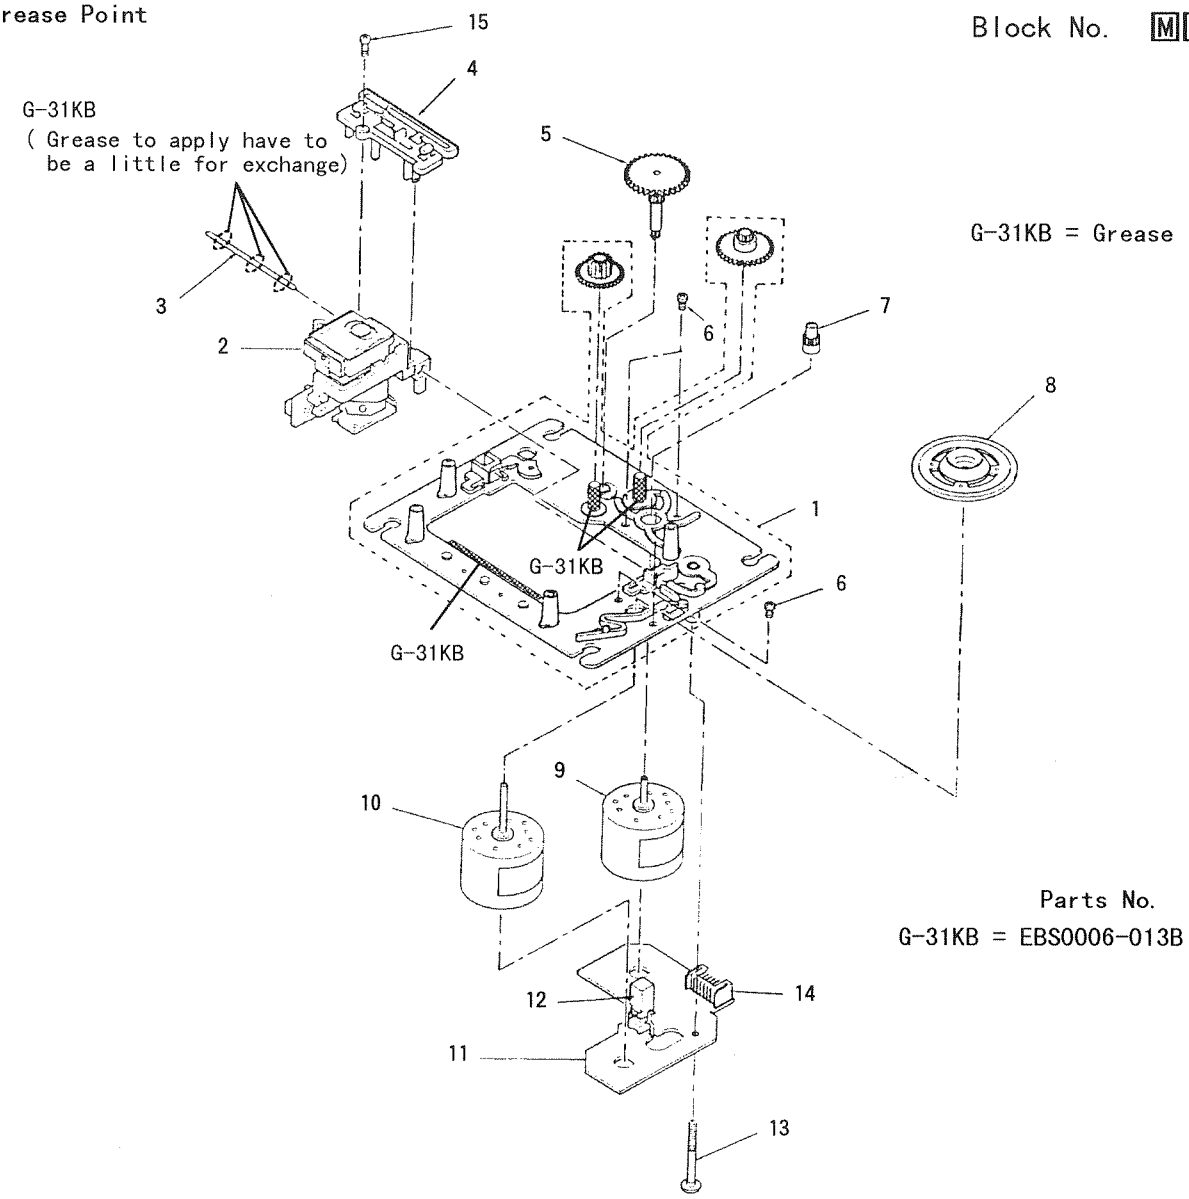

G-31KB = Grease

Parts No.
G-31KB = EBS0006-013B

■ Parts List (CD Mechanism Ass'y)

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	E102501-221SS	MECHA. BASE ASSY	1	Made in Singapore	
		EPB-002PK	MECHA. BASE ASSY	1	Made in Malaysia	
	2	OPTIMA-150S	OPTICAL PICK UP	1		
	3	E406777-001	CD SHAFT	1		
	4	E307746-001	CD RACK	1		
	5	E307745-221SS	MECHA GEAR	1		
	6	SDSP2003N	SCREW	4		
	7	E406750-001	PINION GEAR	1		
	8	E75807-302	TURN TABLE	1		
	9	MDN-4RA3ETA-1	FEED MOTOR	1	Made in Singapore	
		E406784-001	FEED MOTOR	1	Made in Malaysia	
	10	E406783-001	SPINDLE MOTOR	1		
	11	EMW10190-001(S)	P.C.BOARD	1		
	12	ESB1100-005	LEAF SWITCH	1		
	13	E75832-001	SCREW	1		
	14	EMV5109-006B	CONNECT TERMINAL	1	6PIN	
	15	SDSF2006Z	SCREW	1		

Cassette Mechanism Ass'y and Parts List

■ Grease Point

Block No. M4MM

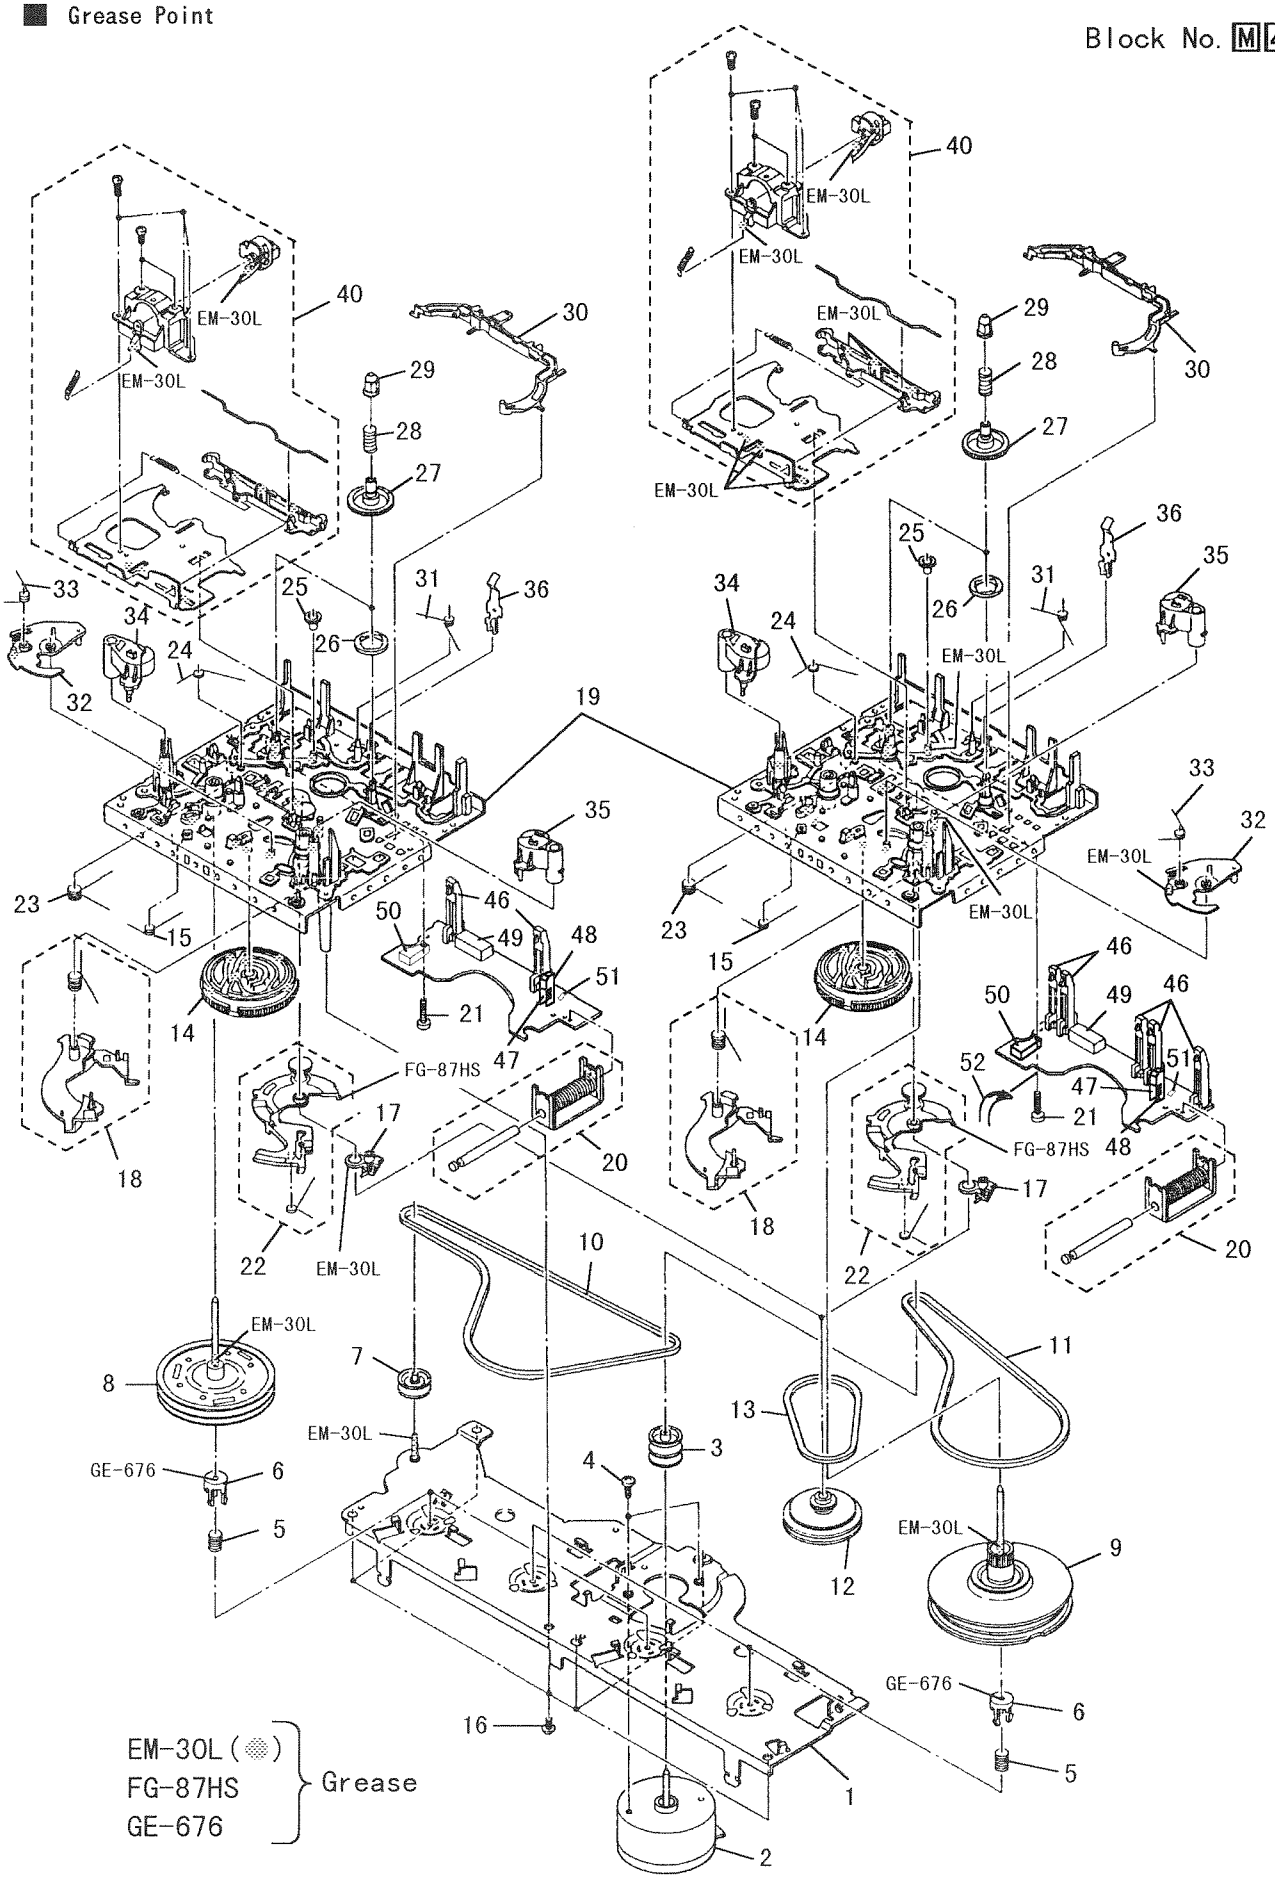

■ Parts List (Cassette Mechanism Ass'y)

Block No. M4MM

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	VKM3835-00A	FLYWHEEL BRACKET	1		
	2	MMI-6H2LWK	DC MOTOR	1		
	3	VKR4740-003	MOTOR PULLEY	1		
	4	SPSP2603Z	WOOD SCREW	2		
	5	VKW5177-002	SPRING	1		
	6	VKS5524-001	THRUST GUIDE	1		
	7	VKR4741-002	IDLER PULLEY	1		
	8	VKF3202-00A	F.WHEEL (L) ASY	2		
	9	VKF3200-00A	F.WHEEL (R) ASY	2		
	10	VKB3000-161	CAPSTAN BELT	1		
	11	VKB3000-162	CAPSTAN BELT	1		
	12	VKS5523-00C	MAIN PULLY ASSY	2		
	13	VKB3000-167	REEL BELT	2		
	14	VKS1150-001	CONTROL CAM	2		
	15	VKW5170-002	SPRING	2		
	16	SBSF2608Z	TAPPING SCREW	6		
	17	VKS3719-001	RING	2		
	18	VKS5525-00B	TRIGGER ARM ASSY	2		
	19	VKS1151-00A	CHASSIS BASE ASSY	2		
	20	VGP2401-00A	SOLENOID ASSY	2		
	21	SDST2612Z	SCREW	2		
	22	VKS3714-00B	F.F/REW.ARM	2		
	23	VKW5173-001	SPRING	2		
	24	VKW5202-002	SPRING	2		
	25	VKS5519-002	IDLER GEAR	2		
	26	VKZ4690-002	MAGNET	2		
	27	VKS3707-002	REEL GEAR	2		
	28	VKW5162-002	SPRING	4		
	29	VKS3708-002	REEL CAP	4		
	30	VKS2261-002	REEL STOPPER	2		
	31	VKW5178-001	BRAKE SPRING	2		
	32	VKS2255-001	DIRECTION LEVER	2		
	33	VKW5163-001	SPRING	2		
	34	VKP4232-00B	PINCH ROLLER	2		
	35	VKP4231-00B	PINCH ROLLER	4		
	36	VKY4670-001	CASSETTE SPRING	2		
	40	VKM3834-00F	HEAD MOUNT ASSY	1	A Mecha.	
		VKM3832-00F	HEAD MOUNT ASSY	1	B Mecha.	
	46	MXS00220MVL0	CASSETTE SWITCH	7		
	47	DN6851-HI	I.C(M)	2		
	48	VKS3630-001MM	I.C.PROTECTOR	2		
	49	VMC0314-P08	CONNECT TERMINAL	1	A Mecha.	
		VMC0314-P14	CONNECT TERMINAL	1	B Mecha.	
	50	QSEC001-E03	LEVER SWITCH	2		
	51	1SR139-400	SI DIODE	2		
	52	VWSC04-11A13K	FLAT WIRE ASSY	1		

■ Electrical Parts List (ENH-308M)

⚠	Item	Parts Number	Description	Area
		I.C.S		
	IC701	TDA7294	I.C(M)	
	IC702	TDA7294	I.C(M)	
	IC781	TDA7295	I.C(M)	
	IC782	TDA7295	I.C(M)	
		DIODES		
	D001	1N5402M-20	DIODE	
	D002	1N5402M-20	DIODE	
	D003	1N5402M-20	DIODE	
	D004	1N5402M-20	DIODE	
⚠	D011	30DF2SFC	SI.DIODE	
⚠	D012	30DF2SFC	SI.DIODE	
⚠	D013	30DF2SFC	SI.DIODE	
⚠	D014	30DF2SFC	SI.DIODE	
⚠	D015	30DF2SFC	SI.DIODE	
⚠	D016	30DF2SFC	SI.DIODE	
	D017	1SR35-100	SI.DIODE	
	D018	1SR35-100	SI.DIODE	
	D019	MTZ30JC	ZENER DIODE	
	D020	MTZ5.6JC	ZENER DIODE	
	D021	MTZ5.1JB	ZENER DIODE	
	D022	1SS133	SI.DIODE	
	D023	1SS133	SI.DIODE	
	D024	1SS133	SI.DIODE	
	D025	1SS133	SI.DIODE	
	D027	1SR35-100	SI.DIODE	
	D030	MTZ11JA	ZENER DIODE	
	D043	1SS133	SI.DIODE	
	D060	MTZ5.1JB	ZENER DIODE	
	D061	MTZ11JC	ZENER DIODE	
	D062	MTZ13JC	ZENER DIODE	
	D063	MTZ11JC	ZENER DIODE	
	D064	MTZ13JC	ZENER DIODE	
	D065	MTZ8.2JC	ZENER DIODE	
	D066	MTZ13JC	ZENER DIODE	
	D067	MTZ13JC	ZENER DIODE	
	D068	MTZ13JC	ZENER DIODE	
	D069	MTZ13JC	ZENER DIODE	
	D070	MTZ13JC	ZENER DIODE	
	D703	1SS133	SI.DIODE	
	D704	1SS133	SI.DIODE	
	D719	1SS133	SI.DIODE	
	D720	1SS133	SI.DIODE	
	D728	1SS133	SI.DIODE	
	D751	1SS133	SI.DIODE	
	D752	1SS133	SI.DIODE	
	D753	1SS133	SI.DIODE	
	D754	1SS133	SI.DIODE	
	D755	1SS133	SI.DIODE	
	D756	1SS133	SI.DIODE	
	D757	MTZ3.9JB	ZENER DIODE	
	D758	MTZ3.9JB	ZENER DIODE	
	D759	1SS133	SI.DIODE	
	D760	1SS133	SI.DIODE	
	D789	1SS133	SI.DIODE	
	D790	1SS133	SI.DIODE	
		TRANSISTORS		
	Q001	2SB1187(F,G)	SI.TRANSISTOR	
	Q003	KRC107M-T	DIGITAL TRANSISTOR	
	Q004	KRC107M-T	DIGITAL TRANSISTOR	
	Q005	KRC102M-T	DIGITAL TRANSISTOR	
	Q030	2SD2061(F,G)	SI.TRANSISTOR	
	Q040	2SC945A	SI.TRANSISTOR	
	Q041	DTC114YS	DIGITAL TRANSISTOR	
	Q060	2SD2061(F,G)	SI.TRANSISTOR	
	Q061	2SC945A	SI.TRANSISTOR	
	Q062	2SC945A	SI.TRANSISTOR	

⚠	Item	Parts Number	Description	Area
	Q063	2SD2061(F,G)	SI.TRANSISTOR	
	Q064	2SA933S(RS)	SI.TRANSISTOR	
	Q065	2SC945A	SI.TRANSISTOR	
	Q066	2SD2061(F,G)	SI.TRANSISTOR	
	Q067	2SA933S(RS)	SI.TRANSISTOR	
	Q068	2SC945A	SI.TRANSISTOR	
	Q069	2SD2061(F,G)	SI.TRANSISTOR	
	Q070	2SC945A	SI.TRANSISTOR	
	Q071	2SB1187(F,G)	SI.TRANSISTOR	
	Q072	2SA933S(RS)	SI.TRANSISTOR	
	Q073	KRA104M-T	DIGITAL TRANSISTOR	
	Q074	DTC144ES	DIGITAL TRANSISTOR	
	Q075	KRC104M-T	DIGITAL TRANSISTOR	
	Q076	DTA144ES	DIGITAL TRANSISTOR	
	Q701	2SA1038(R,S)	SI.TRANSISTOR	
	Q702	2SA1038(R,S)	SI.TRANSISTOR	
	Q726	2SC2389(S,E)	SI.TRANSISTOR	
	Q727	2SA1038(R,S)	SI.TRANSISTOR	
	Q728	2SC1740S(R,S)	SI.TRANSISTOR	
	Q733	2SD2144S(VW)	SI.TRANSISTOR	
	Q734	2SD2144S(VW)	SI.TRANSISTOR	
	Q735	2SD2144S(VW)	SI.TRANSISTOR	
	Q736	2SD2144S(VW)	SI.TRANSISTOR	
	Q737	KRA111M-T	DIGITAL TRANSISTOR	
	Q751	2SC1685	SI.TRANSISTOR	
	Q752	2SA933S(RS)	SI.TRANSISTOR	
	Q753	2SC1685	SI.TRANSISTOR	
	Q754	2SA933S(RS)	SI.TRANSISTOR	
	Q755	2SA965(Y)	SI.TRANSISTOR	
	Q756	2SC2235(O,Y)	SI.TRANSISTOR	
	Q781	2SA1038(R,S)	SI.TRANSISTOR	
	Q782	2SA1038(R,S)	SI.TRANSISTOR	
		CAPACITORS		
	C001	QFV82AJ-104	0.1MF 100V THIN FILM CAP.	
	C002	QFV82AJ-104	0.1MF 100V THIN FILM CAP.	
	C003	QFV82AJ-104	0.1MF 100V THIN FILM CAP.	
	C004	EEW5618-688J5	6800MF E.CAP.	
	C005	EEW5618-688J5	6800MF E.CAP.	
	C011	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	
	C012	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	
	C013	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	
	C014	QETB1VM-338	3300MF 35V AL E.CAP.	
	C015	QETB1VM-338	3300MF 35V AL E.CAP.	
	C016	QETN1VM-107Z	100MF 35V E.CAP.	
	C017	QETN1JM-476Z	47MF 63V E.CAP.	
	C018	QETN1HM-226Z	22MF 50V AL E.CAP.	
	C019	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C020	QETN1HM-226Z	22MF 50V AL E.CAP.	
	C021	QETN1HM-475Z	4.7MF 50V AL E.CAP.	
	C022	QETN1HM-475Z	4.7MF 50V AL E.CAP.	
	C023	QETN1HM-225Z	2.2MF 50V AL E.CAP.	
	C024	QETN1EM-106Z	10MF 25V E.CAP.	
	C030	QETN1EM-226Z	22MF 25V E.CAP.	
	C031	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C032	QETN1EM-226Z	22MF 25V E.CAP.	
	C033	QFLB1HJ-103	0.01MF 50V MYLAR CAP.	
	C060	QETN1EM-226Z	22MF 25V E.CAP.	
	C061	QCF21HP-103A	0.01MF 50V CER.CAP.	
	C062	QETN1EM-226Z	22MF 25V E.CAP.	
	C063	QETN1EM-226Z	22MF 25V E.CAP.	
	C064	QCF21HP-103A	0.01MF 50V CER.CAP.	
	C065	QETN1EM-226Z	22MF 25V E.CAP.	
	C066	QETN1EM-226Z	22MF 25V E.CAP.	
	C067	QCF21HP-103A	0.01MF 50V CER.CAP.	
	C068	QETN1EM-226Z	22MF 25V E.CAP.	
	C069	QETN1EM-226Z	22MF 25V E.CAP.	
	C070	QCF21HP-103A	0.01MF 50V CER.CAP.	

■ Electrical Parts List (ENH-308M)

⚠	Item	Parts Number	Description	Area
	C071	QETN1EM-226Z	22MF 25V E. CAP.	J
		QETN1HM-476Z	47MF 50V E. CAP.	C
	C072	QETN1EM-226Z	22MF 25V E. CAP.	
	C073	QCF21HP-103A	0.01MF 50V CER. CAP.	
	C074	QETN1EM-226Z	22MF 25V E. CAP.	
	C103	QFLB1HJ-103	0.01MF 50V MYLAR CAP.	
	C703	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C704	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C705	QCBB1HK-181Y	180PF 50V CER. CAP.	
	C706	QCBB1HK-181Y	180PF 50V CER. CAP.	
	C707	QETN1EM-476Z	47MF 25V E. CAP.	
	C708	QETN1EM-476Z	47MF 25V E. CAP.	
	C709	QCSB1HJ-100Y	10PF 50V CER. CAP.	
	C710	QCSB1HJ-100Y	10PF 50V CER. CAP.	
	C711	QETN1HM-226Z	22MF 50V AL E. CAP.	
	C712	QETN1HM-226Z	22MF 50V AL E. CAP.	
	C713	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	C
	C714	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	C
	C715	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	C
	C716	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	C
	C717	QFLB1HJ-473	0.047MF 50V MYLAR CAP.	J
	C718	QFLB1HJ-473	0.047MF 50V MYLAR CAP.	J
	C721	QETN1HM-225Z	2.2MF 50V AL E. CAP.	
	C722	QETN1HM-225Z	2.2MF 50V AL E. CAP.	
	C726	QETN1EM-106Z	10MF 25V E. CAP.	
	C729	QETN1CM-476Z	47MF 16V AL E. CAP.	
	C751	QCY31HK-272Z	2700PF 50V CER. CAP.	
	C752	QCY31HK-272Z	2700PF 50V CER. CAP.	
	C753	QCY31HK-472Z	4700PF 50V CER. CAP.	
	C754	QCY31HK-472Z	4700PF 50V CER. CAP.	
	C755	QFV81HJ-105	1MF 50V THIN FILM CAP.	
	C756	QFV81HJ-105	1MF 50V THIN FILM CAP.	
	C757	QCXB1CM-152Y	1500PF 16V CER. CAP.	
	C758	QCXB1CM-152Y	1500PF 16V CER. CAP.	
	C781	QETN1HM-225Z	2.2MF 50V AL E. CAP.	
	C782	QETN1HM-225Z	2.2MF 50V AL E. CAP.	
	C783	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C784	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C785	QCBB1HK-181Y	180PF 50V CER. CAP.	
	C786	QCBB1HK-181Y	180PF 50V CER. CAP.	
	C787	QETN1EM-476Z	47MF 25V E. CAP.	
	C788	QETN1EM-476Z	47MF 25V E. CAP.	
	C789	QCSB1HJ-100Y	10PF 50V CER. CAP.	
	C790	QCSB1HJ-100Y	10PF 50V CER. CAP.	
	C791	QETN1HM-226Z	22MF 50V AL E. CAP.	
	C792	QETN1HM-226Z	22MF 50V AL E. CAP.	
	C793	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	C
	C794	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	C
	C795	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	C
	C796	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	C
	C797	QFLB1HJ-473	0.047MF 50V MYLAR CAP.	J
	C798	QFLB1HJ-473	0.047MF 50V MYLAR CAP.	J
	C799	QCVB1CM-103Y	0.01MF 16V CER. CAP.	
	C1073	QFLB1HJ-223	0.022MF 50V MYLAR CAP.	
	C1074	QFLB1HJ-223	0.022MF 50V MYLAR CAP.	
		RESISTORS		
	R001	QRZ9044-335	3.3M COMPOSITION	
	R002	QRD14CJ-4R7SX	4.7 1/4W UNF. CARBON R	J
	R003	QRD167J-332	3.3K 1/6W CARBON RES.	
	R004	QRD167J-223	22K 1/6W CARBON RES.	
	R005	QRD161J-104	100K 1/6W CARBON RES.	
⚠	R006	QRD14CJ-2R2SX	2.2 1/4W UNF. CARBON R	
	R008	QRD161J-103	10K 1/6W CARBON RES.	
	R009	QRD161J-103	10K 1/6W CARBON RES.	
	R010	QRD161J-472	4.7K 1/6W CARBON RES.	
	R011	QRD161J-102	1K 1/6W CARBON RES.	
	R012	QRD167J-223	22K 1/6W CARBON RES.	

⚠	Item	Parts Number	Description	Area
	R013	QRD161J-103	10K 1/6W CARBON RES.	
	R014	QRD161J-104	100K 1/6W CARBON RES.	
	R030	QRD14CJ-4R7SX	4.7 1/4W UNF. CARBON R	
	R031	QRD161J-681	680 1/6W CARBON RES.	
	R040	QRD12CJ-471SX	470 1/2W UNF. CARBON R	
	R041	QRD12CJ-471SX	470 1/2W UNF. CARBON R	
	R042	QRD161J-222	2.2K 1/6W CARBON RES.	
	R043	QRD12CJ-471SX	470 1/2W UNF. CARBON R	
	R044	QRD12CJ-471SX	470 1/2W UNF. CARBON R	
	R045	QRD161J-222	2.2K 1/6W CARBON RES.	
	R060	QRG01DJ-150X	15 1W OXIDE METAL	
	R061	QRG01DJ-150X	15 1W OXIDE METAL	
	R062	QRD161J-331	330 1/6W CARBON RES.	
	R063	QRD161J-331	330 1/6W CARBON RES.	
	R064	QRD161J-122	1.2K 1/6W CARBON RES.	
	R065	QRD161J-561	560 1/6W CARBON RES.	
	R066	QRD161J-561	560 1/6W CARBON RES.	
	R067	QRD161J-122	1.2K 1/6W CARBON RES.	
	R068	QRD161J-331	330 1/6W CARBON RES.	
⚠	R069	QRD125J-220	22 1/2W UNF. CARBON R	
⚠	R070	QRD12CJ-330S	33 1/2W UNF. CARBON R	
	R071	QRD161J-221	220 1/6W CARBON RES.	
	R072	QRD161J-681	680 1/6W CARBON RES.	
	R073	QRD161J-182	1.8K 1/6W CARBON RES.	
⚠	R074	QRD125J-180	18 1/2W UNF. CARBON R	
⚠	R075	QRD125J-220	22 1/2W UNF. CARBON R	
	R076	QRD161J-221	220 1/6W CARBON RES.	
	R077	QRD161J-681	680 1/6W CARBON RES.	
	R078	QRD161J-182	1.8K 1/6W CARBON RES.	
⚠	R079	QRG022J-220AM	22 2W O.M.F. RESIST	
⚠	R080	QRG022J-220AM	22 2W O.M.F. RESIST	
	R081	QRD167J-272	2.7K 1/6W CARBON RES.	
	R082	QRD167J-562	5.6K 1/6W CARBON RES.	
	R083	QRG01DJ-150X	15 1W OXIDE METAL	
	R084	QRD167J-272	2.7K 1/6W CARBON RES.	
	R085	QRD167J-562	5.6K 1/6W CARBON RES.	
⚠	R701	QRD14CJ-100SX	10 1/4W UNF. CARBON R	
⚠	R702	QRD14CJ-100SX	10 1/4W UNF. CARBON R	
	R703	QRD161J-563	56K 1/6W CARBON RES.	
	R704	QRD161J-563	56K 1/6W CARBON RES.	
⚠	R705	QRD14CJ-182SX	1.8K 1/4W UNF. CARBON R	
⚠	R706	QRD14CJ-182SX	1.8K 1/4W UNF. CARBON R	
	R707	QRD161J-563	56K 1/6W CARBON RES.	
	R708	QRD161J-563	56K 1/6W CARBON RES.	
⚠	R709	QRX014J-R22	0.22 1W METAL FILM R	
⚠	R710	QRX014J-R22	0.22 1W METAL FILM R	
⚠	R711	QRX014J-R22	0.22 1W METAL FILM R	
⚠	R712	QRX014J-R22	0.22 1W METAL FILM R	
⚠	R713	QRD14CJ-100SX	10 1/4W UNF. CARBON R	
⚠	R714	QRD14CJ-100SX	10 1/4W UNF. CARBON R	
⚠	R715	QRD14CJ-100SX	10 1/4W UNF. CARBON R	
⚠	R716	QRD14CJ-100SX	10 1/4W UNF. CARBON R	
	R717	QRD161J-122	1.2K 1/6W CARBON RES.	
	R718	QRD161J-122	1.2K 1/6W CARBON RES.	
	R719	QRD167J-223	22K 1/6W CARBON RES.	
	R720	QRD167J-223	22K 1/6W CARBON RES.	
	R721	QRD161J-103	10K 1/6W CARBON RES.	
	R722	QRD161J-103	10K 1/6W CARBON RES.	
	R723	QRD161J-473	47K 1/6W CARBON RES.	
	R724	QRD161J-473	47K 1/6W CARBON RES.	
	R725	QRD161J-104	100K 1/6W CARBON RES.	
	R726	QRD161J-823	82K 1/6W CARBON RES.	
	R727	QRD161J-104	100K 1/6W CARBON RES.	
	R728	QRD161J-103	10K 1/6W CARBON RES.	
	R729	QRD161J-104	100K 1/6W CARBON RES.	
	R730	QRD161J-103	10K 1/6W CARBON RES.	
	R733	QRD161J-473	47K 1/6W CARBON RES.	

■ Electrical Parts List (ENH-308M)

⚠	Item	Parts Number	Description	Area
	R734	QRD161J-473	47K 1/6W CARBON RES.	
	R735	QRD161J-473	47K 1/6W CARBON RES.	
	R736	QRD161J-473	47K 1/6W CARBON RES.	
	R739	QRG01DJ-821X	820 1W OXIDE METAL	
	R740	QRG01DJ-821X	820 1W OXIDE METAL	
	R741	QRD161J-473	47K 1/6W CARBON RES.	
	R742	QRD161J-473	47K 1/6W CARBON RES.	
	R743	QRD167J-223	22K 1/6W CARBON RES.	
	R744	QRD167J-223	22K 1/6W CARBON RES.	
	R745	QRD161J-103	10K 1/6W CARBON RES.	
	R746	QRD161J-103	10K 1/6W CARBON RES.	
	R747	QRD161J-104	100K 1/6W CARBON RES.	
	R748	QRD161J-823	82K 1/6W CARBON RES.	
	R749	QRD161J-471	470 1/6W CARBON RES.	
	R750	QRD161J-471	470 1/6W CARBON RES.	
	R751	QRD167J-223	22K 1/6W CARBON RES.	
	R752	QRD167J-223	22K 1/6W CARBON RES.	
	R753	QRD161J-222	2.2K 1/6W CARBON RES.	
	R754	QRD161J-222	2.2K 1/6W CARBON RES.	
	R755	QRD161J-221	220 1/6W CARBON RES.	
	R756	QRD161J-221	220 1/6W CARBON RES.	
	R757	QRD167J-223	22K 1/6W CARBON RES.	
	R758	QRD167J-223	22K 1/6W CARBON RES.	
	R759	QRD167J-682	6.8K 1/6W CARBON RES.	
	R760	QRD167J-682	6.8K 1/6W CARBON RES.	
	R761	QRD161J-222	2.2K 1/6W CARBON RES.	
	R762	QRD161J-222	2.2K 1/6W CARBON RES.	
	R763	QRD167J-223	22K 1/6W CARBON RES.	
	R764	QRD167J-223	22K 1/6W CARBON RES.	
	R765	QRG01DJ-182X	1.8K 1W OXIDE METAL	
	R766	QRG01DJ-182X	1.8K 1W OXIDE METAL	
⚠	R767	QRD14CJ-681SX	680 1/4W UNF.CARBON R	
⚠	R768	QRD14CJ-681SX	680 1/4W UNF.CARBON R	
	R769	QRD14CJ-821SX	820 1/4W CARBON RES.	
	R770	QRD14CJ-821SX	820 1/4W CARBON RES.	
	R771	QRD161J-821	820 1/6W CARBON RES.	
	R772	QRD161J-821	820 1/6W CARBON RES.	
⚠	R773	QRD14CJ-101S	100 1/4W UNF.CARBON R	
⚠	R774	QRD14CJ-101S	100 1/4W UNF.CARBON R	
	R775	QRD161J-471	470 1/6W CARBON RES.	
	R776	QRD161J-471	470 1/6W CARBON RES.	
	R777	QRD14CJ-4R7SX	4.7 1/4W UNF.CARBON R	
	R778	QRD14CJ-4R7SX	4.7 1/4W UNF.CARBON R	
⚠	R781	QRD14CJ-100SX	10 1/4W UNF.CARBON R	
⚠	R782	QRD14CJ-100SX	10 1/4W UNF.CARBON R	
	R783	QRD161J-563	56K 1/6W CARBON RES.	
	R784	QRD161J-563	56K 1/6W CARBON RES.	
⚠	R785	QRD14CJ-182SX	1.8K 1/4W UNF.CARBON R	
⚠	R786	QRD14CJ-182SX	1.8K 1/4W UNF.CARBON R	
	R787	QRD161J-563	56K 1/6W CARBON RES.	
	R788	QRD161J-563	56K 1/6W CARBON RES.	
⚠	R789	QRX014J-R22	0.22 1W METAL FILM R	
⚠	R790	QRX014J-R22	0.22 1W METAL FILM R	
⚠	R791	QRX014J-R22	0.22 1W METAL FILM R	
⚠	R792	QRX014J-R22	0.22 1W METAL FILM R	
⚠	R793	QRD14CJ-100SX	10 1/4W UNF.CARBON R	
⚠	R794	QRD14CJ-100SX	10 1/4W UNF.CARBON R	
⚠	R795	QRD14CJ-100SX	10 1/4W UNF.CARBON R	
⚠	R796	QRD14CJ-100SX	10 1/4W UNF.CARBON R	
	R797	QRD161J-122	1.2K 1/6W CARBON RES.	
	R798	QRD161J-122	1.2K 1/6W CARBON RES.	
	R1073	QRD14CJ-4R7SX	4.7 1/4W UNF.CARBON R	
	R1074	QRD14CJ-4R7SX	4.7 1/4W UNF.CARBON R	
		OTHERS		
		EMW10687-302	PRINTED BOARD	
		QWE880-12RR	VINYL WIRE	
	L701	EQL0011-R45J1	INDUCTOR	

⚠	Item	Parts Number	Description	Area
	L702	EQL0011-R45J1	INDUCTOR	
	L781	EQL0011-R45J1	INDUCTOR	
	L782	EQL0011-R45J1	INDUCTOR	
	CN002	EMV7163-011	CONNECT TERMINAL	
	CN003	EMV7163-010	CONNECT TERMINAL	
	CN004	EMV7163-005	CONNECTOR	
	CN005	EMV7163-011	CONNECT TERMINAL	
	CN006	EMV7163-010	CONNECT TERMINAL	
	CN007	EMV7163-009	CONNECT TERMINAL	
	CN009	EMV5138-005	CONNECT TERMINAL	
	CN012	EMV5163-011R	CONNECT TERMINAL	
	CN013	EMV5163-010R	CONNECT TERMINAL	
	CN014	EMV5163-005R	CONNECTOR	
	CN019	EWS285-002J	SOCKET WIRE ASSY	
	CN111	EMV7145-004Z	SOCKET ASSY	
	CN703	EMV5163-007R	CONNECT TERMINAL	
	CN704	EMV5163-006R	CONNECT TERMINAL	
	CN915	EMV7145-003Z	SOCKET ASSY	
	EP001	EMZ4002-002Z	EARTH PLATE	
	EP002	EMZ4002-002Z	EARTH PLATE	
	FT011	EMG7331-003Z	FUSE CLIP	
	FT012	EMG7331-003Z	FUSE CLIP	
	FT511	EMG7331-003Z	FUSE CLIP	
	FT512	EMG7331-003Z	FUSE CLIP	
	FT521	EMG7331-003Z	FUSE CLIP	
	FT522	EMG7331-003Z	FUSE CLIP	
	FW101	EWR34D-13LS	FLAT WIRE	
	TB001	EMZ4001-002Z	TAB	
	TB002	EMZ4001-002Z	TAB	
	TH002	QAD0095-4R7Z	POSITIVE THERMISTOR	C
	TW799	EWPZ01-025	TERMINAL WIRE	

■ Electrical Parts List (ENB-255M)

⚠	Item	Parts Number	Description	Area
		I.C.S		
	IC231	HA12136A	I.C(MONO-ANALOG)	
	IC901	HD404719A71FS	I.C(MICRO-COMPUTER)	
	IC902	MN172412JAAW	I.C(MICRO-COMPUTER)	
	IC903	XR1099CP	I.C(MONO-ANALOG)	
	IC904	GP1U271X	INFRARED DETECT UNIT	
		DIODES		
	D041	1SS133	SI.DIODE	
	D042	1SS133	SI.DIODE	
	D231	1SR35-100	SI.DIODE	
	D232	SLR-342MCA47	L.E.D.	
	D233	SLR-342MCA47	L.E.D.	
	D234	SLR-342MCA47	L.E.D.	
	D235	SLR-342MCA47	L.E.D.	
	D236	SLR-342MCA47	L.E.D.	
	D237	SLR-342MCA47	L.E.D.	
	D801	MTZ2.4JB	ZENER DIODE	
	D802	SLR-342VC3F	L.E.D.	
	D803	SLR-342VC3F	L.E.D.	
	D804	SLR-342VC3F	L.E.D.	
	D805	SLR-342VC3F	L.E.D.	
	D806	SLR-342VC3F	L.E.D.	
	D901	1SS119	SI.DIODE	
	D902	1SS133	SI.DIODE	
	D904	SLR-342DCA47	L.E.D.	
	D905	SLR-342MCA47	L.E.D.	
	D906	SLR-342MCA47	L.E.D.	
	D907	SLR-342MCA47	L.E.D.	
	D908	SLR-342MCA47	L.E.D.	
	D909	SLR-342MCA47	L.E.D.	
	D910	SLR-342MCA47	L.E.D.	
	D911	SLR-342MCA47	L.E.D.	
	D912	SLR-342MCA47	L.E.D.	
	D913	SLR-342MCA47	L.E.D.	
	D914	SLR-342MCA47	L.E.D.	
	D915	SLR-342MCA47	L.E.D.	
	D916	SLR-342MCA47	L.E.D.	
	D917	SLR-342MCA47	L.E.D.	
	D918	SLR-342MCA47	L.E.D.	
	D919	SLR-342MCA47	L.E.D.	
	D920	1SS133	SI.DIODE	
	D921	1SS133	SI.DIODE	
	D922	1SS133	SI.DIODE	
	D923	MTZ5.6JC	ZENER DIODE	
	D924	MTZ5.6JC	ZENER DIODE	
	D925	MTZ5.6JC	ZENER DIODE	
	D932	1SS133	SI.DIODE	
	D933	1SS133	SI.DIODE	
	D934	1SS133	SI.DIODE	
	D935	1SS133	SI.DIODE	
	D941	MTZ5.1JB	ZENER DIODE	
	D996	1SS119	SI.DIODE	
		TRANSISTORS		
	Q231	2SA934(Q,R)	SI.TRANSISTOR	
	Q232	DTC123YS	DIGITAL TRANSISTOR	
	Q233	2SA934(Q,R)	SI.TRANSISTOR	
	Q234	DTC123YS	DIGITAL TRANSISTOR	
	Q235	2SA933S(RS)	SI.TRANSISTOR	
	Q236	KRC107M-T	DIGITAL TRANSISTOR	
	Q237	KRC107M-T	DIGITAL TRANSISTOR	
	Q901	KRC102M-T	DIGITAL TRANSISTOR	
	Q902	KRC102M-T	DIGITAL TRANSISTOR	
	Q903	KRC102M-T	DIGITAL TRANSISTOR	
	Q904	KRC102M-T	DIGITAL TRANSISTOR	

⚠	Item	Parts Number	Description	Area
	Q921	KRC107M-T	DIGITAL TRANSISTOR	
	Q922	DTC114ES	DIGITAL TRANSISTOR	
	Q923	DTC114ES	DIGITAL TRANSISTOR	
	Q924	DTC114ES	DIGITAL TRANSISTOR	
	Q925	DTC114ES	DIGITAL TRANSISTOR	
		CAPACITORS		
	C051	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	
	C052	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	
	C053	QCXB1CM-222Y	2200PF 16V CER.CAP.	
	C054	QCXB1CM-222Y	2200PF 16V CER.CAP.	
	C057	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C058	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C233	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C234	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C235	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C236	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C237	QETC1HM-106ZM	10MF 50V E.CAP.	
	C238	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C239	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C240	QCBB1HK-221Y	220PF 50V CER.CAP.	
	C241	QCBB1HK-221Y	220PF 50V CER.CAP.	
	C242	EETB1HM-475E	4.7MF 50V E.CAP.	
	C243	QFV81HJ-224	0.22MF 50V THIN FILM CAP.	
	C244	QFV81HJ-224	0.22MF 50V THIN FILM CAP.	
	C245	QCBB1HK-561Y	560PF 50V CER.CAP.	
	C246	QCBB1HK-561Y	560PF 50V CER.CAP.	
	C247	EETB1CM-476	47MF 16V E.CAP.	
	C251	QETN1CM-107Z	100MF 16V E.CAP.	
	C801	QCBB1HK-471Y	470PF 50V CER.CAP.	
	C802	QCBB1HK-471Y	470PF 50V CER.CAP.	
	C901	EETB1AM-107E	100MF 10V E.CAP.	
	C902	QCZ0205-155	1.5MF 25V C.CAP.	
	C903	QEADOHZ-479ZM	47000MF E.CAP.	
	C904	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C905	QER50JM-107	100MF 6.3V AL E.CAP.	
	C910	QCT26CH-330	33PF 50V CER.CAP.	
	C911	QEADOHZ-479ZM	47000MF E.CAP.	
	C912	EETB1AM-476E	47MF 10V E.CAP.	
	C914	QCZ0205-155	1.5MF 25V C.CAP.	
	C915	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C916	QER51HM-474G	0.47MF 50V AL E.CAP.	
	C921	QER50JM-107	100MF 6.3V AL E.CAP.	
	C922	QER50JM-107	100MF 6.3V AL E.CAP.	
	C923	QCGB1HK-102	1000PF 50V CER.CAP.	
	TC902	ENZ1003-015	0.1MF TRIMMER CAPA	
		RESISTORS		
	R047	QRD161J-333	33K 1/6W CARBON RES.	
	R048	QRD161J-333	33K 1/6W CARBON RES.	
	R049	QRD161J-102	1K 1/6W CARBON RES.	
	R051	QRD14CJ-4R7SX	4.7 1/4W UNF.CARBON R	
	R052	QRD14CJ-4R7SX	4.7 1/4W UNF.CARBON R	
	R235	QRD167J-153	15K 1/6W CARBON RES.	
	R236	QRD167J-153	15K 1/6W CARBON RES.	
	R237	QRD161J-681	680 1/6W CARBON RES.	
	R238	QRD161J-681	680 1/6W CARBON RES.	
⚠	R239	QRD14CJ-220S	22 1/4W UNF.CARBON R	
	R240	QRD161J-103	10K 1/6W CARBON RES.	
	R241	QRD161J-183	18K 1/6W CARBON RES.	
	R242	QRD161J-183	18K 1/6W CARBON RES.	
	R245	QRD167J-751	750 1/6W CARBON RES.	
	R246	QRD167J-751	750 1/6W CARBON RES.	
	R247	QRD161J-471	470 1/6W CARBON RES.	
⚠	R248	QRX022J-3R3A	3.3 2W METAL FILM R	
	R249	QRD161J-103	10K 1/6W CARBON RES.	

■ Electrical Parts List (ENB-255M)

⚠	Item	Parts Number	Description	Area
	R250	QRD161J-103	10K 1/6W CARBON RES.	
	R251	QRD161J-103	10K 1/6W CARBON RES.	
	R255	QRD167J-751	750 1/6W CARBON RES.	
	R256	QRD167J-751	750 1/6W CARBON RES.	
	R257	QRD161J-471	470 1/6W CARBON RES.	
⚠	R258	QRX022J-3R3A	3.3 2W METAL FILM R	
	R259	QRD161J-224	220K 1/6W CARBON RES.	
	R260	QRD161J-103	10K 1/6W CARBON RES.	
	R261	QRD161J-473	47K 1/6W CARBON RES.	
	R262	QRD161J-273	27K 1/6W CARBON RES.	
	R263	QRD161J-102	1K 1/6W CARBON RES.	
	R264	QRD161J-103	10K 1/6W CARBON RES.	
	R265	QRD161J-103	10K 1/6W CARBON RES.	
	R266	QRD161J-103	10K 1/6W CARBON RES.	
	R267	QRD161J-103	10K 1/6W CARBON RES.	
	R268	QRD161J-221	220 1/6W CARBON RES.	
	R269	QRD161J-221	220 1/6W CARBON RES.	
	R801	QRD167J-431	430 1/6W CARBON RES.	
	R802	QRD167J-431	430 1/6W CARBON RES.	
	R803	QRD161J-561	560 1/6W CARBON RES.	
	R804	QRD167J-751	750 1/6W CARBON RES.	
	R805	QRD161J-132	1.3K 1/6W CARBON RES.	
	R806	QRD161J-222	2.2K 1/6W CARBON RES.	
	R807	QRD167J-431	430 1/6W CARBON RES.	
	R808	QRD167J-431	430 1/6W CARBON RES.	
	R809	QRD161J-561	560 1/6W CARBON RES.	
	R810	QRD167J-751	750 1/6W CARBON RES.	
	R811	QRD161J-132	1.3K 1/6W CARBON RES.	
	R812	QRD161J-331	330 1/6W CARBON RES.	
	R813	QRD161J-331	330 1/6W CARBON RES.	
	R814	QRD161J-331	330 1/6W CARBON RES.	
	R815	QRD161J-331	330 1/6W CARBON RES.	
	R816	QRD161J-331	330 1/6W CARBON RES.	
	R817	QRD161J-103	10K 1/6W CARBON RES.	
	R818	QRD161J-103	10K 1/6W CARBON RES.	
	R900	QRD161J-103	10K 1/6W CARBON RES.	
	R901	QRD161J-105	1M 1/6W CARBON RES.	
	R902	QRD161J-103	10K 1/6W CARBON RES.	
	R903	QRD161J-220	22 1/6W CARBON RES.	
	R904	QRD161J-222	2.2K 1/6W CARBON RES.	
	R905	QRD161J-103	10K 1/6W CARBON RES.	
	R906	QRD161J-221	220 1/6W CARBON RES.	
	R907	QRD161J-221	220 1/6W CARBON RES.	
	R908	QRD161J-221	220 1/6W CARBON RES.	
	R909	QRD161J-221	220 1/6W CARBON RES.	
	R910	QRD161J-221	220 1/6W CARBON RES.	
	R911	QRD161J-221	220 1/6W CARBON RES.	
	R915	QRD161J-222	2.2K 1/6W CARBON RES.	
	R918	QRD167J-431	430 1/6W CARBON RES.	
	R919	QRD167J-431	430 1/6W CARBON RES.	
	R920	QRD161J-561	560 1/6W CARBON RES.	
	R921	QRD167J-751	750 1/6W CARBON RES.	
	R922	QRD161J-132	1.3K 1/6W CARBON RES.	
	R923	QRD161J-222	2.2K 1/6W CARBON RES.	
	R924	QRD161J-512	5.1K 1/6W CARBON RES.	
	R925	QRD167J-431	430 1/6W CARBON RES.	
	R926	QRD167J-431	430 1/6W CARBON RES.	
	R927	QRD161J-561	560 1/6W CARBON RES.	
	R928	QRD167J-751	750 1/6W CARBON RES.	
	R929	QRD161J-132	1.3K 1/6W CARBON RES.	
	R930	QRD161J-222	2.2K 1/6W CARBON RES.	
	R931	QRD161J-512	5.1K 1/6W CARBON RES.	
	R932	QRD167J-431	430 1/6W CARBON RES.	
	R933	QRD167J-431	430 1/6W CARBON RES.	

⚠	Item	Parts Number	Description	Area
	R934	QRD161J-561	560 1/6W CARBON RES.	
	R935	QRD167J-751	750 1/6W CARBON RES.	
	R936	QRD161J-132	1.3K 1/6W CARBON RES.	
	R937	QRD161J-222	2.2K 1/6W CARBON RES.	
	R938	QRD161J-512	5.1K 1/6W CARBON RES.	
	R939	QRD167J-431	430 1/6W CARBON RES.	
	R944	QRD161J-181	180 1/6W CARBON RES.	
	R945	QRD161J-181	180 1/6W CARBON RES.	
	R946	QRD161J-181	180 1/6W CARBON RES.	
	R947	QRD161J-181	180 1/6W CARBON RES.	
	R948	QRD161J-181	180 1/6W CARBON RES.	
	R949	QRD161J-181	180 1/6W CARBON RES.	
	R950	QRD161J-181	180 1/6W CARBON RES.	
	R951	QRD161J-181	180 1/6W CARBON RES.	
	R952	QRD161J-181	180 1/6W CARBON RES.	
	R953	QRD161J-221	220 1/6W CARBON RES.	
	R954	QRD161J-181	180 1/6W CARBON RES.	
	R955	QRD161J-181	180 1/6W CARBON RES.	
	R956	QRD161J-181	180 1/6W CARBON RES.	
	R957	QRD161J-181	180 1/6W CARBON RES.	
	R958	QRD161J-181	180 1/6W CARBON RES.	
	R959	QRD161J-181	180 1/6W CARBON RES.	
	R960	QRD161J-102	1K 1/6W CARBON RES.	
	R961	QRD161J-221	220 1/6W CARBON RES.	
	R962	QRD161J-102	1K 1/6W CARBON RES.	
	R963	QRD161J-222	2.2K 1/6W CARBON RES.	
	R964	QRD161J-221	220 1/6W CARBON RES.	
	R965	QRD161J-221	220 1/6W CARBON RES.	
	R966	QRD161J-221	220 1/6W CARBON RES.	
	R967	QRD161J-221	220 1/6W CARBON RES.	
	R968	QRD161J-221	220 1/6W CARBON RES.	
	R970	QRD167J-223	22K 1/6W CARBON RES.	
	R971	QRD161J-472	4.7K 1/6W CARBON RES.	
	R972	QRD161J-472	4.7K 1/6W CARBON RES.	
	R973	QRD161J-472	4.7K 1/6W CARBON RES.	
	R974	QRD161J-472	4.7K 1/6W CARBON RES.	
	R975	QRD161J-473	47K 1/6W CARBON RES.	
	R976	QRD161J-104	100K 1/6W CARBON RES.	
	R977	QRD161J-104	100K 1/6W CARBON RES.	
	R978	QRD161J-104	100K 1/6W CARBON RES.	
	R979	QRD161J-104	100K 1/6W CARBON RES.	
	R980	QRD167J-562	5.6K 1/6W CARBON RES.	
	R981	QRD161J-331	330 1/6W CARBON RES.	
	R982	QRD161J-103	10K 1/6W CARBON RES.	
	R983	QRD161J-103	10K 1/6W CARBON RES.	
	R984	QRD161J-103	10K 1/6W CARBON RES.	
	R985	QRD167J-152	1.5K 1/6W CARBON RES.	
	R986	QRD161J-331	330 1/6W CARBON RES.	
	R987	QRD161J-103	10K 1/6W CARBON RES.	
	R989	QRD161J-103	10K 1/6W CARBON RES.	
	R992	QRD161J-104	100K 1/6W CARBON RES.	
	R995	QRD161J-104	100K 1/6W CARBON RES.	
	R996	QRD167J-151	150 1/6W CARBON RES.	
	RA901	QRB069J-222	2.2K 1/10WNETWORK RES.	
	VR233	QVPA603-103A	10K TRIMMER RES.	
		OTHERS		
		EMW10685-102	PRINTED BOARD	
	J081	EMB10TV-401AJ3	SPEAKER TERMINAL	
	J082	EMN00TV-119AJ4	PIN JACK	
	J083	EMN00TV-303AJ4	PIN JACK	
	J801	QMS3R80-EE0S	HEADPHONE JACK	
	K801	ENZ8101-007	INDUCTOR	
	S801	ESP0001-023M	TACT SWITCH	
	S802	ESP0001-023M	TACT SWITCH	

■ Electrical Parts List (ENB-255M)

⚠	Item	Parts Number	Description	Area
	S803	ESP0001-023M	TACT SWITCH	
	S804	ESP0001-023M	TACT SWITCH	
	S805	ESP0001-023M	TACT SWITCH	
	S806	ESP0001-023M	TACT SWITCH	
	S807	ESP0001-023M	TACT SWITCH	
	S808	ESP0001-023M	TACT SWITCH	
	S809	ESP0001-023M	TACT SWITCH	
	S810	ESP0001-023M	TACT SWITCH	
	S811	ESP0001-023M	TACT SWITCH	
	S812	ESP0001-023M	TACT SWITCH	
	S813	ESP0001-023M	TACT SWITCH	
	S901	ESP0001-023M	TACT SWITCH	
	S902	ESP0001-023M	TACT SWITCH	
	S903	ESP0001-023M	TACT SWITCH	
	S904	ESP0001-023M	TACT SWITCH	
	S905	ESP0001-023M	TACT SWITCH	
	S906	ESP0001-023M	TACT SWITCH	
	S907	ESP0001-023M	TACT SWITCH	
	S908	ESP0001-023M	TACT SWITCH	
	S909	ESP0001-023M	TACT SWITCH	
	S910	ESP0001-023M	TACT SWITCH	
	S911	ESP0001-023M	TACT SWITCH	
	S912	ESP0001-023M	TACT SWITCH	
	S913	ESP0001-023M	TACT SWITCH	
	S914	ESP0001-023M	TACT SWITCH	
	S915	ESP0001-023M	TACT SWITCH	
	S916	ESP0001-023M	TACT SWITCH	
	S917	ESP0001-023M	TACT SWITCH	
	S918	ESP0001-023M	TACT SWITCH	
	S919	ESP0001-023M	TACT SWITCH	
	S920	ESP0001-023M	TACT SWITCH	
	S921	ESP0001-023M	TACT SWITCH	
	S922	ESP0001-023M	TACT SWITCH	
	S923	ESP0001-023M	TACT SWITCH	
	S924	ESP0001-023M	TACT SWITCH	
	S925	ESP0001-023M	TACT SWITCH	
	S926	ESP0001-023M	TACT SWITCH	
	X901	ECX0004-194KM	CERAMIC RESONATOR	
	X902	ECX0006-000KNJ	CRYSTAL	
	BK901	E309782-002SM	P.W.BOARD BRACKET	
	BK902	E310200-001SM	L.E.D.HOLDER	
	CN015	EMV5163-011R	CONNECT TERMINAL	
	CN101	EMV7163-012	CONNECT TERMINAL	
	CN121	EWS26C-A408	FLAT WIRE ASSY	
	CN301	EMV7172-014R	CONNECT TERMINAL	
	CN302	EMV7172-014R	CONNECT TERMINAL	
	CN313	VMC0314-S14	CONNECT TERMINAL	
	CN314	VMC0314-S08	CONNECT TERMINAL	
	CN401	VMC0163-R33	CONNECT TERMINAL	
	CN403	EMV7160-016	CONNECT TERMINAL	
	CN713	EMV7163-007	CONNECT TERMINAL	
	CN714	EMV7163-006	CONNECT TERMINAL	
	DI901	QLF0012-001	FLUORESCENT DISPLAY TUBE	
	FS901	E3400-439	FELT SPACER	
	FS902	E3400-439	FELT SPACER	
	FW401	VWSC12-083K3K	FLAT WIRE ASSY	
	FW402	EWR33D-25LS	FLAT WIRE	
	FW411	EWR37D-10LS	FLAT WIRE	
	JS801	QSJ4003-E01	PUSH SWITCH	
	RY001	ESK7D24-213R	RELAY	
	RY002	ESK7D24-213R	RELAY	
	SP901	VYH7653-001	LEAF SPRING	
	SP902	VYH7653-001	LEAF SPRING	
	TW001	EWT015-001	TERMINAL WIRE	

■ Electrical Parts List (ENC-139)

⚠	Item	Parts Number	Description	Area
		I.C.S		
	IC301	MN173222JAAX1	I.C(MICRO-COMPUTER)	
	IC302	BA15218N	I.C(MONO-ANALOG)	
	IC303	BA15218N	I.C(MONO-ANALOG)	
	IC304	BA3126N	I.C(MONO-ANALOG)	
	IC305	HA12206NT	I.C(MONO-ANALOG)	
	IC401	TDA7439	I.C(M)	
	IC402	BA15218	I.C(MONO-ANALOG)	
	IC403	BA15218	I.C(MONO-ANALOG)	
	IC405	BA15218	I.C(MONO-ANALOG)	
	IC406	LA2650	I.C(MONO-ANALOG)	
	IC407	BA15218	I.C(MONO-ANALOG)	
	IC501	LA2786	I.C(MONO-ANALOG)	
	IC541	LV1016	I.C(M)	
	IC561	TDA7439	I.C(M)	
	IC562	BA15218	I.C(MONO-ANALOG)	
		DIODES		
	D201	1SS133	SI.DIODE	
	D202	1SS133	SI.DIODE	
	D203	1SS133	SI.DIODE	
	D290	1SS133	SI.DIODE	
	D305	MTZ7.5JC	ZENER DIODE	
	D306	MTZ7.5JC	ZENER DIODE	
	D307	1SS133	SI.DIODE	
	D308	1SS133	SI.DIODE	
	D403	1SS133	SI.DIODE	
	D481	1SS133	SI.DIODE	
	D482	1SS133	SI.DIODE	
		TRANSISTORS		
	Q201	KRC107M-T	DIGITAL TRANSISTOR	
	Q321	2SD2144S(VW)	SI.TRANSISTOR	
	Q322	2SD2144S(VW)	SI.TRANSISTOR	
	Q323	KRA107M-T	DIGITAL TRANSISTOR	
	Q324	2SD2144S(VW)	SI.TRANSISTOR	
	Q325	2SD2144S(VW)	SI.TRANSISTOR	
	Q326	2SC1740S(R,S)	SI.TRANSISTOR	
	Q327	2SC1740S(R,S)	SI.TRANSISTOR	
	Q328	2SC1740S(R,S)	SI.TRANSISTOR	
	Q329	2SC1740S(R,S)	SI.TRANSISTOR	
	Q341	KRC107M-T	DIGITAL TRANSISTOR	
	Q342	KRC107M-T	DIGITAL TRANSISTOR	
	Q343	KRC107M-T	DIGITAL TRANSISTOR	
	Q401	2SD2144S(VW)	SI.TRANSISTOR	
	Q402	2SD2144S(VW)	SI.TRANSISTOR	
	Q403	KRA102M-T	DIGITAL TRANSISTOR	
	Q481	2SD2144S(VW)	SI.TRANSISTOR	
	Q482	2SD2144S(VW)	SI.TRANSISTOR	
	Q483	KRA102M-T	DIGITAL TRANSISTOR	
	Q491	KRC102M-T	DIGITAL TRANSISTOR	
	Q492	2SB1565(E,F)	SI.TRANSISTOR	
	Q501	2SD2144S(VW)	SI.TRANSISTOR	
	Q502	2SD2144S(VW)	SI.TRANSISTOR	
		CAPACITORS		
	C201	QETN1AM-227Z	220MF 10V E.CAP.	
	C202	QCZ0205-155	1.5MF 25V C.CAP.	
	C203	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C205	QCBB1HK-221Y	220PF 50V CER.CAP.	
	C206	QCBB1HK-221Y	220PF 50V CER.CAP.	
	C211	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C231	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C232	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C305	QCBB1HK-101Y	100PF 50V CER.CAP.	
	C306	QCBB1HK-101Y	100PF 50V CER.CAP.	
	C315	EETB1HM-105E	1MF 50V E.CAP.	
	C316	EETB1HM-105E	1MF 50V E.CAP.	
	C317	EETB1EM-106E	10MF 25V E.CAP.	
	C318	QETN1CM-107Z	100MF 16V E.CAP.	

⚠	Item	Parts Number	Description	Area
	C320	QFLB1HJ-682	6800PF 50V MYLAR CAP.	
	C321	QFLB1HJ-332	3300PF 50V MYLAR CAP.	
	C322	QFLB1HJ-332	3300PF 50V MYLAR CAP.	
	C323	QFLB1HJ-183	0.018MF 50V MYLAR CAP.	
	C324	QFP31HG-472	4700PF 50V POLYPROPY.FILM	
	C325	QCBB1HK-101Y	100PF 50V CER.CAP.	
	C326	QCBB1HK-101Y	100PF 50V CER.CAP.	
	C335	QCF21HP-472	4700PF 50V CER.CAP.	
	C336	QCF21HP-472	4700PF 50V CER.CAP.	
	C339	EETB1CM-476	47MF 16V E.CAP.	
	C340	EETB1CM-476	47MF 16V E.CAP.	
	C341	QFLB1HJ-472	4700PF 50V MYLAR CAP.	
	C342	QFLB1HJ-472	4700PF 50V MYLAR CAP.	
	C343	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C344	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C345	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C346	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C347	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C348	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C351	QCBB1HK-821Y	820PF 50V CER.CAP.	
	C352	QETB1HM-474N	0.47MF 50V E.CAP.	
	C353	QETN1HM-476Z	47MF 50V E.CAP.	
	C365	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C366	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C367	QFLB1HJ-822	8200PF 50V MYLAR CAP.	
	C368	QFLB1HJ-822	8200PF 50V MYLAR CAP.	
	C369	EETB1AM-107E	100MF 10V E.CAP.	
	C370	EETB1AM-107E	100MF 10V E.CAP.	
	C371	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C372	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C373	EETB1CM-476	47MF 16V E.CAP.	
	C374	QETC1EM-476ZM	47MF 25V E.CAP.	
	C375	QCBB1HK-101Y	100PF 50V CER.CAP.	
	C376	QCBB1HK-101Y	100PF 50V CER.CAP.	
	C377	QCXB1CM-122	1200PF 16V POLYPROPY.FILM	
	C378	QCXB1CM-122	1200PF 16V POLYPROPY.FILM	
	C379	QCBB1HK-331Y	330PF 50V CER.CAP.	
	C380	QCBB1HK-331Y	330PF 50V CER.CAP.	
	C381	EETB1CM-476	47MF 16V E.CAP.	
	C385	QFLB1HJ-822	8200PF 50V MYLAR CAP.	
	C386	QFLB1HJ-822	8200PF 50V MYLAR CAP.	
	C387	EETB1AM-107E	100MF 10V E.CAP.	
	C388	EETB1AM-107E	100MF 10V E.CAP.	
	C389	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C390	QETC1HM-225ZM	2.2MF 50V E.CAP.	
	C391	EETB1CM-476	47MF 16V E.CAP.	
	C392	EETB1CM-476	47MF 16V E.CAP.	
	C393	QCS21HJ-101A	100PF 50V CER.CAP.	
	C394	QCS21HJ-101A	100PF 50V CER.CAP.	
	C395	QCXB1CM-152Y	1500PF 16V CER.CAP.	
	C396	QCXB1CM-152Y	1500PF 16V CER.CAP.	
	C397	QCBB1HK-391Y	390PF 50V CER.CAP.	
	C398	QCBB1HK-391Y	390PF 50V CER.CAP.	
	C401	QFLB1HJ-472	4700PF 50V MYLAR CAP.	
	C402	QFLB1HJ-472	4700PF 50V MYLAR CAP.	
	C403	QFLB1HJ-102	1000PF 50V MYLAR CAP.	
	C404	QFLB1HJ-102	1000PF 50V MYLAR CAP.	
	C405	EETB1EM-106E	10MF 25V E.CAP.	
	C406	EETB1EM-106E	10MF 25V E.CAP.	
	C407	EETB1EM-106E	10MF 25V E.CAP.	
	C408	EETB1EM-106E	10MF 25V E.CAP.	
	C411	EETB1EM-106E	10MF 25V E.CAP.	
	C412	EETB1EM-106E	10MF 25V E.CAP.	
	C413	QCBB1HK-471Y	470PF 50V CER.CAP.	
	C414	QCBB1HK-471Y	470PF 50V CER.CAP.	
	C415	EETB1EM-106E	10MF 25V E.CAP.	
	C416	EETB1EM-106E	10MF 25V E.CAP.	

■ Electrical Parts List (ENC-139)

⚠	Item	Parts Number	Description	Area
	C417	EETB1EM-106E	10MF 25V E. CAP.	
	C418	EETB1EM-106E	10MF 25V E. CAP.	
	C419	EETB1EM-106E	10MF 25V E. CAP.	
	C420	QETN1AM-227Z	220MF 10V E. CAP.	
	C421	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C422	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C423	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C424	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C425	QFLB1HJ-183	0.018MF 50V MYLAR CAP.	
	C426	QFLB1HJ-183	0.018MF 50V MYLAR CAP.	
	C427	QFLB1HJ-223	0.022MF 50V MYLAR CAP.	
	C428	QFLB1HJ-223	0.022MF 50V MYLAR CAP.	
	C429	QFLB1HJ-562	5600PF 50V MYLAR CAP.	
	C430	QFLB1HJ-562	5600PF 50V MYLAR CAP.	
	C431	QETC1HM-225ZM	2.2MF 50V E. CAP.	
	C432	QETC1HM-225ZM	2.2MF 50V E. CAP.	
	C433	EETB1HM-105E	1MF 50V E. CAP.	
	C434	EETB1HM-105E	1MF 50V E. CAP.	
	C435	EETB1EM-106E	10MF 25V E. CAP.	
	C436	EETB1EM-106E	10MF 25V E. CAP.	
	C443	EETB1EM-106E	10MF 25V E. CAP.	
	C444	EETB1EM-106E	10MF 25V E. CAP.	
	C445	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C446	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C447	EETB1EM-106E	10MF 25V E. CAP.	
	C448	EETB1EM-106E	10MF 25V E. CAP.	
	C453	EETB1EM-106E	10MF 25V E. CAP.	
	C454	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C455	EETB1EM-106E	10MF 25V E. CAP.	
	C457	EETB1EM-106E	10MF 25V E. CAP.	
	C458	EETB1EM-106E	10MF 25V E. CAP.	
	C459	QFLB1HJ-333	0.033MF 50V MYLAR CAP.	
	C460	EETB1HM-475E	4.7MF 50V E. CAP.	
	C461	QETB1HM-474N	0.47MF 50V E. CAP.	
	C462	QFLB1HJ-393	0.039MF 50V MYLAR CAP.	
	C463	QETB1HM-474N	0.47MF 50V E. CAP.	
	C464	QETN1AM-227Z	220MF 10V E. CAP.	
	C465	QFLB1HJ-393	0.039MF 50V MYLAR CAP.	
	C466	QFLB1HJ-473	0.047MF 50V MYLAR CAP.	
	C467	EETB1HM-105E	1MF 50V E. CAP.	
	C468	QETC1EM-476ZM	47MF 25V E. CAP.	
	C469	EETB1EM-106E	10MF 25V E. CAP.	
	C470	EETB1EM-106E	10MF 25V E. CAP.	
	C471	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C472	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C473	QETC1EM-476ZM	47MF 25V E. CAP.	
	C474	QETC1EM-476ZM	47MF 25V E. CAP.	
	C475	EETB1EM-106E	10MF 25V E. CAP.	
	C476	EETB1EM-106E	10MF 25V E. CAP.	
	C477	EETB1HM-475E	4.7MF 50V E. CAP.	
	C481	QCBB1HK-221Y	220PF 50V CER. CAP.	
	C482	QCBB1HK-221Y	220PF 50V CER. CAP.	
	C483	QCXB1CM-222Y	2200PF 16V CER. CAP.	
	C484	QCBB1HK-101Y	100PF 50V CER. CAP.	
	C485	QETB1AM-107	100MF 10V AL E. CAP.	
	C489	QETB1CM-476	47MF 16V AL E. CAP.	
	C490	QETB1CM-476	47MF 16V AL E. CAP.	
	C493	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C494	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C495	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C496	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C501	EETB1EM-106E	10MF 25V E. CAP.	
	C502	EETB1EM-106E	10MF 25V E. CAP.	
	C503	QFLB1HJ-223	0.022MF 50V MYLAR CAP.	
	C504	QFLB1HJ-473	0.047MF 50V MYLAR CAP.	
	C505	QETN1AM-227Z	220MF 10V E. CAP.	
	C506	EETB1EM-106E	10MF 25V E. CAP.	

⚠	Item	Parts Number	Description	Area
	C507	EETB1EM-106E	10MF 25V E. CAP.	
	C508	EETB1EM-106E	10MF 25V E. CAP.	
	C509	EETB1EM-106E	10MF 25V E. CAP.	
	C510	QETN1AM-227Z	220MF 10V E. CAP.	
	C511	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C512	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C513	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C514	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C515	QETB1HM-474N	0.47MF 50V E. CAP.	
	C516	QETB1HM-474N	0.47MF 50V E. CAP.	
	C517	EETB1HM-475E	4.7MF 50V E. CAP.	
	C518	EETB1HM-475E	4.7MF 50V E. CAP.	
	C519	QETB1HM-474N	0.47MF 50V E. CAP.	
	C520	QETB1HM-474N	0.47MF 50V E. CAP.	
	C521	EETB1HM-475E	4.7MF 50V E. CAP.	
	C522	EETB1HM-475E	4.7MF 50V E. CAP.	
	C523	QFV81HJ-154	0.15MF 50V THIN FILM CAP.	
	C524	QFV81HJ-154	0.15MF 50V THIN FILM CAP.	
	C525	QETN1HM-335Z	3.3MF 50V AL E. CAP.	
	C526	QETN1HM-335Z	3.3MF 50V AL E. CAP.	
	C527	QFV81HJ-154	0.15MF 50V THIN FILM CAP.	
	C528	QFV81HJ-154	0.15MF 50V THIN FILM CAP.	
	C529	QFV71HJ-474ZM	0.47MF 50V THIN FILM CAP.	
	C530	QETC1EM-476ZM	47MF 25V E. CAP.	
	C531	QETN1CM-227ZS	220MF 16V E. CAP.	
	C532	QCBB1HK-681Y	680PF 50V CER. CAP.	
	C533	QCBB1HK-561Y	560PF 50V CER. CAP.	
	C535	QCBB1HK-561Y	560PF 50V CER. CAP.	
	C541	QETC1HM-225ZM	2.2MF 50V E. CAP.	
	C542	QETN1CM-227ZS	220MF 16V E. CAP.	
	C543	QCF21HP-473A	0.047MF 50V CER. CAP.	
	C544	QETB1HM-474N	0.47MF 50V E. CAP.	
	C545	QETB1HM-474N	0.47MF 50V E. CAP.	
	C546	QFLB1HJ-823	0.082MF 50V MYLAR CAP.	
	C547	QCY31HK-332Z	3300PF 50V CER. CAP.	
	C548	QFLB1HJ-823	0.082MF 50V MYLAR CAP.	
	C549	QETN1AM-227Z	220MF 10V E. CAP.	
	C550	QCF21HP-473A	0.047MF 50V CER. CAP.	
	C551	QCS21HJ-300	30PF 50V CER. CAP.	
	C552	QCS21HJ-300	30PF 50V CER. CAP.	
	C553	EETB1EM-106E	10MF 25V E. CAP.	
	C554	EETB1EM-106E	10MF 25V E. CAP.	
	C555	EETB1EM-106E	10MF 25V E. CAP.	
	C556	EETB1EM-106E	10MF 25V E. CAP.	
	C561	QETC1HM-225ZM	2.2MF 50V E. CAP.	
	C562	QETC1HM-225ZM	2.2MF 50V E. CAP.	
	C563	EETB1HM-105E	1MF 50V E. CAP.	
	C564	EETB1HM-105E	1MF 50V E. CAP.	
	C565	EETB1EM-106E	10MF 25V E. CAP.	
	C566	QETN1AM-227Z	220MF 10V E. CAP.	
	C569	EETB1EM-106E	10MF 25V E. CAP.	
	C570	EETB1EM-106E	10MF 25V E. CAP.	
		RESISTORS		
	R202	QRD161J-102	1K 1/6W CARBON RES.	
	R203	QRD161J-102	1K 1/6W CARBON RES.	
	R204	QRD161J-102	1K 1/6W CARBON RES.	
	R205	QRD161J-102	1K 1/6W CARBON RES.	
	R206	QRD161J-103	10K 1/6W CARBON RES.	
	R207	QRD161J-103	10K 1/6W CARBON RES.	
	R208	QRD161J-472	4.7K 1/6W CARBON RES.	
	R209	QRD167J-223	22K 1/6W CARBON RES.	
	R211	QRD161J-103	10K 1/6W CARBON RES.	
	R213	QRD161J-472	4.7K 1/6W CARBON RES.	
	R214	QRD161J-103	10K 1/6W CARBON RES.	
	R217	QRD161J-103	10K 1/6W CARBON RES.	
	R218	QRD161J-221	220 1/6W CARBON RES.	
	R231	QRD161J-183	18K 1/6W CARBON RES.	

■ Electrical Parts List (ENC-139)

⚠	Item	Parts Number	Description		Area
	R232	QRD161J-183	18K	1/6W CARBON RES.	
	R233	QRD167J-153	15K	1/6W CARBON RES.	
	R234	QRD167J-153	15K	1/6W CARBON RES.	
	R271	QRD161J-104	100K	1/6W CARBON RES.	
	R272	QRD161J-104	100K	1/6W CARBON RES.	
	R280	QRD161J-221	220	1/6W CARBON RES.	
	R281	QRD161J-224	220K	1/6W CARBON RES.	
	R282	QRD161J-224	220K	1/6W CARBON RES.	
	R283	QRD161J-100	10	1/6W CARBON RES.	
	R284	QRD161J-100	10	1/6W CARBON RES.	
	R285	QRD161J-393	39K	1/6W CARBON RES.	
	R286	QRD161J-393	39K	1/6W CARBON RES.	
	R287	QRD14CJ-6R8SX	6.8	1/4W UNF. CARBON R	
⚠	R288	QRD14CJ-100SX	10	1/4W UNF. CARBON R	
	R290	QRD167J-332	3.3K	1/6W CARBON RES.	
	R292	QRD161J-181	180	1/6W CARBON RES.	
	R293	QRD167J-511	510	1/6W CARBON RES.	
	R294	QRD161J-561	560	1/6W CARBON RES.	
	R296	QRD161J-104	100K	1/6W CARBON RES.	
	R297	QRD161J-222	2.2K	1/6W CARBON RES.	
	R335	QRD161J-102	1K	1/6W CARBON RES.	
	R336	QRD161J-102	1K	1/6W CARBON RES.	
	R337	QRD161J-102	1K	1/6W CARBON RES.	
	R338	QRD161J-102	1K	1/6W CARBON RES.	
	R339	QRD161J-393	39K	1/6W CARBON RES.	
	R340	QRD161J-393	39K	1/6W CARBON RES.	
	R341	QRD167J-272	2.7K	1/6W CARBON RES.	
	R342	QRD167J-272	2.7K	1/6W CARBON RES.	
	R343	QRD167J-223	22K	1/6W CARBON RES.	
	R344	QRD161J-563	56K	1/6W CARBON RES.	
	R345	QRD161J-184	180K	1/6W CARBON RES.	
	R346	QRD161J-105	1M	1/6W CARBON RES.	
	R347	QRD161J-221	220	1/6W CARBON RES.	
	R348	QRD161J-221	220	1/6W CARBON RES.	
	R349	QRD161J-102	1K	1/6W CARBON RES.	
	R351	QRD161J-472	4.7K	1/6W CARBON RES.	
	R352	QRD161J-472	4.7K	1/6W CARBON RES.	
	R353	QRD167J-223	22K	1/6W CARBON RES.	
	R354	QRD167J-223	22K	1/6W CARBON RES.	
	R355	QRD161J-103	10K	1/6W CARBON RES.	
	R356	QRD161J-103	10K	1/6W CARBON RES.	
	R357	QRD167J-223	22K	1/6W CARBON RES.	
	R358	QRD167J-223	22K	1/6W CARBON RES.	
	R359	QRD161J-103	10K	1/6W CARBON RES.	
	R360	QRD161J-103	10K	1/6W CARBON RES.	
	R361	QRD167J-562	5.6K	1/6W CARBON RES.	
	R362	QRD167J-562	5.6K	1/6W CARBON RES.	
	R367	QRD161J-224	220K	1/6W CARBON RES.	
	R368	QRD161J-224	220K	1/6W CARBON RES.	
	R371	QRD161J-163	16K	1/6W CARBON RES.	
	R372	QRD161J-163	16K	1/6W CARBON RES.	
	R377	QRD161J-221	220	1/6W CARBON RES.	
	R378	QRD161J-221	220	1/6W CARBON RES.	
	R381	QRD161J-221	220	1/6W CARBON RES.	
	R382	QRD161J-221	220	1/6W CARBON RES.	
	R385	QRD161J-224	220K	1/6W CARBON RES.	
	R386	QRD161J-224	220K	1/6W CARBON RES.	
	R391	QRD161J-163	16K	1/6W CARBON RES.	
	R392	QRD161J-163	16K	1/6W CARBON RES.	
	R401	QRD161J-222	2.2K	1/6W CARBON RES.	
	R402	QRD161J-222	2.2K	1/6W CARBON RES.	
	R403	QRD161J-222	2.2K	1/6W CARBON RES.	
	R404	QRD161J-222	2.2K	1/6W CARBON RES.	
	R405	QRD167J-152	1.5K	1/6W CARBON RES.	
	R406	QRD167J-152	1.5K	1/6W CARBON RES.	
	R407	QRD167J-562	5.6K	1/6W CARBON RES.	
	R408	QRD167J-562	5.6K	1/6W CARBON RES.	

⚠	Item	Parts Number	Description		Area
	R409	QRD161J-472	4.7K	1/6W CARBON RES.	
	R410	QRD161J-472	4.7K	1/6W CARBON RES.	
	R411	QRD167J-562	5.6K	1/6W CARBON RES.	
	R412	QRD167J-562	5.6K	1/6W CARBON RES.	
	R413	QRD161J-102	1K	1/6W CARBON RES.	
	R414	QRD161J-102	1K	1/6W CARBON RES.	
	R415	QRD161J-823	82K	1/6W CARBON RES.	
	R416	QRD161J-823	82K	1/6W CARBON RES.	
	R417	QRD167J-562	5.6K	1/6W CARBON RES.	
	R418	QRD167J-562	5.6K	1/6W CARBON RES.	
	R419	QRD167J-272	2.7K	1/6W CARBON RES.	
	R420	QRD167J-272	2.7K	1/6W CARBON RES.	
	R421	QRD161J-104	100K	1/6W CARBON RES.	
	R422	QRD161J-104	100K	1/6W CARBON RES.	
	R431	QRD161J-104	100K	1/6W CARBON RES.	
	R432	QRD161J-104	100K	1/6W CARBON RES.	
	R433	QRD167J-562	5.6K	1/6W CARBON RES.	
	R434	QRD167J-562	5.6K	1/6W CARBON RES.	
	R435	QRD161J-392	3.9K	1/6W CARBON RES.	
	R436	QRD161J-392	3.9K	1/6W CARBON RES.	
	R437	QRD161J-472	4.7K	1/6W CARBON RES.	
	R438	QRD161J-472	4.7K	1/6W CARBON RES.	
	R439	QRD161J-432	4.3K	1/6W CARBON RES.	
	R440	QRD161J-432	4.3K	1/6W CARBON RES.	
	R441	QRD161J-104	100K	1/6W CARBON RES.	
	R442	QRD161J-104	100K	1/6W CARBON RES.	
	R445	QRD161J-303Y	30K	1/6W CARBON RES.	
	R446	QRD161J-303Y	30K	1/6W CARBON RES.	
	R447	QRD167J-153	15K	1/6W CARBON RES.	
	R448	QRD161J-104	100K	1/6W CARBON RES.	
	R450	QRD161J-224	220K	1/6W CARBON RES.	
	R451	QRD161J-104	100K	1/6W CARBON RES.	
	R452	QRD161J-104	100K	1/6W CARBON RES.	
	R453	QRD161J-104	100K	1/6W CARBON RES.	
	R454	QRD161J-104	100K	1/6W CARBON RES.	
	R455	QRD161J-103	10K	1/6W CARBON RES.	
	R456	QRD161J-103	10K	1/6W CARBON RES.	
	R457	QRD167J-562	5.6K	1/6W CARBON RES.	
	R458	QRD167J-562	5.6K	1/6W CARBON RES.	
	R459	QRD161J-104	100K	1/6W CARBON RES.	
	R460	QRD161J-104	100K	1/6W CARBON RES.	
	R461	QRD161J-221	220	1/6W CARBON RES.	
	R462	QRD161J-221	220	1/6W CARBON RES.	
	R463	QRD161J-103	10K	1/6W CARBON RES.	
	R464	QRD161J-103	10K	1/6W CARBON RES.	
	R465	QRD161J-102	1K	1/6W CARBON RES.	
	R469	QRD161J-221	220	1/6W CARBON RES.	
	R470	QRD161J-221	220	1/6W CARBON RES.	
	R471	QRD161J-103	10K	1/6W CARBON RES.	
	R472	QRD161J-103	10K	1/6W CARBON RES.	
	R473	QRD161J-103	10K	1/6W CARBON RES.	
	R481	QRD161J-222	2.2K	1/6W CARBON RES.	
	R482	QRD161J-222	2.2K	1/6W CARBON RES.	
	R483	QRD161J-221	220	1/6W CARBON RES.	
	R484	QRD161J-221	220	1/6W CARBON RES.	
	R485	QRD161J-103	10K	1/6W CARBON RES.	
	R486	QRD161J-103	10K	1/6W CARBON RES.	
	R491	QRD161J-471	470	1/6W CARBON RES.	
	R492	QRD161J-103	10K	1/6W CARBON RES.	
	R493	QRD167J-113	11K	1/6W CARBON RES.	
	R494	QRD167J-113	11K	1/6W CARBON RES.	
	R497	QRD161J-104	100K	1/6W CARBON RES.	
	R498	QRD161J-104	100K	1/6W CARBON RES.	
	R501	QRD161J-102	1K	1/6W CARBON RES.	
	R502	QRD161J-102	1K	1/6W CARBON RES.	
	R541	QRD161J-105	1M	1/6W CARBON RES.	
	R542	QRD161J-393	39K	1/6W CARBON RES.	

■ Electrical Parts List (ENC-139)

⚠	Item	Parts Number	Description	Area
	R543	QRD161J-102	1K 1/6W CARBON RES.	
	R544	QRD161J-102	1K 1/6W CARBON RES.	
	R545	QRD161J-203	20K 1/6W CARBON RES.	
	R553	QRD161J-104	100K 1/6W CARBON RES.	
	R554	QRD161J-104	100K 1/6W CARBON RES.	
	R555	QRD161J-104	100K 1/6W CARBON RES.	
	R556	QRD161J-104	100K 1/6W CARBON RES.	
	R561	QRD161J-473	47K 1/6W CARBON RES.	
	R562	QRD161J-473	47K 1/6W CARBON RES.	
	R563	QRD161J-103	10K 1/6W CARBON RES.	
	R564	QRD161J-103	10K 1/6W CARBON RES.	
	R565	QRD161J-132	1.3K 1/6W CARBON RES.	
	R566	QRD161J-132	1.3K 1/6W CARBON RES.	
	R567	QRD161J-104	100K 1/6W CARBON RES.	
	R568	QRD161J-104	100K 1/6W CARBON RES.	
	R569	QRD161J-221	220 1/6W CARBON RES.	
	R570	QRD161J-221	220 1/6W CARBON RES.	
	R571	QRD161J-103	10K 1/6W CARBON RES.	
	R572	QRD161J-103	10K 1/6W CARBON RES.	
	VR231	QVPA603-503A	50K VARIABLE RES.	
	VR232	QVPA603-503A	50K VARIABLE RES.	
	VR301	QVPA603-102AZA	1K TRIMMER RES.	
	VR302	QVPA603-102AZA	1K TRIMMER RES.	
	VR303	QVPA603-102AZA	1K TRIMMER RES.	
	VR304	QVPA603-102AZA	1K TRIMMER RES.	
	VR305	QVPA603-104A	100K TRIMMER RES.	
	VR306	QVPA603-104A	100K TRIMMER RES.	
	VR307	QVPA603-104A	100K TRIMMER RES.	
	VR308	QVPA603-104A	100K TRIMMER RES.	
	VR309	QVPA603-104A	100K TRIMMER RES.	
	VR310	QVPA603-104A	100K TRIMMER RES.	
		OTHERS		
		EMW10686-102	PRINTED BOARD	
	J401	EMN00TV-414AJ2	4P PIN JACK	
	J701	EMV7145-004Z	SOCKET ASSY	
	J702	EMV7145-003Z	SOCKET ASSY	
	L301	ENZ6002-012	OSCILLATOR COIL	
	L305	EQL2106-223	INDUCTOR	
	L306	EQL2106-223	INDUCTOR	
	X201	ECX0060-000EM	CERAMIC RESONATOR	
	X541	ECXP8R0-001Z	CRYSTAL	
	CN016	EMV5163-010R	CONNECT TERMINAL	
	CN017	EMV5163-009R	CONNECT TERMINAL	
	CN131	EMV5109-012A	MALE CONNECTOR	
	CN311	EMV5172-014B	CONNECT TERMINAL	
	CN312	EMV5172-014B	CONNECT TERMINAL	
	CN322	VMC0163-016	CONNECT TERMINAL	
	CN331	EMV7155-106R	CONNECT TERMINAL	
	CN332	EMV7155-106R	CONNECT TERMINAL	
	CN402	VMC0163-017	CONNECT TERMINAL	
	CN411	VMC0163-033	CONNECT TERMINAL	
	CN412	VMC0163-017	CONNECT TERMINAL	
	CN613	VMC0163-007	CONNECT TERMINAL	
	CN614	VMC0163-011	CONNECT TERMINAL	
	CN811	VMC0163-010	AC CONNECTOR	
⚠	CP401	ICP-N15	I.C.PROTECTOR	
	EP003	E409182-001SM	EARTH TERMINAL	
	FS101	E3400-431	FELT SPACER	
	FS102	E3400-431	FELT SPACER	
	FS485	E3400-431	FELT SPACER	
	SP301	VYH7653-001	LEAF SPRING	
	TW101	QWE351-11RR	VINYL WIRE	

■ Electrical Parts List (ENN-488M)

⚠	Item	Parts Number	Description	Area
		I.C.S		
	IC601	AN8806SB	I.C(MONO-ANALOG)	
	IC602	BA6897FPW	I.C(MONO-ANALOG)	
	IC603	MN35510-S	I.C(M)	
		DIODES		
	D631	MTZ5.6JB	ZENER DIODE	
		TRANSISTORS		
	Q601	2SA952(L,K)	SI.TRANSISTOR	
	Q632	2SC2060(Q,R)	SI.TRANSISTOR	
		CAPACITORS		
	C602	QCZ0205-155	1.5MF 25V C.CAP.	
	C603	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C605	EETB1EM-106E	10MF 25V E.CAP.	
	C606	QCBB1HK-102Y	1000PF 50V CER.CAP.	
	C607	QCBB1HK-102Y	1000PF 50V CER.CAP.	
	C608	EETB1HM-105E	1MF 50V E.CAP.	
	C609	QCBB1HK-101Y	100PF 50V CER.CAP.	
	C610	QFLB1HJ-273	0.027MF 50V MYLAR CAP.	
	C611	QCXB1CM-472Y	4700PF 16V CER.CAP.	
	C612	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C613	QCBB1HK-331Y	330PF 50V CER.CAP.	
	C614	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C615	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C616	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C617	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C618	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C619	QCBB1HK-271Y	270PF 50V CER.CAP.	
	C620	QCSB1HJ-470	47PF 50V CER.CAP.	
	C621	QCBB1HK-102Y	1000PF 50V CER.CAP.	
	C622	QCF21HP-223A	0.022MF 50V CER.CAP.	
	C623	QFLB1HJ-104	0.1MF 50V MYLAR CAP.	
	C625	QCZ0205-155	1.5MF 25V C.CAP.	
	C630	QETN1AM-226ZS	22MF 10V E.CAP.	
	C631	QETN1AM-477Z	470MF 10V E.CAP.	
	C632	QEK61AM-227ZM	220MF 10V AL E.CAP.	
	C636	EETB1AM-107E	100MF 10V E.CAP.	
	C641	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C642	QFLB1HJ-103	0.01MF 50V MYLAR CAP.	
	C651	QCSB1HJ-120Y	12PF 50V CER.CAP.	
	C652	QCSB1HJ-120Y	12PF 50V CER.CAP.	
	C653	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C655	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	
	C661	QCBB1HK-471Y	470PF 50V CER.CAP.	
	C662	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	
	C663	QFLB1HJ-223	0.022MF 50V MYLAR CAP.	
	C664	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C665	QFV81HJ-104	0.1MF 50V THIN FILM CAP.	
	C671	QCXB1CM-222Y	2200PF 16V CER.CAP.	
	C672	QCXB1CM-222Y	2200PF 16V CER.CAP.	
	C674	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C675	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C679	QEK51AM-107	100MF 10V AL E.CAP.	
	C693	QEK61AM-227ZM	220MF 10V AL E.CAP.	
	C694	QCHB1EZ-223	0.022MF 25V CER.CAP.	
		RESISTORS		
	R601	QRD161J-123	12K 1/6W CARBON RES.	
	R603	QRD161J-125	1.2M 1/6W CARBON RES.	
	R605	QRD161J-274	270K 1/6W CARBON RES.	
	R606	QRD167J-154	150K 1/6W CARBON RES.	
	R607	QRD161J-273	27K 1/6W CARBON RES.	
	R609	QRD161J-114	110K 1/6W CARBON RES.	
	R610	QRD161J-104	100K 1/6W CARBON RES.	
	R611	QRD161J-473	47K 1/6W CARBON RES.	
	R612	QRD167J-822	8.2K 1/6W CARBON RES.	

⚠	Item	Parts Number	Description	Area
	R613	QRD167J-121	120 1/6W CARBON RES.	
	R614	QRD161J-100	10 1/6W CARBON RES.	
	R615	QRD161J-120	12 1/6W CARBON RES.	
	R616	QRD161J-910Y	91 1/6W CARBON RES.	
	R632	QRD167J-151	150 1/6W CARBON RES.	
	R641	QRD161J-683	68K 1/6W CARBON RES.	
	R642	QRD161J-222	2.2K 1/6W CARBON RES.	
	R643	QRD167J-822	8.2K 1/6W CARBON RES.	
	R644	QRD167J-223	22K 1/6W CARBON RES.	
	R645	QRD167J-223	22K 1/6W CARBON RES.	
	R646	QRD161J-222	2.2K 1/6W CARBON RES.	
	R647	QRD161J-472	4.7K 1/6W CARBON RES.	
	R650	QRD161J-182	1.8K 1/6W CARBON RES.	
	R651	QRD161J-102	1K 1/6W CARBON RES.	
	R652	QRD161J-102	1K 1/6W CARBON RES.	
	R653	QRD161J-102	1K 1/6W CARBON RES.	
	R660	QRD161J-102	1K 1/6W CARBON RES.	
	R661	QRD161J-683	68K 1/6W CARBON RES.	
	R662	QRD167J-275	2.7M 1/6W CARBON RES.	
	R663	QRD161J-124	120K 1/6W CARBON RES.	
	R664	QRD161J-471	470 1/6W CARBON RES.	
	R666	QRD161J-220	22 1/6W CARBON RES.	
	R667	QRD161J-220	22 1/6W CARBON RES.	
	R671	QRD161J-102	1K 1/6W CARBON RES.	
	R672	QRD161J-102	1K 1/6W CARBON RES.	
	R692	QRD161J-271	270 1/6W CARBON RES.	
		OTHERS		
		EMW10688-003A	PRINTED BOARD	
	X651	ECX0169-344EF	CRYSTAL	
	CN601	EMV7171-115R	CONNECT TERMINAL	
	CN602	EMV5109-006A	CONNECT TERMINAL	
	CN603	VMC0163-R07	CONNECT TERMINAL	
	CN604	VMC0163-R11	CONNECT TERMINAL	
	SP601	VYH7237-001	I.C.COVER	
	SP602	VYH7237-003	I.C.COVER	
	SP603	VYH7237-003	I.C.COVER	
	TP601	QMV5004-002K	PLUG ASSY	
	TW601	EWF102-047	TERMINAL WIRE	

■ Electrical Parts List (ENA-178AM)

⚠	Item	Parts Number	Description	Area
		I.C.S		
	IC102	LA1837	I.C(MONO-ANALOG)	
	IC121	LC72131	I.C(M)	
		DIODES		
	D121	1SS133	SI.DIODE	
	D123	1SS133	SI.DIODE	
	D129	1SS133	SI.DIODE	
	D130	MTZ10JC	ZENER DIODE	
		TRANSISTORS		
	Q101	2SC461	SI.TRANSISTOR	
	Q102	2SC535	SI.TRANSISTOR	
	Q103	2SC461	SI.TRANSISTOR	
	Q121	DTA124ES	DIGITAL TRANSISTOR	
	Q123	2SC2060(Q,R)	SI.TRANSISTOR	
		CAPACITORS		
	C101	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C102	QETN1EM-107Z	100MF 25V E.CAP.	
	C103	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C104	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C105	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C107	QETN1EM-226Z	22MF 25V E.CAP.	
	C109	QETN1EM-226Z	22MF 25V E.CAP.	
	C111	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C112	QCT30CH-120Y	12PF 50V CER.CAP.	
	C117	QCSB1HK-5R6Y	5.6PF 50V CER.CAP.	
	C118	QCSB1HJ-150Y	15PF 50V CER.CAP.	
	C121	QCT30CH-180Y	18PF 50V CER.CAP.	
	C122	QCT30CH-180Y	18PF 50V CER.CAP.	
	C123	QCC21EM-473	0.047MF 25V CER.CAP.	
	C126	QCBB1HK-101Y	100PF 50V CER.CAP.	
	C128	QENB1HM-474	0.47MF 50V NP E.CAP.	
	C129	QCGB1HK-102	1000PF 50V CER.CAP.	
	C130	QETN1EM-107Z	100MF 25V E.CAP.	
	C133	QETN1EM-226Z	22MF 25V E.CAP.	
	C134	QCBB1HK-331Y	330PF 50V CER.CAP.	
	C135	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C136	QETN1HM-105Z	1MF 50V AL E.CAP.	
	C137	QCBB1HK-681Y	680PF 50V CER.CAP.	
	C139	QFLB1HJ-333	0.033MF 50V MYLAR CAP.	
	C140	QFLB1HJ-333	0.033MF 50V MYLAR CAP.	
	C141	QCC21EM-473	0.047MF 25V CER.CAP.	
	C143	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C144	QCC21EM-473	0.047MF 25V CER.CAP.	
	C146	QETN1HM-105Z	1MF 50V AL E.CAP.	
	C147	QETN1HM-105Z	1MF 50V AL E.CAP.	
	C148	QETN1HM-474Z	0.47MF 50V AL E.CAP.	
	C149	QETN1HM-105Z	1MF 50V AL E.CAP.	
	C150	QETN1EM-226Z	22MF 25V E.CAP.	
	C156	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C157	QCC21EM-473	0.047MF 25V CER.CAP.	
	C158	QETN1EM-226Z	22MF 25V E.CAP.	
	C161	QETN1HM-105Z	1MF 50V AL E.CAP.	
	C162	QETN1HM-105Z	1MF 50V AL E.CAP.	
	C163	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C164	QCC21EM-473	0.047MF 25V CER.CAP.	
	C168	QFV81HJ-274	0.27MF 50V THIN FILM CAP.	
	C180	QETN1EM-107Z	100MF 25V E.CAP.	
	C181	QFLB1HJ-562	5600PF 50V MYLAR CAP.	
	C182	QFLB1HJ-562	5600PF 50V MYLAR CAP.	
	C183	QCHB1EZ-223	0.022MF 25V CER.CAP.	
	C184	QETN1EM-107Z	100MF 25V E.CAP.	
	C185	QETN1HM-105Z	1MF 50V AL E.CAP.	
	C186	QETN1HM-105Z	1MF 50V AL E.CAP.	
		RESISTORS		

⚠	Item	Parts Number	Description	Area
	R102	QRD167J-332	3.3K 1/6W CARBON RES.	
	R103	QRD161J-221	220 1/6W CARBON RES.	
	R104	QRD167J-272	2.7K 1/6W CARBON RES.	
	R105	QRD161J-391	390 1/6W CARBON RES.	
	R106	QRD161J-102	1K 1/6W CARBON RES.	
	R107	QRD161J-561	560 1/6W CARBON RES.	
	R108	QRD167J-332	3.3K 1/6W CARBON RES.	
	R109	QRD161J-221	220 1/6W CARBON RES.	
	R115	QRD161J-104	100K 1/6W CARBON RES.	
	R119	QRD161J-103	10K 1/6W CARBON RES.	
	R121	QRD161J-473	47K 1/6W CARBON RES.	
	R122	QRD161J-472	4.7K 1/6W CARBON RES.	
	R124	QRD161J-222	2.2K 1/6W CARBON RES.	
	R126	QRD167J-562	5.6K 1/6W CARBON RES.	
	R127	QRD167J-822	8.2K 1/6W CARBON RES.	
	R128	QRD161J-472	4.7K 1/6W CARBON RES.	
	R129	QRD161J-222	2.2K 1/6W CARBON RES.	
⚠	R130	QRD14GJ-680SX	68 1/4W UNF.CARBON R	
	R132	QRD161J-102	1K 1/6W CARBON RES.	
	R133	QRD167J-822	8.2K 1/6W CARBON RES.	
	R134	QRD161J-102	1K 1/6W CARBON RES.	
	R140	QRD161J-183	18K 1/6W CARBON RES.	
	R141	QRD161J-472	4.7K 1/6W CARBON RES.	
	R142	QRD161J-470	47 1/6W CARBON RES.	
	R143	QRD167J-562	5.6K 1/6W CARBON RES.	
	R144	QRD167J-332	3.3K 1/6W CARBON RES.	
	R145	QRD161J-103	10K 1/6W CARBON RES.	
	R146	QRD167J-332	3.3K 1/6W CARBON RES.	
	R147	QRD167J-153	15K 1/6W CARBON RES.	
	R148	QRD161J-561	560 1/6W CARBON RES.	
	R150	QRD161J-101	100 1/6W CARBON RES.	
	R157	QRD167J-682	6.8K 1/6W CARBON RES.	
	R158	QRD167J-682	6.8K 1/6W CARBON RES.	
	R161	QRD161J-102	1K 1/6W CARBON RES.	
	R162	QRD161J-102	1K 1/6W CARBON RES.	
	R163	QRD161J-472	4.7K 1/6W CARBON RES.	
	R164	QRD161J-472	4.7K 1/6W CARBON RES.	
	R181	QRD161J-102	1K 1/6W CARBON RES.	
	R182	QRD161J-103	10K 1/6W CARBON RES.	
	R183	QRD161J-103	10K 1/6W CARBON RES.	
	R184	QRD161J-103	10K 1/6W CARBON RES.	
		OTHERS		
		EMW10684-003A	PRINTED BOARD	
	L111	EQL4007-150T	INDUCTOR	
	T111	EQR7121-007	RF COIL	
	T141	QQR0613-001	I.F.TRANSFORMER	
	T142	QAX0303-001	CERAMIC FILTER	
	X121	ECX0007-200KWJ1	CRYSTAL	
	AT101	FMMB10YV-401K	ANTENNA TERMINAL	
	CF101	QAX0284-001Z	CERAMIC FILTER	
	CF102	QAX0284-001Z	CERAMIC FILTER	
	CN111	EMV5163-012R	CONNECT TERMINAL	
	FL141	EQF0101-013	LOWPASS FILTER	
	FL142	EQF0101-013	LOWPASS FILTER	
	RF101	EAF2207-001	FRONT END	

■ Electrical Parts List (Changer Control P.C.Board)

⚠	Item	Parts Number	Description	Area
		I.C.S		
	IC801	UPD65612GB-208	I.C(M)	
	IC802	TA8409S	I.C(MONO-ANALOG)	
	IC803	TA8409S	I.C(MONO-ANALOG)	
		CAPACITORS		
	C801	QEK51AM-107	AL E.CAP.	
	C802	QEK51EM-475	AL E.CAP.	
	C803	QFLB1HJ-102	1000PF 50V MYLAR CAP.	
	C804	QCFB1HZ-104Y	0.1MF 50V CER.CAP.	
	C805	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C806	QEK51CM-476	AL E.CAP.	
	C808	QFLB1HJ-102	1000PF 50V MYLAR CAP.	
	C810	QCZ0205-155	1.5MF 25V C.CAP.	
	C811	QCZ0205-155	1.5MF 25V C.CAP.	
	C813	QCVB1CM-103Y	0.01MF 16V CER.CAP.	
	C821	QCBB1HK-102Y	1000PF 50V CER.CAP.	
		RESISTORS		
	R805	QRD161J-102	1K 1/6W CARBON RES.	
	R806	QRD161J-471	470 1/6W CARBON RES.	
	R807	QRD161J-471	470 1/6W CARBON RES.	
	R808	QRD161J-102	1K 1/6W CARBON RES.	
	R810	QRD161J-684	680K 1/6W CARBON RES.	
	R811	QRD161J-105	1M 1/6W CARBON RES.	
	R813	QRD161J-102	1K 1/6W CARBON RES.	
	R814	QRD161J-102	1K 1/6W CARBON RES.	
	R815	QRD161J-102	1K 1/6W CARBON RES.	
	R816	QRD161J-102	1K 1/6W CARBON RES.	
	R817	QRD161J-102	1K 1/6W CARBON RES.	
	R818	QRD161J-102	1K 1/6W CARBON RES.	
	R819	QRD161J-102	1K 1/6W CARBON RES.	
	R820	QRD161J-102	1K 1/6W CARBON RES.	
	R821	QRD161J-102	1K 1/6W CARBON RES.	
	R822	QRD161J-102	1K 1/6W CARBON RES.	
	R823	QRD161J-102	1K 1/6W CARBON RES.	
	R824	QRD161J-102	1K 1/6W CARBON RES.	
	R825	QRD161J-102	1K 1/6W CARBON RES.	
	R826	QRD161J-102	1K 1/6W CARBON RES.	
	R827	QRD161J-102	1K 1/6W CARBON RES.	
	R828	QRD161J-102	1K 1/6W CARBON RES.	
	R829	QRD161J-102	1K 1/6W CARBON RES.	
	R830	QRD161J-102	1K 1/6W CARBON RES.	
	R832	QRD161J-181	180 1/6W CARBON RES.	
	R833	QRD161J-102	1K 1/6W CARBON RES.	
	R834	QRD161J-102	1K 1/6W CARBON RES.	
	R839	QRD167J-332	3.3K 1/6W CARBON RES.	
	R840	QRD167J-562	5.6K 1/6W CARBON RES.	
		OTHERS		
		VMW1377-004X	PW BOARD	
		SBSF2608Z	TAPPING SCREW	
		VYH7237-001SS	IC HOLDER	
	L801	VQP0018-100	INDUCTOR	
	L802	VQP0033-100Z	INDUCTOR	
	L803	VQP0033-100Z	INDUCTOR	
	L804	VQP0033-100Z	INDUCTOR	
	CN801	VMC0163-R10	CONNECT TERMINAL	
	CN802	VMC0289-P07	CONNECT TERMINAL	
	CN803	VMC0324-12310	CONNECT TERMINAL	
	CN804	VMC0289-S07K	CONNECTOR	

Accessories List

Block No. M5MM

⚠	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	E30580-2547A	INSTRUCTION BOOK	1		J
		E30580-2548A	INSTRUCTION BOOK	1		C
	2	E309758-003	ENVELOPE	1		
	3	EQB4001-015	LOOP ANTENNA	1		
	4	LET0065-001A	INST SHEET	1		
	5	BT-20071B	SERVICE NETWORK	1		C
	6	BT-51006-1	REGISTER CARD	1		J
	7	BT-52002-1	WARRANTY CARD	1		C
	8	EWP201-011	ANTENNA WIRE	1		
	9	BT-20044G	SAFETY SHEET	1		J
	10	RM-SED70TU	WIRE-LESS REMOTE CONTROL	1		
	11	R6SPTT-2ST	DRY CELL	1		

Packing Materials and Part Numbers

Block No. M6MM

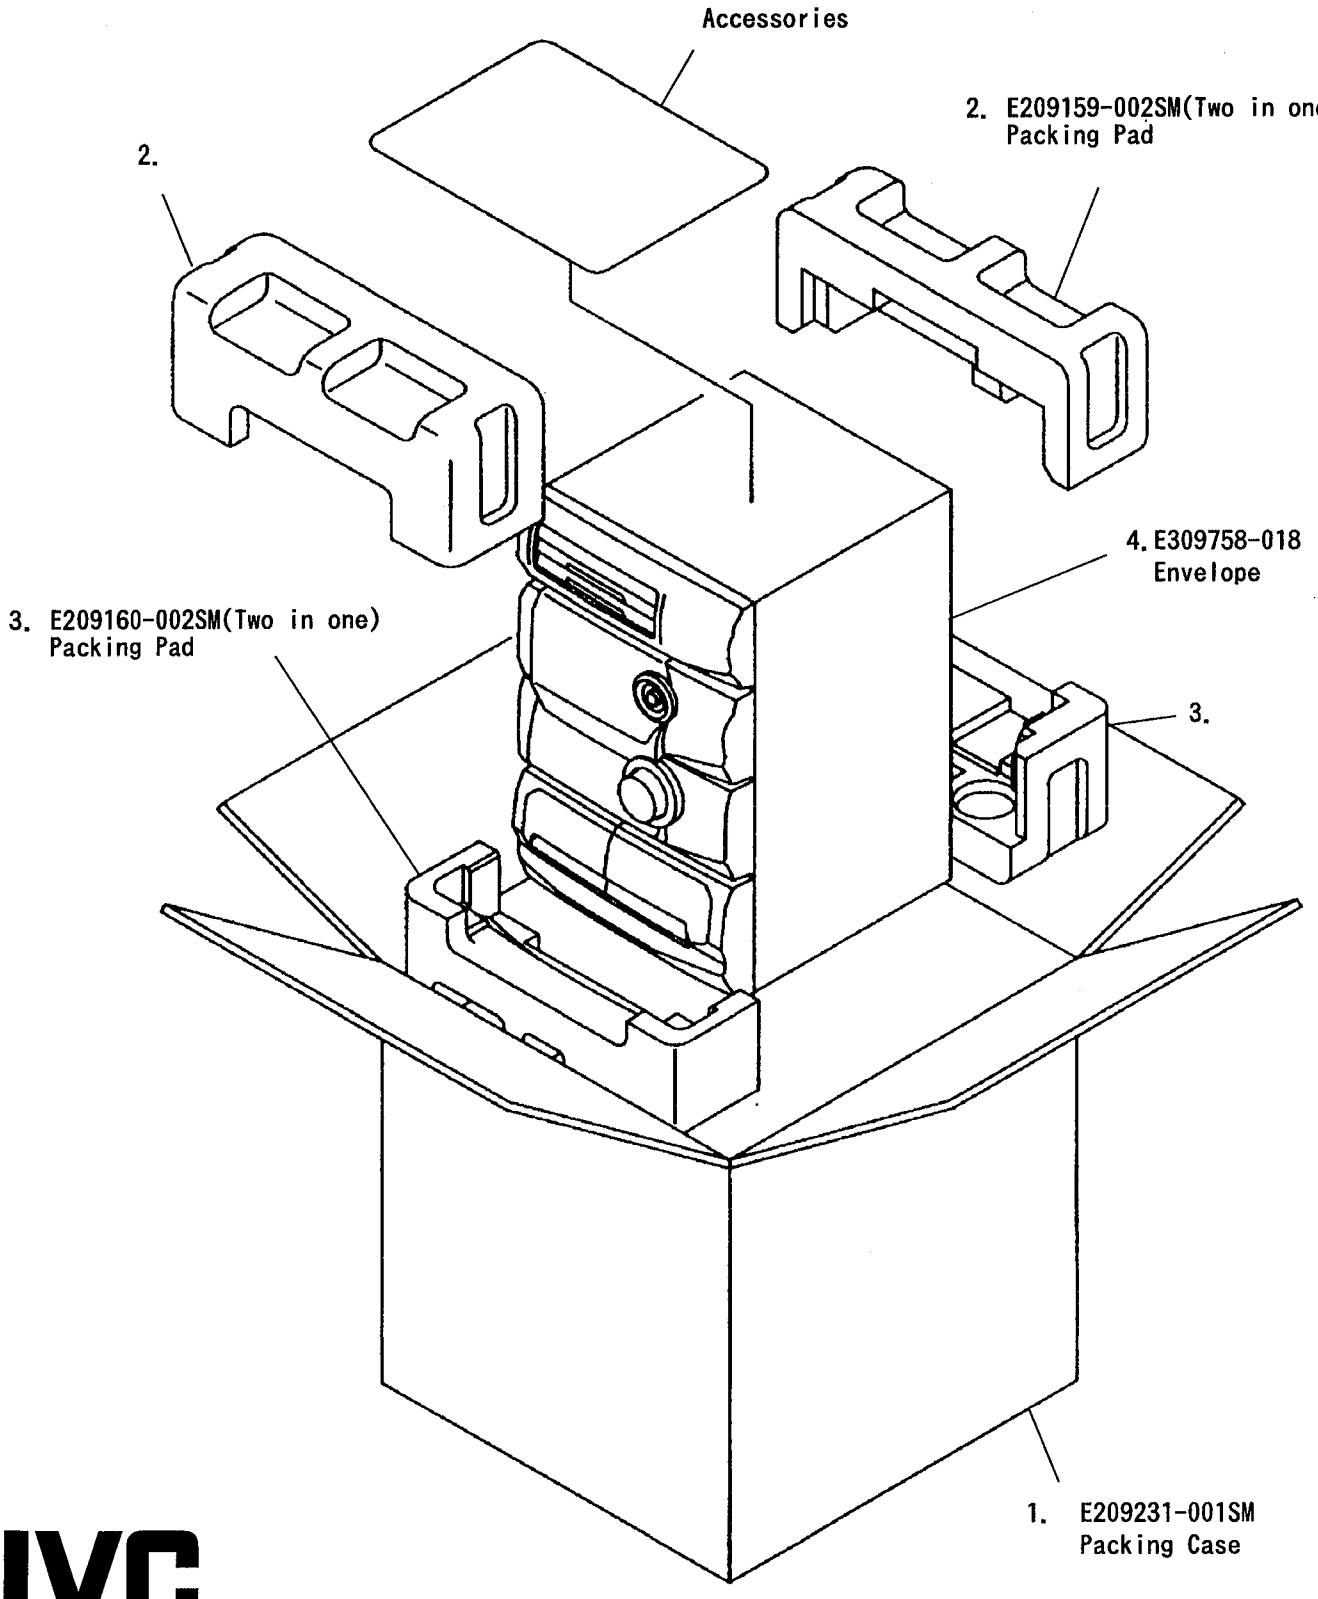

JVC
VICTOR COMPANY OF JAPAN, LIMITED
AUDIO DIVISION, YAMATO PLANT, 1644, SHIMOTURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, Japan

Printed in Japan
9704(V)